

LANTRONIX®



## SGX™ 5150 IoT Device Gateway Command Reference

Part Number 900-767-R  
Revision C January 2018

---

## Intellectual Property

© 2018 Lantronix, Inc. All rights reserved. No part of the contents of this publication may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

*Lantronix* is a registered trademark of Lantronix, Inc. in the United States and other countries. *DeviceInstaller* is a trademarks of Lantronix, Inc.

Patented: <http://patents.lantronix.com>; additional patents pending.

*Windows* is a registered trademark of Microsoft Corporation. *Wi-Fi* is registered trademark of Wi-Fi Alliance Corporation. All other trademarks and trade names are the property of their respective holders.

## Warranty

For details on the Lantronix warranty policy, please go to our web site at [www.lantronix.com/support/warranty](http://www.lantronix.com/support/warranty).

## Contacts

### Lantronix, Inc.

7535 Irvine Center Drive

Suite 100

Irvine, CA 92618, USA

Toll Free: 800-526-8766

Phone: 949-453-3990

Fax: 949-453-3995

Technical Support Online: [www.lantronix.com/support](http://www.lantronix.com/support)

### Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at [www.lantronix.com/about/contact](http://www.lantronix.com/about/contact).

## Disclaimer

All information contained herein is provided “AS IS.” **Lantronix undertakes no obligation to update the information in this publication.** Lantronix does not make, and specifically disclaims, all warranties of any kind (express, implied or otherwise) regarding title, non-infringement, fitness, quality, accuracy, completeness, usefulness, suitability or performance of the information provided herein. Lantronix shall have no liability whatsoever to any user for any damages, losses and causes of action (whether in contract or in tort or otherwise) in connection with the user’s access or usage of any of the information or content contained herein. **The information and specifications contained in this document are subject to change without notice.**

---

## Open Source Software

Some applications are Open Source software licensed under the Berkeley Software Distribution (BSD) license, the GNU General Public License (GPL) as published by the Free Software Foundation (FSF), and the Python Software Foundation (PSF) License Agreement for Python 2.7.6 (Python License). Lantronix grants you no right to receive source code to the Open Source software. Your use of each Open Source component or software is subject to the terms of the applicable license. The BSD license is available at <http://opensource.org/licenses>. The GNU General Public License is available at <http://www.gnu.org/licenses/>. The Python License is available at <https://www.python.org/download/releases/2.7/license/>. Your use of each Open Source component or software is subject to the terms of the applicable license.

wpa\_supplicant: [http://w1.fi/cgiit/hostap/plain/wpa\\_supplicant/README](http://w1.fi/cgiit/hostap/plain/wpa_supplicant/README)

Openssl : <http://openssl.org/source/license.html>

Busybox: <http://busybox.net/license.html>

Dropbear: <https://secure.ucc.asn.au/hg/dropbear/raw-file/tip/LICENSE>

VSFTPD: <https://security.appspot.com/vsftpd.html#about>

Bootstrap: <https://github.com/twbs/bootstrap/blob/master/LICENSE>

Python: <https://www.python.org/download/releases/2.7/license/>

Linux kernel version 3.10.0. <https://www.kernel.org/pub/linux/kernel/COPYING>

OPEN SOURCE SOFTWARE IS DISTRIBUTED WITHOUT ANY WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SEE THE APPLICABLE LICENSE AGREEMENT FOR ADDITIONAL INFORMATION.

## Revision History

Date	Rev.	Comments
October 2016	A	Initial document with firmware revision 8.0.0.0.
November 2016	B	Updated document to include firmware features of all models of the SGX 5150 IoT device gateway.
January 2018	C	Updated document to firmware revision 8.1.0.1R17.

---

# Table of Contents

Intellectual Property	2
Warranty	2
Contacts	2
Disclaimer	2
Open Source Software	3
Revision History	3
List of Figures	5
List of Tables	6
<b>1: About This Guide</b>	<b>7</b>
Chapter Summaries	7
Conventions	7
Additional Documentation	8
<b>2: Overview</b>	<b>9</b>
XML Architecture and Control	9
Command Line Interface	9
<b>3: Command Line Interface</b>	<b>10</b>
Configuration Using Telnet	10
Configuration Using the Serial Lines	10
Navigating the CLI Hierarchy	11
Using Keyboard Shortcuts and CLI	12
Understanding the CLI Level Hierarchy	12
<b>4: Configuration Using XML</b>	<b>15</b>
XML Configuration Record Document Type Definition	15
Quick Tour of XML Syntax	16
Record, Group, Item, and Value Tags	17
Importing and Exporting an XML Configuration File	19
Best Practices	19
XML Configuration Groups	20
XML Status Record Groups and Items	37
<b>5: Commands and Levels</b>	<b>51</b>

---

## List of Figures

Figure 3-2 CLI Level Hierarchy	13
Figure 3-3 Login Level Commands	14
Figure 3-4 Enable Level Commands	14
Figure 4-1 DTD for XCRs	15
Figure 4-2 XML Example	16
Figure 4-3 XML Example	17
Figure 4-4 XML Example of Multiple Named Values	17
Figure 4-5 XML Example of Multiple Items	18
Figure 4-6 XML Example with Multiple Groups	18

---

## List of Tables

Table 3-1 Keyboard Shortcuts	12
Table 4-7 XCR Groups	20
Table 4-8 XSR Group and Items	37
Table 5-1 Commands and Levels	59

# 1: About This Guide

This document describes how to configure the Lantronix® SGX™ 5150 IoT device gateway using the Command Line Interface (CLI) and/or Extensible Markup Language (XML). CLI provides an interactive mode for accessing the gateway configuration and management interface. It is most suited for system and network administrators comfortable with using similar interfaces on enterprise IT and networking products. It is also helpful as a quick tool for access via the product's serial ports or console/management ports. XML provides an extensible mode for software developers interfacing with the gateway and system integrators performing batch provisioning/updates.

## Chapter Summaries

This table lists and summarizes the content of each chapter.

Chapter	Summary
<a href="#">2: Overview</a>	Gives an overview of CLI and XML.
<a href="#">3: Command Line Interface</a>	Lists commands and describes how to use CLI to configure the SGX 5150 IoT device gateway.
<a href="#">4: Configuration Using XML</a>	Lists XML Configuration Record (XCR) groups and items and describes how to use XCRs to configure the SGX 5150 IoT device gateway.
<a href="#">5: Commands and Levels</a>	Provides an index of the CLI command hierarchy with hyperlinks to the corresponding command details.

## Conventions

The table below lists and describes the conventions used in this book.

Convention	Description
<b>Bold text</b>	Default parameters
<i>Italic text</i>	Required values for parameters.
<b>Square Brackets [ ]</b>	Optional parameters.
<b>Angle Brackets &lt; &gt;</b>	Possible values for parameters.
<b>Pipe  </b>	Choice of parameters.
<b>Warning</b>	<b>Warning:</b> Means that you are in a situation that could cause equipment damage or bodily injury. Before you work on any equipment, you must be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.
<b>Note</b>	<b>Note:</b> Means take notice. Notes contain helpful suggestions, information, or references to material not covered in the publication.
<b>Caution</b>	<b>Caution:</b> Means you might do something that could result in faulty equipment operation or loss of data.
<b>Screen Font</b>	CLI terminal sessions and examples of CLI input are depicted in <code>courier new</code> font.

## Additional Documentation

Visit the Lantronix website at [www.Lantronix.com/support/documentation](http://www.Lantronix.com/support/documentation) for all latest Lantronix documentation which includes the latest versions of the SGX 5150 IoT device gateway-related documentation listed below.

<b>Document</b>	<b>Description</b>
<b><i>SGX 5150 IoT Device Gateway User Guide</i></b>	Describes how to configure and use the SGX 5150 IoT device gateway.
<b><i>SGX 5150 IoT Device Gateway Product Brief</i></b>	Provides key feature, SKU option, technical specifications, and order information about the SGX 5150 IoT device gateway.
<b><i>Com Port Redirector Quick Start and Online Help</i></b>	Instructions for using the Lantronix Windows® operating system (OS) -based utility to create virtual com ports.
<b><i>DeviceInstaller Online Help</i></b>	Instructions for using the Lantronix Windows OS-based utility to locate and view the current settings of the SGX 5150 IoT device gateway.



## 2: Overview

The SGX 5150 IoT device gateway supports three convenient configuration methods: Web Manager, CLI, and XML. For more information about Web Manager, see the *SGX 5150 IoT Device Gateway User Guide* available at [www.Lantronix.com/support/documentation](http://www.Lantronix.com/support/documentation).

### XML Architecture and Control

XML is a fundamental building block for Machine-to-Machine (M2M) and Internet of Things (IoT) networks. The SGX 5150 IoT device gateway supports XML configuration records that make configuring the SGX 5150 unit easy for users and administrators. XML configuration records are easy to edit with a standard text editor or an XML editor.

For a brief overview of XML, see [4: Configuration Using XML](#). It provides guidelines for basic XML syntax, the specific XML tags used, and XML configuration records.

### Command Line Interface

Making the edge-to-enterprise vision a reality, the SGX 5150 IoT device gateway uses industry-standard tools for configuration, communication, and control. For example, the SGX 5150 IoT device gateway uses a command line interface (CLI) whose syntax is very similar to that used by data center equipment such as routers and hubs.

For details of the CLI, see [5: Commands and Levels](#). It provides an index of the CLI Command Hierarchy with links to the corresponding command details. The CLI provides commands for configuring, monitoring, and controlling the SGX 5150 IoT device gateway.

## 3: Command Line Interface

This chapter describes accessing the SGX 5150 IoT device gateway by using Telnet, SSH, or serial ports to configure the gateway, navigating the CLI, typing keyboard shortcuts, and moving between the levels.

It contains the following sections:

- ◆ [Configuration Using Telnet](#)
- ◆ [Configuration Using the Serial Lines](#)
- ◆ [Navigating the CLI Hierarchy](#)
- ◆ [Using Keyboard Shortcuts and CLI](#)
- ◆ [Understanding the CLI Level Hierarchy](#)

Refer to [Chapter 5: Commands and Levels](#) for a complete list of levels, commands, and descriptions.

### Configuration Using Telnet

To access and configure the SGX 5150 IoT device gateway by using a Telnet session over the network, you must first establish a Telnet connection. You can also establish a Telnet connection by clicking the Telnet Configuration tab in the Lantronix® DeviceInstaller™ utility. See the DeviceInstaller Online Help for more information.

To access the SGX 5150 IoT device gateway by using Telnet, perform the following steps.

1. Click **Start > Run**. The Run dialog box displays.
2. Type `cmd` in the dialog box and press **OK**.
3. Type `telnet x.x.x.x` (`x.x.x.x` is the IP address) in a Windows/Linux command prompt.
4. The SGX 5150 IoT device gateway is online when the command prompt (`>`) displays. You are at the root level of the CLI.

**Note:** Depending on the level of security, a password may be required.

### Configuration Using the Serial Lines

#### Serial Command Mode

The serial port can be configured to operate in command mode permanently or to be triggered under specified conditions. See the line `<line>` Level command description for more information.

#### Serial Recovery

Serial Recovery mode will temporarily override line settings for the serial line to allow configuration changes to be made. Line settings will be restored once the user exits the Serial Recovery mode CLI.

**To configure the SGX 5150 IoT device gateway locally using a serial port:**

1. Connect a terminal or a PC running a terminal emulation program to one of the gateway's serial ports.
2. Configure the terminal to the following settings:
  - ◆ 9600 baud
  - ◆ 8-bit
  - ◆ No parity
  - ◆ 1 stop bit
  - ◆ No flow control.
3. Power off the gateway.
4. Press and hold down the exclamation point (!) key.
5. Power on the gateway. After about 10 seconds, the exclamation point will display on the terminal or PC screen.
6. Type `xyz` within 5 seconds to display the CLI prompt.

## Navigating the CLI Hierarchy

The CLI is organized into a hierarchy of levels. Each level has a group of commands for a specific purpose. For example, to configure a setting for the FTP server, one would navigate to the FTP level, which is under the configuration level.

- ◆ To move to a different level—Enter the name of the level from within its parent level. For example, to enter the line level, type `line <number>` at the enable prompt. This displays: `<enable> line <number>#`.
- ◆ To exit and return to one level higher—Type `exit` and press the **Enter** key. Typing `exit` at the login level or the enable level will close the CLI session.
- ◆ To view the current configuration at any level—Type `show`.
- ◆ To view the list of commands available at the current level—Type the question mark "?". Items within `< >` (e.g. `<string>`) are required parameters.
- ◆ To view the available commands and explanations—Type the asterisk (\*).
- ◆ To view the list of commands available for a partial command—Type the partial command followed by the question mark "?". For example: `<line 1>#show?` displays a list of all show commands at the line level.
- ◆ To view available commands and their explanations for a partial command—Type the partial command followed by the asterisk (\*). For example: `<line 1>#show*` displays a list of all show commands and descriptions at the line level.
- ◆ To view the last 20 commands entered at the CLI—Type `show history`.

## Using Keyboard Shortcuts and CLI

One useful shortcut built into the SGX 5150 IoT device gateway is that the complete text of a command does not have to be entered to issue a command. Typing just enough characters to uniquely identify a command, then hitting enter, can be used as a short cut for a command. For example, at the enable level, "sh" can be used for the "show" command.

Tab Completion is also available using the **Tab** and **Enter** keys on the keyboard. Typing the first few characters of a command, then hitting the **Tab** key displays the first command that begins with those characters. Hitting the **Tab** key again displays the next command that begins with the original characters typed. You can press **Enter** to execute the command or you can backspace to edit any parameters.

The following key combinations are allowed when configuring the gateway using the CLI:

**Table 3-1 Keyboard Shortcuts**

Key Combination	Description
<b>Ctrl + a</b>	Places cursor at the beginning of a line
<b>Ctrl + b</b>	Backspaces one character
<b>Ctrl + d</b>	Deletes one character
<b>Ctrl + e</b>	Places cursor at the end of the line
<b>Ctrl + f</b>	Moves cursor forward one character
<b>Ctrl + k</b>	Deletes from the current position to the end of the line
<b>Ctrl + l</b>	Redraws the command line
<b>Ctrl + n</b>	Displays the next line in the history
<b>Ctrl + p</b>	Displays the previous line in the history
<b>Ctrl + u</b>	Deletes entire line and places cursor at start of prompt
<b>Ctrl + w</b>	Deletes one word back
<b>Ctrl + z</b>	Exits the current CLI level
<b>Esc + b</b>	Moves cursor back one word
<b>Esc + f</b>	Moves cursor forward one word


## Understanding the CLI Level Hierarchy

The CLI hierarchy is a series of levels. Arranging commands in a hierarchy of levels provides a way to organize and group similar commands, provide different levels of security, and reduce the complexity and number commands and options presented to a user at one time.

When you start a command line session, you begin at the login level. This level can be password protected and provides access to high level status, a few diagnostic commands, and the enable level. Further gateway information and configuration are accessed via the enable level.

The enable level can also be password protected and is the gateway to full configuration and management of the intelligent gateway. There are commands for gathering and effecting all elements of gateway status and configuration, as well as commands that take you to additional levels. For instance, network specific status and configuration commands are found under the "configuration" level.

An overview of the levels in the SGX 5150 IoT device gateway is presented in [Figure 3-2 CLI Level Hierarchy](#).

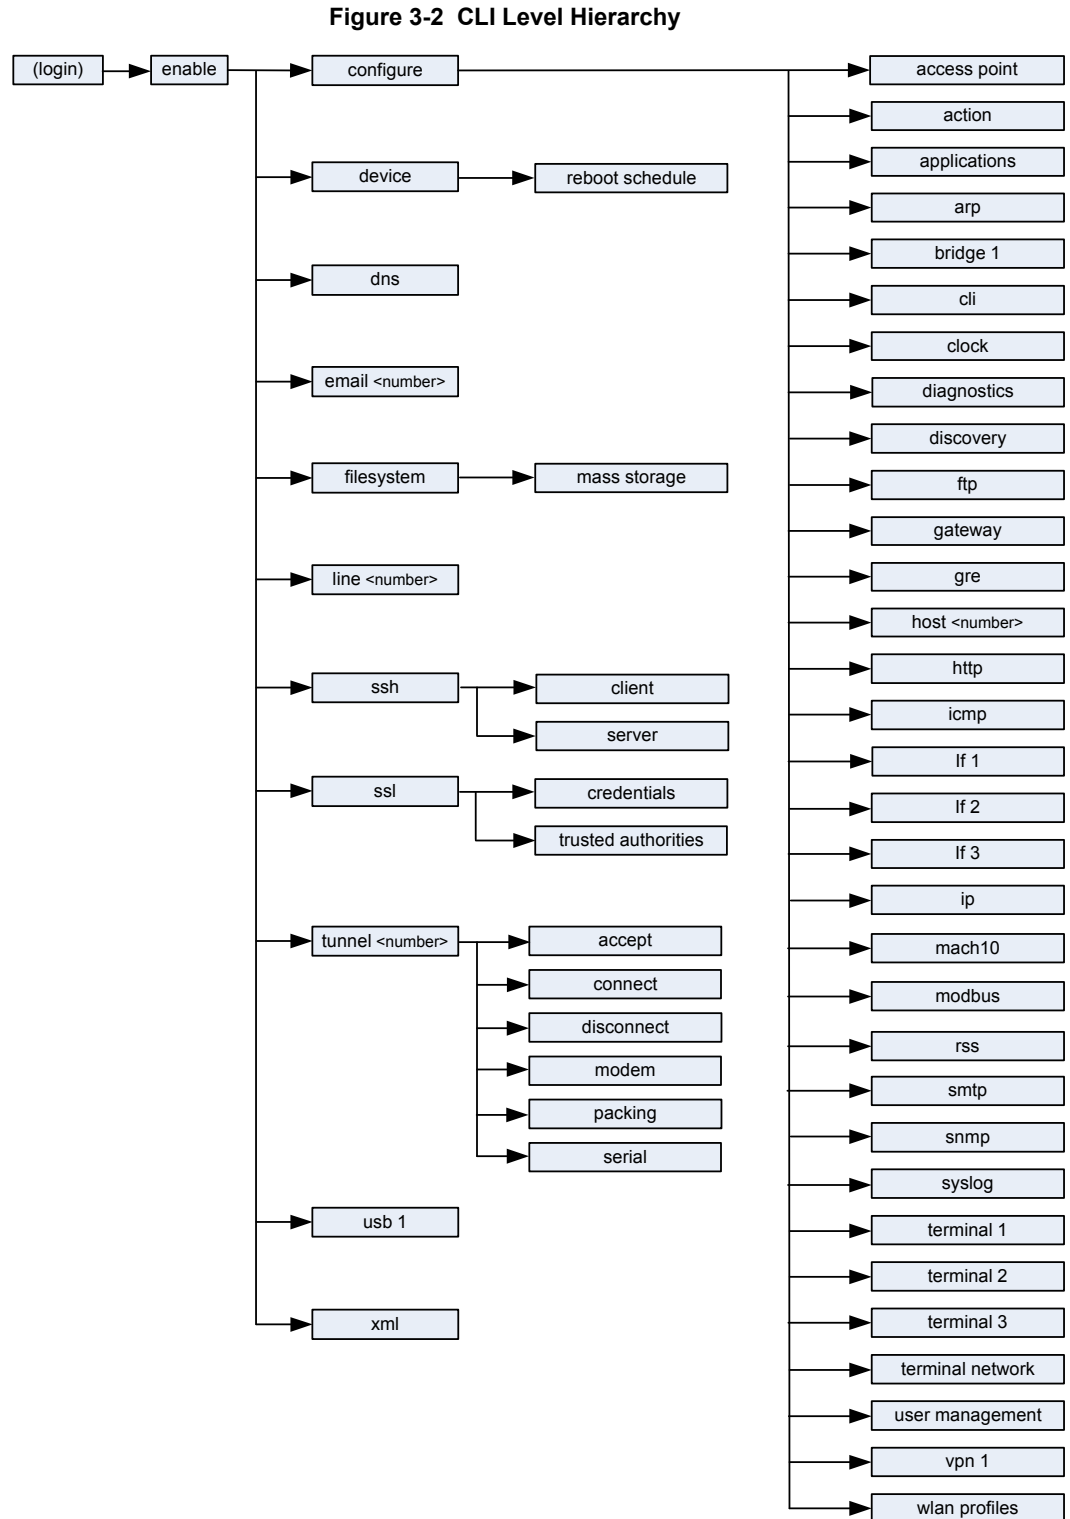

Commands at the login level (see [Figure 3-3 Login Level Commands](#) below) do not affect current configuration settings and are not displayed initially. If you type `?`, you will see the login subcommands. These commands provide diagnostic and status information only.

**Figure 3-3 Login Level Commands**

```
admin@SGX5150-0080a3b028b6>?
clrscrn                               exit
iperf <params>                        ping <host>
ping <host> <count>                   ping <host> <count> <timeout>
ping6 <host>                          ping6 <host> <count>
ping6 <host> <count> <timeout>       show
show history                          show multicast routes
show routes                           show rules
tcpdump <parameters>                trace route <host>
trace route <host> <protocol>        enable

admin@SGX5150-0080a3b028b6>
```

**Note:** To configure the SGX 5150 IoT device gateway, you must be in the enable level and any of its sub-levels. [Figure 3-4 Enable Level Commands](#) below shows the enable level commands.

**Figure 3-4 Enable Level Commands**

```
admin@SGX5150-0080a3b028b6(enable)#
admin@SGX5150-0080a3b028b6(enable)#?
auto show interfaces                  auto show processes
clrscrn                              configure
connect                              connect line <line>
device                               disable
dns                                  email <number>
exit                                  filesystem
iperf <params>                       kill ssh <session>
kill telnet <session>                line <line>
ping <host>                          ping <host> <count>
ping <host> <count> <timeout>        ping6 <host>
ping6 <host> <count>                ping6 <host> <count> <timeout>
reload                               reload factory defaults
show                                  show history
show interfaces                      show ip sockets
show multicast routes               show processes
show routes                         show rules
show sessions                       ssh
ssh <optClientUsername> <host>      ssh <optClientUsername> <host> <po
ssl                                  tcpdump <parameters>
telnet <host>                        telnet <host> <port>
trace route <host>                  trace route <host> <protocol>
tunnel <line>                        usb <line>
write                                 xml

admin@SGX5150-0080a3b028b6(enable)#
```

See the [Chapter 5: Commands and Levels](#) at the end of this document for a complete list of levels, commands, and descriptions.

## 4: Configuration Using XML

The SGX 5150 IoT device gateway provides an XML interface that you can use to configure SGX 5150 IoT device gateways. Every configuration setting that can be issued from the gateway's Web Manager interface and CLI can be specified using XML.

The SGX 5150 IoT device gateway can import and export configuration settings as an XML document known as an XML Configuration Record (XCR). An XCR can be imported or exported via the CLI, a Web browser, or FTP. An XCR can contain many configuration settings or just a few. For example, it might change all of the configurable parameters for a SGX 5150 IoT device gateway, or it may only change the baud rate for a single serial line. Using XCRs is a straightforward and flexible way to manage the configuration of multiple SGX 5150 IoT device gateways.

### XML Configuration Record Document Type Definition

An XML document type definition (DTD) is a description of the structure and content of an XML document. It verifies that a document is valid. XCRs are exported using the DTD as shown in [Figure 4-1 DTD for XCRs](#).

Figure 4-1 DTD for XCRs

```
<!DOCTYPE configrecord [  
<!ELEMENT configrecord (configgroup+)>  
<!ELEMENT configgroup (configitem+,configgroup*)>  
<!ELEMENT configitem (value+)>  
<!ELEMENT value (#PCDATA)>  
<!ATTLIST configrecord version CDATA #IMPLIED>  
<!ATTLIST configgroup name CDATA #IMPLIED>  
<!ATTLIST configgroup instance CDATA #IMPLIED>  
<!ATTLIST configitem name CDATA #IMPLIED>  
<!ATTLIST value name CDATA #IMPLIED>  

```

The SGX 5150 DTD rules state the following:

- ◆ The XML document element is a `<configrecord>` element. This is the root element.
- ◆ A `<configrecord>` must have one or more `<configgroup>` elements and can have a `version` attribute.
- ◆ A `<configgroup>` must have one or more `<configitem>` elements and can have `name` and `instance` attributes.
- ◆ A `<configitem>` element must have one or more `<value>` elements and can have a `name` attribute.
- ◆ A `<value>` element can have only data and can have a `name` attribute.
- ◆ The `name` attribute identifies a group, item, or value. It is always a quoted string.
- ◆ The `instance` attribute identifies the specific option, like the serial port number. The "instance" attribute is always a quoted string.

**Notes:**

- ◆ The name for each `<configgroup>` (specified with the `name` attribute) is the group name listed in the Web Manager XCR groups or with the "xcr list" CLI command. See the *SGX 5150 IoT Device Gateway User Guide* (available at [www.Lantronix.com/support/documentation](http://www.Lantronix.com/support/documentation)) for more information about the XCR groups.
- ◆ An empty or missing `<value>` element in each present `<configgroup>` clears the setting to its default.

## Quick Tour of XML Syntax

### Declaration

The first line, `<?xml version="1.0" standalone="yes"?>`, is called the XML declaration. It is required and indicates the XML version in use (normally version 1.0). The remainder of the file consists of nested XML elements, some of which have attributes and content.

### Element Start and End Tags

An element typically consists of two tags: start tag and an end tag that surrounds text and other elements (element content). The start tag consists of a name surrounded by angle brackets, for example `<configrecord>`. The end tag consists of the same name surrounded by angle brackets, but with a forward slash preceding the name, for example `</configrecord>`. The element content can also contain other "child" elements.

### Element Attributes

The XML element attributes that are name-value pairs included in the start tag after the element name. The values must always be quoted, using single or double quotes. Each attribute name should appear only once in an element.

[Figure 4-2 XML Example](#) shows an XML example which consists of a declaration (first line), nested elements with attributes and content.

**Figure 4-2 XML Example**

```
<configrecord version="0.1.0.0T0">
  <configgroup name = "diagnostics">
    <configitem name = "log">
      <value name="output">Disable</value>
    </configitem>
  </configgroup>
</configrecord>
```

The SGX 5150 IoT device gateway uses the attributes in the following subsections to label the group configuration settings.



## Record, Group, Item, and Value Tags

A `<configgroup>` is a logical grouping of configuration parameters and must contain one or more `<configitem>` elements. It must have a name attribute and may have an instance attribute.

A `<configitem>` is a specific grouping of configuration parameters relevant to its parent group. An item takes the name attribute and must contain one or more value elements. For example, the line group might have parameters such as baud rate, data bits, and parity.

A value may specify the value of a configuration parameter. It may contain the name attribute. In this example, a value of 9600 might be specified for baud rate; 7 may be specified for data bits, and even may be specified for parity.

A name attribute identifies the group, item, or value. It is always quoted (as are all XML attributes). For example, a group that contains serial port parameters has the name "line".

An instance attribute identifies which of several instances is being addressed. It is always quoted. For example, the serial port name (in the line configgroup) has the instance "1" to indicate serial port 1 or "2" to specify serial port 2..

The following figures show examples of XML configuration records and the use of the `<configrecord>`, `<configgroup>`, `<configitem>`, and `<value>` XML elements.

**Figure 4-3 XML Example**

```
<configrecord version="0.1.0.0T0">
  <configgroup name = "diagnostics">
    <configitem name = "log">
      <value name="output">Disable</value>
    </configitem>
  </configgroup>
</configrecord>
```

**Figure 4-4 XML Example of Multiple Named Values**

```
<configrecord version="0.1.0.0T0">
  <configgroup name="xml import control">
    <configitem name="restore factory configuration">
      <value>disable</value>
    </configitem>
    <configitem name="delete http authentication uris">
      <value>disable</value>
    </configitem>
    <configitem name="http authentication uri delete">
      <value name="name"/>
    </configitem>
    <configitem name="reboot">
      <value>disable</value>
    </configitem>
  </configgroup>
```

**Figure 4-5 XML Example of Multiple Items**

```

<configrecord version="0.1.0.0T0">
  <configgroup name="device">
    <configitem name="short name">
      <value>sgx5150</value>
    </configitem>
    <configitem name="long name">
      <value>Lantronix SGX5150</value>
    </configitem>
    <configitem name="serial number">
      <value>0080A3946149</value>
    </configitem>
  </configitem><configitem name="firmware version">
    <value>8.1.0.1R16</value>
  </configitem><configitem name="lantronix iot gateway os version">
    <value>1.0</value>
  </configitem>
</configgroup>

```

**Figure 4-6 XML Example with Multiple Groups**

```

<configrecord version="0.1.0.0T0">
  <configgroup name="diagnostics">
    <configitem name="log">
      <value name="output">Disable</value>
    </configitem>
  </configgroup>
  <configgroup name="discovery">
    <configitem name="state">
      <value>enable</value>
    </configitem>
    <configitem name="upnp state">
      <value>enable</value>
    </configitem>
    <configitem name="upnp port">
      <value>30179</value>
    </configitem>
  </configgroup>
  <configgroup name="ethernet" instance="eth0">
    <configitem name="speed">
      <value>Auto</value>
    </configitem>
    <configitem name="duplex">
      <value>Auto</value>
    </configitem>
  </configgroup>
  <configgroup name="ftp server">
    <configitem name="state">
      <value>enable</value>
    </configitem>
  </configgroup>

```

## Importing and Exporting an XML Configuration File

An XCR can be imported or exported using the following methods:

- ◆ **CLI**  
XCRs can be imported (captured) or exported (dumped) directly to a Telnet, SSH, or serial line CLI session. Capturing an XCR can be started by pasting a valid XCR directly into the CLI prompt. The SGX 5150 IoT device gateway immediately processes the configuration record, changing any settings specified. This can be done on any level, including the root. Special tags in the XML allow for providing root and enable level passwords so that this can also be done at the password prompt.
- ◆ **Web Browser**  
Web Manager can be used to import and export an XCR from an external source such as your local hard drive.
- ◆ **FTP**  
The SGX 5150 IoT device gateway FTP server can export and import XCRs when an FTP get or put command on the filename (`sgx5150.xcr` for export, `sgx5150_import.xcr` for import; both are under the **pwxc** directory) is requested. On export (FTP get of `sgx5150.xcr`), the FTP server obtains the current XCR from the SGX 5150 IoT device gateway and sends it as a file. On import (FTP put of `sgx5150_import.xcr`), the FTP server processes the file by sending it directly to the XML engine. In both cases the SGX 5150 file system is not accessed. The files `sgx5150.xcr` and `sgx5150_import.xcr` are not read from or written to the file system. See the FTP section in the *SGX 5150 IoT Device Gateway User Guide* (available at [www.Lantronix.com/support/documentation](http://www.Lantronix.com/support/documentation).)

## Best Practices

You can import or export an entire XCR, or just a portion of it, by specifying the group name and/or group instances. In the examples below, import and export operations are performed from the Web. See [Importing and Exporting an XML Configuration File](#) above to import and export using Web Manager, the CLI or FTP.

**Caution:** *Using Microsoft Word to edit and save an XCR will change the format of the file and make it incompatible with the SGX 5150 IoT device gateway. This is true even if the file is saved as Plain Text (.txt) or an XML Document (.xml). Notepad, a third party text editor, or a specialized XML editor should be used instead.*

### Exporting

Using the Web Manager interface, select from "Lines to Export" and "Groups to Export" filters and select from either "Export to Browser" or "Download (from link)" option. Save the output to your local file system.

### Importing

Modify the exported file by removing "configgroup" records and filling in any required secret data such as passwords, and private keys. Using the Web Manager, import the updated clone by uploading it from your local file system.

## XML Configuration Groups

*Table 4-7* lists the supported SGX 5150 XML configuration record (XCR) groups, items, and possible value names and options in alphabetical order.

**Note:** Any instance of `< >` in the table may be read as "less than" and any instance of `< >` may be read as "greater than".

**Table 4-7 XCR Groups**

Group Name	Group Item	Value Name	Value Options	Additional Info
access point	state		enable, disable	
	multicast forwarding			
	channel selection			
	channel			
	ip address			
	network name			
	suite			
	passphrase			
	dns redirect			
action attribute of an "instance" is "eth0 link state change", "on scheduled reboot", "usb0 link state change", "wlan0 link state change"	delay			
	email	alarm email		
		alarm message		
		alarm reminder interval		
		normal email		
		normal message		
		normal reminder interval		
	ftp put	reminder interval		
		mode		
		connection 1 host		
		connection 1 port		
		connection 1 filename		
		connection 1 protocol		
		connection 1 username		
		connection 1 password		
		connection 1 local port		
	connection 2 host			

Group Name	Group Item	Value Name	Value Options	Additional Info	
action attribute of an "instance" is "eth0 link state change", "on scheduled reboot", "usb0 link state change", "wlan0 link state change" (continued)	ftp put (continued)	connection 2 port			
		connection 2 filename			
		connection 2 protocol			
		connection 2 username			
		connection 2 password			
		connection 2 local port			
	http post		reminder interval		
			mode		
			connection 1 host		
			connection 1 port		
			connection 1 url		
			connection 1 protocol		
			connection 1 username		
			connection 1 password		
			connection 1 local port		
			connection 2 host		
			connection 2 port		
			connection 2 url		
			connection 2 protocol		
			connection 2 username		
	connection 2 password				
	connection 2 local port				
	snmp trap		state		
			reminder interval		
			alarm message		
			normal message		

Group Name	Group Item	Value Name	Value Options	Additional Info	
applications	reserved start port				
	reserved port				
	python (Attribute of an instance is a number.)	state			
		filename			
		parameters			
		output			
		onstart			
onshutdown					
arp	arp delete	ip address			
	arp entry	ip address			
		mac address			
bridge ("Instance" attribute is "br0")	state		enable, disable		
	transparent mode				
	network access for gateway				
	bridging mac address				
	bridging ip address		&#60;control&#62		
	auto detect ip address				
	bridging ipv6 address		&#60;control&#62		
	bridging initial scan interval				
	bridging scan interval				
	ethernet interface				
cli	enable level password				
	quit connect line		&#60;control&#62		
	inactivity timeout				
	line authentication		enable, disable		
clock time and zone	time zone	zone			
		offset			
	time set	hours			
		minutes			
		seconds			
		day of month			
		month			
		year			

Group Name	Group Item	Value Name	Value Options	Additional Info
clock	synchronization method		manual, SNTP	
	ntp	server (0.pool.ntp.org)		
device	short name			
	long name			
	serial number			
	firmware version			
	configuration version			
	lantronix iot gateway os version			
dhcp server	state			
	ipv6 state			
	start ip address			
	start ipv6 address			
	end ip address			
	end ipv6 address			
	lease time			
	static leases (Attribute of an instance is a number.)	mac address		
	ip address			
	ipv6 address			
diagnostics	log	output		
		max length		
discovery	state		enable, disable	
	upnp state		enable, disable	
	upnp port			
email (Attribute of an instance is a number.)	to			
	cc			
	reply to			
	subject			
	message file			
	priority			
ethernet (“Instance” attribute is “eth0”)	speed			
	duplex			
filesystem	mass storage	usb auto mount		

Group Name	Group Item	Value Name	Value Options	Additional Info	
ftp server	state		enable, disable		
	port				
	data port				
	passive mode start port		&#60;Random&#62; ;		
	passive mode ports		&#60;Random&#62; ;		
gateway	wan	operating mode			
		firewall			
		mac address filter			
		wan interface			
		router ip address			
		router ipv6 address			
		primary dns			
		secondary dns			
	port forwarding (Attribute of an instance is a number.)	state			
		friendly name			
		port or range			
		target port			
		protocol			
		ingress ip address			
		ip address			
	static routes (Attribute of an instance is a number.)	state			
		network			
		gateway			
		metric			
		interface			
friendly name					
gre	name				
	state		enable, disable		
	ip address				
	mtu				
	local network				
	remote host				
	remote network				
host (Attribute of an instance is a number.)	name				
	protocol				
	ssh username				
	remote address				
	remote port				



Group Name	Group Item	Value Name	Value Options	Additional Info
http authentication uri	user delete	name		
	realm			
	type	digest		
	user (Attribute of an instance is "admin".)	password		
http server	state		enable, disable	
	port			
	https state		enable, disable	
	secure port			
	secure protocols		TLS1.0, TLS1.1, TLS1.2	
	secure credentials			
	max timeout			
	max bytes			
	logging state		enable, disable	
	max log entries			
	log format			
	authentication timeout			
icmp	state		enable, disable	
input filters (Attribute of an instance is a number.)	mac filter (attribute of an instance is a number)	mac address		
		action		

Group Name	Group Item	Value Name	Value Options	Additional Info
interface ("Instance" attributes are "eth0", "usb0", and "wlan0")	state		enable, disable	
	ipv4 state		enable, disable	
	dhcp		disable, enable	
	priority			
	ip address		&#60;None&#62;	
	default gateway		&#60;None&#62;	
	ipv6 state		enable, disable	
	ipv6 dhcp		enable, disable	
	ipv6 auto configure		enable, disable	
	ipv6 address		&#60;None&#62;	
	ipv6 default gateway		&#60;None&#62;	
	ipv6 domain			
	ipv6 primary dns		&#60;None&#62;	
	ipv6 secondary dns		&#60;None&#62;	
	hostname			
	domain			
	dhcp client id			
	primary dns		&#60;None&#62;	
	secondary dns		&#60;None&#62;	
	mtu			
ip	ip time to live			
	multicast time to live			
line (Attribute of an instance is a number.)	name			
	state		enable, disable	
	protocol			
	baud rate			
	parity			
	data bits			
	stop bits			
	flow control			
	xon char		&#60;None&#62;	
	xoff char		&#60;None&#62;	
	gap timer		&#60;None&#62;	
	threshold			

Group Name	Group Item	Value Name	Value Options	Additional Info
mach10 line (Attribute of an instance is a number.)	state			
	project tag			
	command delimiter			
	status update interval			
	content check interval			
	local port		&#60;None&#62;	
mach10	state			
	host			
	port			
	secure port			
	validate certificates			
	local port		&#60;None&#62;	
	mqtt state			
	mqtt host			
	mqtt port			
	mqtt security			
	mqtt local port			
	device id			
	device key			
	device name			
	device description			
	status update interval			
	content check interval			
	apply firmware updates			
	apply configuration updates			
	reboot after update			
modbus	tcp server state		enable, disable	
	additional port		&#60;None&#62;	
	response timeout			
	rss	trace input	enable, disable	

Group Name	Group Item	Value Name	Value Options	Additional Info	
network failover (Attribute of an instance is "eth0", "usb0", and "wlan0".)	state		enable, disable		
	hostname				
	method				
	timeout				
	interval				
	failover threshold				
	failback threshold				
	failover interface				
qos (Attribute of an instance is "eth0", "usb0", and "wlan0".)	state		enable, disable		
	import filters		enable, disable		
	uplink data speed				
	filter (Attribute of an instance is a number.)	mac address			
		network			
		ports			
priority					
reboot schedule	state		enable, disable		
	schedule				
	hours				
	minutes				
	interval				
	unit				
routing protocols	rip	state			
		version			
		update interval			
		timeout interval			
		gc interval			
	ospf	state			
		hello interval			
		dead interval			
rss	feed				
	persist				
	max entries				
serial command mode (Attribute of an instance is a number.)	mode		enable, disable		
	echo serial string		enable, disable		
	serial string				
	signon message				
	wait time				

Group Name	Group Item	Value Name	Value Options	Additional Info	
smtp	from address				
	server address				
	server port				
	username				
	password				
	overriding domain				
	local port		&#60;None&#62;		
snmp	snmpd	state			
		port			
		version			
		read community			
		write community			
		username			
		security			
		authentication protocol			
		authentication password			
		privacy protocol			
		privacy password			
		system contact			
		system name			
	system description				
	system location				
	traps	community			
		primary destination port			
		primary destination			
		secondary destination			
		secondary destination port			
		version			
		username			
		security			
		authentication protocol			
		authentication password			
		privacy protocol			
		privacy password			

Group Name	Group Item	Value Name	Value Options	Additional Info	
ssh client	delete known hosts		enable, disable		
	known host delete	name			
	known host	public rsa key			
		public dsa key			
	delete client users		enable, disable		
	client user delete	name			
	client user	password			
		remote command			
		public rsa key			
		private rsa key			
		public dsa key			
ssh server	host rsa keys	public key			
		private key			
	host dsa keys	public key			
		private key			
	delete authorized users		enable, disable		
	authorized user delete	name			
	authorized user	password			
public rsa key					
public dsa key					
ssh	state		enable, disable		
	port				
	max sessions				

Group Name	Group Item	Value Name	Value Options	Additional Info
ssl	credentials	rsa certificate		
		rsa certificate type		
		rsa pfx password		
		rsa private key		
		rsa private key type		
		rsa private key pfx password		
		dsa certificate		
		dsa certificate type		
		dsa pfx password		
		dsa private key		
		dsa private key type		
		dsa private key pfx password		
		credential type		
	trusted authority	certificate		
		certificate type		
		pfx password		
	intermediate authority	certificate		
		certificate type		
		pfx password		
	delete all credentials		enable, disable	
delete all cas		enable, disable		
syslog	state		enable, disable	
	host			
	remote port			
	local port		&#60;None&#62;	
	severity log level			
telnet	state		enable, disable	
	port			
	max sessions			
	authentication		enable, disable	
terminal (“Instance” attribute is a number or “network”)	terminal type			
	login connect menu		enable, disable	
	exit connect menu		enable, disable	
	send break		&#60;None&#62;	
	break duration			
	echo		enable, disable	

Group Name	Group Item	Value Name	Value Options	Additional Info	
tunnel accept (Attribute of an instance is a number.)	accept mode				
	local port				
	protocol				
	credentials				
	tcp keep alive				
	tcp keep alive interval				
	tcp keep alive probes				
	aes encrypt key				
	aes decrypt key				
	initial send				
	start character		&#60;None&#62;		
	flush start character		enable, disable		
	flush serial		enable, disable		
	block serial		enable, disable		
	block network		enable, disable		
	password	password			
		prompt			
	email connect		&#60;None&#62;		
	email disconnect		&#60;None&#62;		



Group Name	Group Item	Value Name	Value Options	Additional Info	
tunnel connect (Attribute of an instance is a number.)	connect mode		enable, disable		
	start character		&#60;control&#62;B		
	flush start character		enable, disable		
	local port		&#60;Random&#62; ;		
	host (Attribute of an instance is a number.)	address			
		port			
		protocol			
		ssh username			
		credentials			
		validate certificate			
		tcp user timeout			
		tcp keep alive			
		tcp keep alive interval			
		tcp keep alive probes			
		aes encrypt key			
		aes decrypt key			
		initial send			
	host mode				
	reconnect time				
	flush serial				
block serial					
block network					
email connect					
email disconnect					
tunnel disconnect (Attribute of an instance is a number.)	stop character		&#60;None&#62;		
	flush stop character		enable, disable		
	modem control		enable, disable		
	timeout				
	flush serial		enable, disable		

Group Name	Group Item	Value Name	Value Options	Additional Info	
tunnel modem (Attribute of an instance is a number.)	echo pluses		enable, disable		
	echo commands		enable, disable		
	verbose response		enable disable		
	response type				
	error unknown commands		enabled, disabled		
	incoming connection				
	connect string				
	display remote ip		enable, disable		
tunnel packing (Attribute of an instance is a number.)	packing mode		enable, disable		
	timeout				
	threshold				
	send character		&#60;Control&#62;		
	trailing character		&#60;None&#62;		
tunnel serial (Attribute of an instance is a number.)	dtr		&#60;None&#62;		
usb line (Attribute of an instance is a number.)	name				
	interface				
	state		enable, disable		
	protocol				
	gap timer		&#60;None&#62;		
	threshold				
	line mode				
user management	admin username				
	admin password				
	user (Attribute of an instance is a number)	username			
		password			
		role			
	roles (Attribute of an instance is a number)	name			
		write			
execute					
virtual ip (Attribute of an instance is a number.)	state		enable, disable		
	name				
	ip address				
	lan ip address				

Group Name	Group Item	Value Name	Value Options	Additional Info
vpn (Attribute of an instance is a number.)	connection name			
	state		enable, disable	
	connection type			
	ikev2			
	authentication mode			
	remote peer type			
	mode configuration		enable, disable	
	type			
	interface			
	remote endpoint			
	remote subnet			
	remote id			
	remote next hop			
	local subnet			
	local id			
	local next hop			
	perfect forward secrecy		enable, disable	
	psk			
	local key length			
	remote rsa key			
	remote key			
	username			
	password			
	aggressive mode		enable, disable	
	nat traversal		enable, disable	
	ike encryption			
	ike authentication			
	ike dh group			
	ike life time			
	esp encryption			
	esp authentication			
	esp dh group			
	sa life time			
	unreachable host detection	host		
ping interval				
max tries				

Group Name	Group Item	Value Name	Value Options	Additional Info	
wlan profile	profile type				
	interface				
	priority				
	bssid				
	basic	network name			
		state		enable, disable	
	advanced	tx power maximum			
		power management			
	security	suite			
		key type			
		passphrase			
		wep authentication			
		wep key size			
		wep tx key index			
		wep key 1			
		wep key 2			
		wep key 3			
		wep key 4			
		wpax authentication			
		wpax pmf		disabled, optional, required	
		wpax key			
		wpax ieee 802.1x			
		wpax eap-ttls option			
		wpax peap option			
		wpax fast option			
		wpax fast provisioning			
		wpax username			
		wpax password			
	wpax validate certificate				
	wpax credentials				
	wpax inner credentials				

Group Name	Group Item	Value Name	Value Options	Additional Info
wlan (“Instance” attribute is “wlan0”)	choice (Attribute of an instance is a number.)			
	antenna diversity		enabled, antenna 1, antenna 2	
	debugging level			
	wifi direct go mode		enable, disable	
	band		Auto, 2.4 GHz Only, 5 GHz Only	
	scanning latency			
	scanning channel list			
xml import control	restore factory configuration		enable, disable	
	delete http authentication uris		enable, disable	
	http authentication uri delete	name		
	reboot		enable, disable	

## XML Status Record Groups and Items

*Table 4-8* lists the supported SGX 5150 XML status record (XSR) groups and items. These groups and items show the status of the gateway in XML form and can only be exported. The XSR schema differs slightly from the XCR groups and items in that the XSR allows groups within groups.

**Table 4-8 XSR Group and Items**

Group Name	Item Name	Value Name	Valid Values
access point			
action (Attribute of an instance includes, “eth0 link state change”, “on scheduled reboot”, “usb0 link state change”, and “wlan0 link state change”.)	alarm state		on, off
	duration		
	transitions		
arp	arp entry	ip address	
		mac address	
		type	
		interface	

Group Name	Item Name	Value Name	Valid Values
bridge (“Instance” attribute is “br0”)	enable state		enable, disable
	active state		active, inactive
clock	time		
	date		
	timezone	zone offset	
device	product info	product type	
		serial number	
		firmware version	
		configuration version	
		build date year	
		build date month	
		build date day	
		build date hour	
		build date minute	
		build date second	
		lantronix iot gateway os version	
		uptime	
		permanent config	
region			
email log (Attribute of an instance is a number.)	entry	time	
		log	
email (Attribute of an instance is a number.)	success	sent	
		sent with retries	
	failed		
queued			
failover (Attribute of an instance includes “eth0”, “usb0”, and “wlan0”)	state		
	transitions		

Group Name	Item Name	Value Name	Valid Values
hardware	cpu	type	
		speed	
	memory	flash size	
		ram size	
	connections	number serial	
		number usb	
		number ethernet	
		number wireless	
		number cellular	
http log	totals	entries	
		bytes	
	entry (Attribute of an instance is a number.)		
http	state		enable, disable
	logging	entries	
		bytes	

Group Name	Item Name	Value Name	Valid Values
icmp	snmp	InMsgs	
		InErrors	
		InCsumErrors	
		InDestUnreachs	
		InTimeExcds	
		InParmProbs	
		InSrcQuenchs	
		InRedirects	
		InEchos	
		InEchoReps	
		InTimestamps	
		InTimestampReps	
		InAddrMasks	
		InAddrMaskReps	
		OutMsgs	
		OutErrors	
		OutDestUnreachs	
		OutTimeExcds	
		OutParmProbs	
		OutSrcQuenchs	
		OutRedirects	
		OutEchos	
		OutEchoReps	
		OutTimestamps	
		OutTimestampReps	
		OutAddrMasks	
OutAddrMaskReps			



Group Name	Item Name	Value Name	Valid Values	
interface (Attribute of an instance is "eth0", "usb0", or "wlan0".)	generic	status		
	mac address			
	ip address			
	network mask			
	default gateway			
	ipv4 domain			
	ipv4 address type			
	ipv6 link local address			
	ipv6 global address			
	ipv6 global address			
	ipv6 default gateway			
	ipv6 default gateway			
	receive		bytes	
			packets	
			errs	
			drop	
			fifo	
			frame	
			compressed	
			multicast	
	transmit		bytes	
			packets	
			errs	
drop				
fifo				
colls				
carrier				
compressed				
ip sockets	ip socket	protocol		
		rx queue		
		tx queue		
		local address		
		local port		
		remote address		
		remote port		
state				

Group Name	Item Name	Value Name	Valid Values
ip	snmp	Forwarding	
		DefaultTTL	
		InReceives	
		InHdrErrors	
		InAddrErrors	
		ForwDatagrams	
		InUnknownProtos	
		InDiscards	
		InDelivers	
		OutRequests	
		OutDiscards	
		OutNoRoutes	
		ReasmTimeout	
		ReasmReqds	
		ReasmOKs	
		ReasmFails	
		FragOKs	
		FragFails	
		FragCreate	
	netstat	InNoRoutes	
		InTruncatedPkts	
		InMcastPkts	
		OutMcastPkts	
		InBcastPkts	
		OutBcastPkts	
		InOctets	
		OutOctets	
		InMcastOctets	
		OutMcastOctets	
		InBcastOctets	
		OutBcastOctets	
		InCsumErrors	

Group Name	Item Name	Value Name	Valid Values
line (Attribute of an instance is a number.)	receiver	bytes	
		breaks	
		parity errors	
		framing errors	
		overrun errors	
		no receive buffer errors	
		queued bytes	
		flow control	
	transmitter	bytes	
		breaks	
		queued bytes	
		flow control	
	line levels	cts input	
rts output			
dsr input			
dtr output		&#60;control&#62;	
line	state		enable, disable
	protocol		
	baud rate		
	parity		
	data bits		
	stop bits		
	flow control		
	xon char		&#60;control&#62;Q
	xoff char		&#60;control&#62;Q
mach10		status	
memory	main heap	total memory	
		available memory	
modbus local slave	totals	pdus in	
		pdus out	
		exceptions	

Group Name	Item Name	Value Name	Valid Values	
modbus tcp server (Attribute of an instance includes, “additional” and “permanent”.)	state			
	local port			
	totals	uptime		
		pdus in		
		pdus out		
		connections		
	last connection	local ip address		
		local port		
		remote ip address		
		remote port		
network	dns	primary		
		secondary		
processes	process (Attribute of an instance is a number.)	stack used		
		stack size		
		cpu %		
		thread name		
qos (Attribute of an instance includes: “eth0”, “usb0”, and “wlan0”.)				
query port	status		enabled, disabled	
	last connection	ip address		
		port		
	in	discoveries		
		unknown queries		
		erroneous packets		
	out	discovery replies		
		errors		
rss	url			
	data	entries		
		bytes		
sessions				

Group Name	Item Name	Value Name	Valid Values
tcp	snmp	RtoAlgorithm	
		RtoMin	
		RtoMax	
		MaxConn	
		ActiveOpens	
		PassiveOpens	
		AttemptFails	
		EstabResets	
		CurrEstab	
		InSegs	
		OutSegs	
		RetransSegs	
		InErrs	
		OutRsts	
InCsumErrors			

Group Name	Item Name	Value Name	Valid Values
tcp (continued)	netstat	SyncookiesSent	
		SyncookiesRecv	
		SyncookiesFailed	
		EmbryonicRsts	
		PruneCalled	
		RcvPruned	
		OfoPruned	
		OutOfWindowIcmps	
		LockDroppedIcmps	
		ArpFilter	
		TW	
		TWRecycled	
		TWKilled	
		PAWSPassive	
		PAWSActive	
		PAWSEstab	
		DelayedACKs	
		DelayedACKLocked	
		DelayedACKLost	
		ListenOverflows	
		ListenDrops	
		TCPPrequeued	
		TCPDirectCopyFromBacklog	
		TCPDirectCopyFromPrequeue	
		TCPPrequeueDropped	
		TCPHPHits	
		TCPHPHitsToUser	

Group Name	Item Name	Value Name	Valid Values
tcp (continued)	netstat (continued)	TCPPureAcks	
		TCPHPAcks	
		TCPRenoRecovery	
		TCPsackRecovery	
		TCPsACKReneging	
		TCPFACKReorder	
		TCPsACKReorder	
		TCPRenoReorder	
		TCPTSReorder	
		TCPFullUndo	
		TCPPartialUndo	
		TCPDSACKUndo	
		TCPLossUndo	
		TCPLostRetransmit	
		TCPRenoFailures	
		TCPsackFailures	
		TCPLossFailures	
		TCPFastRetrans	
		TCPForwardRetrans	
		TCPSlowStartRetrans	
		TCPTimeouts	
		TCPLossProbes	
		TCPLossProbeRecovery	
		TCPRenoRecoveryFail	
		TCPsackRecoveryFail	
		TCPSchedulerFailed	
		TCPRcvCollapsed	
		TCPDSACKOldSent	
		TCPDSACKOfoSent	
		TCPDSACKRecv	
		TCPDSACKOfoRecv	
		TCPAbortOnData	
		TCPAbortOnClose	
		TCPAbortOnMemory	
TCPAbortOnTimeout			
TCPAbortOnLinger			
TCPAbortFailed			
TCPMemoryPressures			
TCPsACKDiscard			

Group Name	Item Name	Value Name	Valid Values
tcp (continued)	netstat (continued)	TCPDSACKIgnoredOld	
		TCPDSACKIgnoredNoUndo	
		TCPSpuriousRTOs	
		TCPMD5NotFound	
		TCPMD5Unexpected	
		TCPSackShifted	
		TCPSackMerged	
		TCPSackShiftFallback	
		TCPBacklogDrop	
		TCPMinTTLDrop	
		TCPDeferAcceptDrop	
		IPReversePathFilter	
		TCPTimeWaitOverflow	
		TCPReqQFullDoCookies	
		TCPReqQFullDrop	
		TCPRetransFail	
		TCPRcvCoalesce	
		TCPOFOQueue	
		TCPOFODrop	
		TCPOFOMerge	
		TCPChallengeACK	
		TCPSYNChallenge	
		TCPFastOpenActive	
		TCPFastOpenPassive	
		TCPFastOpenPassiveFail	
		TCPFastOpenListenOverflow	
TCPFastOpenCookieReqd			
TCPSpuriousRtxHostQueues			
tunnel modem	echo commands		enable, disable
	verbose response		enable, disable
	response type		
	error unknown commands		enable, disable
	incoming connection		enabled, disabled



Group Name	Item Name	Value Name	Valid Values
tunnel (Attribute of an instance is a number.)	aggregate	completed connects	
		completed accepts	
		disconnects	
		dropped connects	
		dropped accepts	
		octets from device	
		octets from network	
		connect 0 connection time	
		connect 1 connection time	
		connect 2 connection time	
		connect 3 connection time	
		connect 4 connection time	
		connect 5 connection time	
		connect 6 connection time	
		connect 7 connection time	
		connect 8 connection time	
		connect 9 connection time	
		connect 10 connection time	
		connect 11 connection time	
		connect 12 connection time	
		connect 13 connection time	
connect 14 connection time			
connect 15 connection time			
accept connection time			
connect dns address changes			
connect dns address invalids			
udp	snmp	InDatagrams	
		NoPorts	
		InErrors	
		OutDatagrams	
		RcvbufErrors	
		SndbufErrors	
		InCsumErrors	
usb line	state		enable, disable
	protocol		
vpn	status		
	ipv4 address		
	interface		

Group Name	Item Name	Value Name	Valid Values
wlan scan	network name	bssid	
		channel	
		rsssi	
		topology	
wlan status	state		
	bssid		
	rsssi		
	frequency		
	channel		
	network name		
	profile		
	pairwise cipher		
	group cipher		
	key management		
	radio firmware version		
xsr	out	bytes	
		lines	
		elements	
	errors		

## 5: Commands and Levels

Click the level in the tree structure and it will take you to the command list for that level.

[root](#)

- [enable \(enable\)](#)
  - [configure \(config\)](#)
    - [access point \(config-access-point\)](#)
    - [action \(config-action-select\)](#)
      - [eth0 link state change \(config-action:eth0 link state change\)](#)
        - [email \(config-action-email:eth0 link state change\)](#)
        - [ftp put \(config-action-ftp\\_put:eth0 link state change\)](#)
          - [connection 1 \(config-action-ftp\\_put-connection:eth0 link state change:1\)](#)
          - [connection 2 \(config-action-ftp\\_put-connection:eth0 link state change:2\)](#)
        - [http post \(config-action-http\\_post:eth0 link state change\)](#)
          - [connection 1 \(config-action-http\\_post-connection:eth0 link state change:1\)](#)
          - [connection 2 \(config-action-http\\_post-connection:eth0 link state change:2\)](#)
        - [snmp trap \(config-action-snmp\\_trap:eth0 link state change\)](#)
      - [on scheduled reboot \(config-action:on scheduled reboot\)](#)
        - [email \(config-action-email:on scheduled reboot\)](#)
        - [ftp put \(config-action-ftp\\_put:on scheduled reboot\)](#)
          - [connection 1 \(config-action-ftp\\_put-connection:on scheduled reboot:1\)](#)
          - [connection 2 \(config-action-ftp\\_put-connection:on scheduled reboot:2\)](#)
        - [http post \(config-action-http\\_post:on scheduled reboot\)](#)
          - [connection 1 \(config-action-http\\_post-connection:on scheduled reboot:1\)](#)
          - [connection 2 \(config-action-http\\_post-connection:on scheduled reboot:2\)](#)
        - [snmp trap \(config-action-snmp\\_trap:on scheduled reboot\)](#)
      - [usb0 link state change \(config-action:usb0 link state change\)](#)
        - [email \(config-action-email:usb0 link state change\)](#)
        - [ftp put \(config-action-ftp\\_put:usb0 link state change\)](#)
          - [connection 1 \(config-action-ftp\\_put-connection:usb0 link state change:1\)](#)
          - [connection 2 \(config-action-ftp\\_put-connection:usb0 link state change:2\)](#)
        - [http post \(config-action-http\\_post:usb0 link state change\)](#)
          - [connection 1 \(config-action-http\\_post-connection:usb0 link state change:1\)](#)

- [connection 2 \(config-action-http\\_post-connection:usb0 link state change:2\)](#)
  - [snmp trap \(config-action-snmp\\_trap:usb0 link state change\)](#)
- [wlan0 link state change \(config-action:wlan0 link state change\)](#)
  - [email \(config-action-email:wlan0 link state change\)](#)
  - [ftp put \(config-action-ftp\\_put:wlan0 link state change\)](#)
    - [connection 1 \(config-action-ftp\\_put-connection:wlan0 link state change:1\)](#)
    - [connection 2 \(config-action-ftp\\_put-connection:wlan0 link state change:2\)](#)
  - [http post \(config-action-http\\_post:wlan0 link state change\)](#)
    - [connection 1 \(config-action-http\\_post-connection:wlan0 link state change:1\)](#)
    - [connection 2 \(config-action-http\\_post-connection:wlan0 link state change:2\)](#)
  - [snmp trap \(config-action-snmp\\_trap:wlan0 link state change\)](#)
- [applications \(config-applications\)](#)
  - [python 1 \(config-applications-python:1\)](#)
  - [python 2 \(config-applications-python:2\)](#)
  - [python 3 \(config-applications-python:3\)](#)
  - [python 4 \(config-applications-python:4\)](#)
- [arp \(config-arp\)](#)
- [bridge 1 \(config-bridge:br0\)](#)
- [cli \(config-cli\)](#)
  - [ssh \(config-cli-ssh\)](#)
  - [telnet \(config-cli-telnet\)](#)
- [clock \(config-clock\)](#)
  - [ntp \(config-clock-ntp\)](#)
- [diagnostics \(config-diagnostics\)](#)
  - [log \(config-diagnostics-log\)](#)
- [discovery \(config-discovery\)](#)
- [ftp \(config-ftp\)](#)
- [gateway \(config-gateway\)](#)
  - [dhcpserver \(config-dhcpd\)](#)
    - [static leases 1 \(config-dhcpd-static\\_leases:1\)](#)
    - [static leases 2 \(config-dhcpd-static\\_leases:2\)](#)
    - [static leases 3 \(config-dhcpd-static\\_leases:3\)](#)
    - [static leases 4 \(config-dhcpd-static\\_leases:4\)](#)
    - [static leases 5 \(config-dhcpd-static\\_leases:5\)](#)
    - [static leases 6 \(config-dhcpd-static\\_leases:6\)](#)
    - [static leases 7 \(config-dhcpd-static\\_leases:7\)](#)
    - [static leases 8 \(config-dhcpd-static\\_leases:8\)](#)
  - [mac address filter 1 \(config-mac\\_filter:1\)](#)
  - [mac address filter 2 \(config-mac\\_filter:2\)](#)
  - [mac address filter 3 \(config-mac\\_filter:3\)](#)
  - [mac address filter 4 \(config-mac\\_filter:4\)](#)
  - [mac address filter 5 \(config-mac\\_filter:5\)](#)
  - [mac address filter 6 \(config-mac\\_filter:6\)](#)
  - [mac address filter 7 \(config-mac\\_filter:7\)](#)
  - [mac address filter 8 \(config-mac\\_filter:8\)](#)

- [port forwarding rule 1 \(config-portforwarding:1\)](#)
- [port forwarding rule 2 \(config-portforwarding:2\)](#)
- [port forwarding rule 3 \(config-portforwarding:3\)](#)
- [port forwarding rule 4 \(config-portforwarding:4\)](#)
- [port forwarding rule 5 \(config-portforwarding:5\)](#)
- [port forwarding rule 6 \(config-portforwarding:6\)](#)
- [port forwarding rule 7 \(config-portforwarding:7\)](#)
- [port forwarding rule 8 \(config-portforwarding:8\)](#)
- [static route 1 \(config-staticroute:1\)](#)
- [static route 2 \(config-staticroute:2\)](#)
- [static route 3 \(config-staticroute:3\)](#)
- [static route 4 \(config-staticroute:4\)](#)
- [static route 5 \(config-staticroute:5\)](#)
- [static route 6 \(config-staticroute:6\)](#)
- [static route 7 \(config-staticroute:7\)](#)
- [static route 8 \(config-staticroute:8\)](#)
- [virtual ip 1 \(config-virtual-interface:1\)](#)
- [virtual ip 2 \(config-virtual-interface:2\)](#)
- [virtual ip 3 \(config-virtual-interface:3\)](#)
- [gre 1 \(config-gre:1\)](#)
- [host 1 \(config-host:1\)](#)
- [host 2 \(config-host:2\)](#)
- [host 3 \(config-host:3\)](#)
- [host 4 \(config-host:4\)](#)
- [host 5 \(config-host:5\)](#)
- [host 6 \(config-host:6\)](#)
- [host 7 \(config-host:7\)](#)
- [host 8 \(config-host:8\)](#)
- [host 9 \(config-host:9\)](#)
- [host 10 \(config-host:10\)](#)
- [host 11 \(config-host:11\)](#)
- [host 12 \(config-host:12\)](#)
- [host 13 \(config-host:13\)](#)
- [host 14 \(config-host:14\)](#)
- [host 15 \(config-host:15\)](#)
- [host 16 \(config-host:16\)](#)
- [host 17 \(config-host:17\)](#)
- [host 18 \(config-host:18\)](#)
- [host 19 \(config-host:19\)](#)
- [host 20 \(config-host:20\)](#)
- [host 21 \(config-host:21\)](#)
- [host 22 \(config-host:22\)](#)
- [host 23 \(config-host:23\)](#)
- [host 24 \(config-host:24\)](#)
- [host 25 \(config-host:25\)](#)
- [host 26 \(config-host:26\)](#)
- [host 27 \(config-host:27\)](#)
- [host 28 \(config-host:28\)](#)
- [host 29 \(config-host:29\)](#)
- [host 30 \(config-host:30\)](#)
- [host 31 \(config-host:31\)](#)
- [host 32 \(config-host:32\)](#)
- [http \(config-http\)](#)

- [icmp \(config-icmp\)](#)
- [if 1 \(config-if:eth0\)](#)
  - [failover \(config-ethernet-failover:eth0\)](#)
  - [link \(config-ethernet:eth0\)](#)
  - [qos \(config-ethernet-qos:eth0\)](#)
    - [filter 1 \(config-ethernet-qos-filter:eth0:1\)](#)
    - [filter 2 \(config-ethernet-qos-filter:eth0:2\)](#)
    - [filter 3 \(config-ethernet-qos-filter:eth0:3\)](#)
    - [filter 4 \(config-ethernet-qos-filter:eth0:4\)](#)
    - [filter 5 \(config-ethernet-qos-filter:eth0:5\)](#)
    - [filter 6 \(config-ethernet-qos-filter:eth0:6\)](#)
    - [filter 7 \(config-ethernet-qos-filter:eth0:7\)](#)
    - [filter 8 \(config-ethernet-qos-filter:eth0:8\)](#)
    - [filter 9 \(config-ethernet-qos-filter:eth0:9\)](#)
    - [filter 10 \(config-ethernet-qos-filter:eth0:10\)](#)
    - [filter 11 \(config-ethernet-qos-filter:eth0:11\)](#)
    - [filter 12 \(config-ethernet-qos-filter:eth0:12\)](#)
    - [filter 13 \(config-ethernet-qos-filter:eth0:13\)](#)
    - [filter 14 \(config-ethernet-qos-filter:eth0:14\)](#)
    - [filter 15 \(config-ethernet-qos-filter:eth0:15\)](#)
    - [filter 16 \(config-ethernet-qos-filter:eth0:16\)](#)
    - [filter 17 \(config-ethernet-qos-filter:eth0:17\)](#)
    - [filter 18 \(config-ethernet-qos-filter:eth0:18\)](#)
    - [filter 19 \(config-ethernet-qos-filter:eth0:19\)](#)
    - [filter 20 \(config-ethernet-qos-filter:eth0:20\)](#)
    - [filter 21 \(config-ethernet-qos-filter:eth0:21\)](#)
    - [filter 22 \(config-ethernet-qos-filter:eth0:22\)](#)
    - [filter 23 \(config-ethernet-qos-filter:eth0:23\)](#)
    - [filter 24 \(config-ethernet-qos-filter:eth0:24\)](#)
    - [filter 25 \(config-ethernet-qos-filter:eth0:25\)](#)
    - [filter 26 \(config-ethernet-qos-filter:eth0:26\)](#)
    - [filter 27 \(config-ethernet-qos-filter:eth0:27\)](#)
    - [filter 28 \(config-ethernet-qos-filter:eth0:28\)](#)
    - [filter 29 \(config-ethernet-qos-filter:eth0:29\)](#)
    - [filter 30 \(config-ethernet-qos-filter:eth0:30\)](#)
    - [filter 31 \(config-ethernet-qos-filter:eth0:31\)](#)
    - [filter 32 \(config-ethernet-qos-filter:eth0:32\)](#)
- [if 2 \(config-if:wlan0\)](#)
  - [failover \(config-wlan-failover:wlan0\)](#)
  - [link \(config-wlan:wlan0\)](#)
    - [choice 1 \(config-wlan-choice:wlan0:1\)](#)
    - [choice 2 \(config-wlan-choice:wlan0:2\)](#)
    - [choice 3 \(config-wlan-choice:wlan0:3\)](#)
    - [choice 4 \(config-wlan-choice:wlan0:4\)](#)
  - [qos \(config-wlan-qos:wlan0\)](#)
    - [filter 1 \(config-wlan-qos-filter:wlan0:1\)](#)
    - [filter 2 \(config-wlan-qos-filter:wlan0:2\)](#)
    - [filter 3 \(config-wlan-qos-filter:wlan0:3\)](#)
    - [filter 4 \(config-wlan-qos-filter:wlan0:4\)](#)
    - [filter 5 \(config-wlan-qos-filter:wlan0:5\)](#)
    - [filter 6 \(config-wlan-qos-filter:wlan0:6\)](#)
    - [filter 7 \(config-wlan-qos-filter:wlan0:7\)](#)
    - [filter 8 \(config-wlan-qos-filter:wlan0:8\)](#)

- [filter 9 \(config-wlan-qos-filter:wlan0:9\)](#)
- [filter 10 \(config-wlan-qos-filter:wlan0:10\)](#)
- [filter 11 \(config-wlan-qos-filter:wlan0:11\)](#)
- [filter 12 \(config-wlan-qos-filter:wlan0:12\)](#)
- [filter 13 \(config-wlan-qos-filter:wlan0:13\)](#)
- [filter 14 \(config-wlan-qos-filter:wlan0:14\)](#)
- [filter 15 \(config-wlan-qos-filter:wlan0:15\)](#)
- [filter 16 \(config-wlan-qos-filter:wlan0:16\)](#)
- [filter 17 \(config-wlan-qos-filter:wlan0:17\)](#)
- [filter 18 \(config-wlan-qos-filter:wlan0:18\)](#)
- [filter 19 \(config-wlan-qos-filter:wlan0:19\)](#)
- [filter 20 \(config-wlan-qos-filter:wlan0:20\)](#)
- [filter 21 \(config-wlan-qos-filter:wlan0:21\)](#)
- [filter 22 \(config-wlan-qos-filter:wlan0:22\)](#)
- [filter 23 \(config-wlan-qos-filter:wlan0:23\)](#)
- [filter 24 \(config-wlan-qos-filter:wlan0:24\)](#)
- [filter 25 \(config-wlan-qos-filter:wlan0:25\)](#)
- [filter 26 \(config-wlan-qos-filter:wlan0:26\)](#)
- [filter 27 \(config-wlan-qos-filter:wlan0:27\)](#)
- [filter 28 \(config-wlan-qos-filter:wlan0:28\)](#)
- [filter 29 \(config-wlan-qos-filter:wlan0:29\)](#)
- [filter 30 \(config-wlan-qos-filter:wlan0:30\)](#)
- [filter 31 \(config-wlan-qos-filter:wlan0:31\)](#)
- [filter 32 \(config-wlan-qos-filter:wlan0:32\)](#)
- [if 3 \(config-if:usb0\)](#)
  - [failover \(config-ethernet-failover:usb0\)](#)
  - [qos \(config-ethernet-qos:usb0\)](#)
    - [filter 1 \(config-ethernet-qos-filter:usb0:1\)](#)
    - [filter 2 \(config-ethernet-qos-filter:usb0:2\)](#)
    - [filter 3 \(config-ethernet-qos-filter:usb0:3\)](#)
    - [filter 4 \(config-ethernet-qos-filter:usb0:4\)](#)
    - [filter 5 \(config-ethernet-qos-filter:usb0:5\)](#)
    - [filter 6 \(config-ethernet-qos-filter:usb0:6\)](#)
    - [filter 7 \(config-ethernet-qos-filter:usb0:7\)](#)
    - [filter 8 \(config-ethernet-qos-filter:usb0:8\)](#)
    - [filter 9 \(config-ethernet-qos-filter:usb0:9\)](#)
    - [filter 10 \(config-ethernet-qos-filter:usb0:10\)](#)
    - [filter 11 \(config-ethernet-qos-filter:usb0:11\)](#)
    - [filter 12 \(config-ethernet-qos-filter:usb0:12\)](#)
    - [filter 13 \(config-ethernet-qos-filter:usb0:13\)](#)
    - [filter 14 \(config-ethernet-qos-filter:usb0:14\)](#)
    - [filter 15 \(config-ethernet-qos-filter:usb0:15\)](#)
    - [filter 16 \(config-ethernet-qos-filter:usb0:16\)](#)
    - [filter 17 \(config-ethernet-qos-filter:usb0:17\)](#)
    - [filter 18 \(config-ethernet-qos-filter:usb0:18\)](#)
    - [filter 19 \(config-ethernet-qos-filter:usb0:19\)](#)
    - [filter 20 \(config-ethernet-qos-filter:usb0:20\)](#)
    - [filter 21 \(config-ethernet-qos-filter:usb0:21\)](#)
    - [filter 22 \(config-ethernet-qos-filter:usb0:22\)](#)
    - [filter 23 \(config-ethernet-qos-filter:usb0:23\)](#)
    - [filter 24 \(config-ethernet-qos-filter:usb0:24\)](#)
    - [filter 25 \(config-ethernet-qos-filter:usb0:25\)](#)
    - [filter 26 \(config-ethernet-qos-filter:usb0:26\)](#)

- [filter 27 \(config-ethernet-qos-filter:usb0:27\)](#)
  - [filter 28 \(config-ethernet-qos-filter:usb0:28\)](#)
  - [filter 29 \(config-ethernet-qos-filter:usb0:29\)](#)
  - [filter 30 \(config-ethernet-qos-filter:usb0:30\)](#)
  - [filter 31 \(config-ethernet-qos-filter:usb0:31\)](#)
  - [filter 32 \(config-ethernet-qos-filter:usb0:32\)](#)
  - [ip \(config-ip\)](#)
  - [mach10 \(config-mach10\)](#)
    - [line 1 \(config-mach10-line:1\)](#)
    - [line 2 \(config-mach10-line:2\)](#)
    - [line 3 \(config-mach10-line:3\)](#)
  - [modbus \(modbus\)](#)
    - [rss \(modbus-rss\)](#)
  - [rss \(config-rss\)](#)
  - [smtp \(config-smtp\)](#)
  - [snmp \(config-snmp\)](#)
    - [snmpd \(config-snmp-snmpd\)](#)
    - [traps \(config-snmp-traps\)](#)
  - [syslog \(config-syslog\)](#)
  - [terminal 1 \(config-terminal:1\)](#)
  - [terminal 2 \(config-terminal:2\)](#)
  - [terminal 3 \(config-terminal:3\)](#)
  - [terminal network \(config-terminal:network\)](#)
  - [user management \(config-user-management\)](#)
  - [vpn 1 \(config-vpn:1\)](#)
    - [unreachable host detection \(config-vpn-unreachable\\_host\\_detection:1\)](#)
  - [wlan profiles \(config-profiles\)](#)
    - [edit 1 \(config-profile-basic:default\\_infra2\)](#)
      - [advanced \(config-profile-advanced:default\\_infra2\)](#)
        - [security \(config-profile-security:default\\_infra2\)](#)
          - [wep \(config-profile-security-wep:default\\_infra2\)](#)
            - [key 1 \(config-profile-security-wep-key:default\\_infra2:1\)](#)
            - [key 2 \(config-profile-security-wep-key:default\\_infra2:2\)](#)
            - [key 3 \(config-profile-security-wep-key:default\\_infra2:3\)](#)
            - [key 4 \(config-profile-security-wep-key:default\\_infra2:4\)](#)
          - [wpax \(config-profile-security-wpax:default\\_infra2\)](#)
- [device \(device\)](#)
  - [reboot schedule \(device-reboot-schedule\)](#)
- [dns \(dns\)](#)
- [email 1 \(email:1\)](#)
- [email 2 \(email:2\)](#)
- [email 3 \(email:3\)](#)
- [email 4 \(email:4\)](#)
- [email 5 \(email:5\)](#)
- [email 6 \(email:6\)](#)
- [email 7 \(email:7\)](#)



- [email 8 \(email:8\)](#)
- [email 9 \(email:9\)](#)
- [email 10 \(email:10\)](#)
- [email 11 \(email:11\)](#)
- [email 12 \(email:12\)](#)
- [email 13 \(email:13\)](#)
- [email 14 \(email:14\)](#)
- [email 15 \(email:15\)](#)
- [email 16 \(email:16\)](#)
- [filesystem \(filesystem\)](#)
  - [mass storage \(filesystem-mass\\_storage\)](#)
- [line 1 \(line:1\)](#)
- [line 2 \(line:2\)](#)
- [ssh \(ssh\)](#)
  - [client \(ssh-client\)](#)
  - [server \(ssh-server\)](#)
- [ssl \(ssl\)](#)
  - [credentials \(ssl-credentials\)](#)
  - [trusted authorities \(ssl-auth\)](#)
- [tunnel 1 \(tunnel:1\)](#)
  - [accept \(tunnel-accept:1\)](#)
    - [password \(tunnel-accept-password:1\)](#)
  - [connect \(tunnel-connect:1\)](#)
    - [host 1 \(tunnel-connect-host:1:1\)](#)
    - [host 2 \(tunnel-connect-host:1:2\)](#)
    - [host 3 \(tunnel-connect-host:1:3\)](#)
    - [host 4 \(tunnel-connect-host:1:4\)](#)
    - [host 5 \(tunnel-connect-host:1:5\)](#)
    - [host 6 \(tunnel-connect-host:1:6\)](#)
    - [host 7 \(tunnel-connect-host:1:7\)](#)
    - [host 8 \(tunnel-connect-host:1:8\)](#)
    - [host 9 \(tunnel-connect-host:1:9\)](#)
    - [host 10 \(tunnel-connect-host:1:10\)](#)
    - [host 11 \(tunnel-connect-host:1:11\)](#)
    - [host 12 \(tunnel-connect-host:1:12\)](#)
    - [host 13 \(tunnel-connect-host:1:13\)](#)
    - [host 14 \(tunnel-connect-host:1:14\)](#)
    - [host 15 \(tunnel-connect-host:1:15\)](#)
    - [host 16 \(tunnel-connect-host:1:16\)](#)
  - [disconnect \(tunnel-disconnect:1\)](#)
  - [modem \(tunnel-modem:1\)](#)
  - [packing \(tunnel-packing:1\)](#)
  - [serial \(tunnel-serial:1\)](#)
- [tunnel 2 \(tunnel:2\)](#)
  - [accept \(tunnel-accept:2\)](#)
    - [password \(tunnel-accept-password:2\)](#)
  - [connect \(tunnel-connect:2\)](#)
    - [host 1 \(tunnel-connect-host:2:1\)](#)
    - [host 2 \(tunnel-connect-host:2:2\)](#)
    - [host 3 \(tunnel-connect-host:2:3\)](#)
    - [host 4 \(tunnel-connect-host:2:4\)](#)
    - [host 5 \(tunnel-connect-host:2:5\)](#)
    - [host 6 \(tunnel-connect-host:2:6\)](#)

- [host 7 \(tunnel-connect-host:2:7\)](#)
  - [host 8 \(tunnel-connect-host:2:8\)](#)
  - [host 9 \(tunnel-connect-host:2:9\)](#)
  - [host 10 \(tunnel-connect-host:2:10\)](#)
  - [host 11 \(tunnel-connect-host:2:11\)](#)
  - [host 12 \(tunnel-connect-host:2:12\)](#)
  - [host 13 \(tunnel-connect-host:2:13\)](#)
  - [host 14 \(tunnel-connect-host:2:14\)](#)
  - [host 15 \(tunnel-connect-host:2:15\)](#)
  - [host 16 \(tunnel-connect-host:2:16\)](#)
  - [disconnect \(tunnel-disconnect:2\)](#)
  - [modem \(tunnel-modem:2\)](#)
  - [packing \(tunnel-packing:2\)](#)
  - [serial \(tunnel-serial:2\)](#)
- [tunnel 3 \(tunnel:3\)](#)
  - [accept \(tunnel-accept:3\)](#)
    - [password \(tunnel-accept-password:3\)](#)
  - [connect \(tunnel-connect:3\)](#)
    - [host 1 \(tunnel-connect-host:3:1\)](#)
    - [host 2 \(tunnel-connect-host:3:2\)](#)
    - [host 3 \(tunnel-connect-host:3:3\)](#)
    - [host 4 \(tunnel-connect-host:3:4\)](#)
    - [host 5 \(tunnel-connect-host:3:5\)](#)
    - [host 6 \(tunnel-connect-host:3:6\)](#)
    - [host 7 \(tunnel-connect-host:3:7\)](#)
    - [host 8 \(tunnel-connect-host:3:8\)](#)
    - [host 9 \(tunnel-connect-host:3:9\)](#)
    - [host 10 \(tunnel-connect-host:3:10\)](#)
    - [host 11 \(tunnel-connect-host:3:11\)](#)
    - [host 12 \(tunnel-connect-host:3:12\)](#)
    - [host 13 \(tunnel-connect-host:3:13\)](#)
    - [host 14 \(tunnel-connect-host:3:14\)](#)
    - [host 15 \(tunnel-connect-host:3:15\)](#)
    - [host 16 \(tunnel-connect-host:3:16\)](#)
  - [disconnect \(tunnel-disconnect:3\)](#)
  - [modem \(tunnel-modem:3\)](#)
  - [packing \(tunnel-packing:3\)](#)
  - [serial \(tunnel-serial:3\)](#)
- [usb 1 \(usb-line:1\)](#)
- [xml \(xml\)](#)

Table 5-1 Commands and Levels

accept (tunnel-accept:3) level commands	
accept mode always	Enables the tunneling server to always accept tunneling connections.
accept mode any character	Enables the tunneling server to accept tunneling connections only when a character is received through the corresponding line (serial port).
accept mode disable	Disables accept mode tunneling.
accept mode modem control asserted	Enables the tunneling server to accept tunneling connections when the modem control pin is asserted.
accept mode modem emulation	Enables modem emulation for accept mode tunneling.
accept mode start character	Enables accept mode tunneling when the configured start character is received on the line.
aes decrypt key <hexadecimal>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
block network disable	Forwards (tunnels) network data in accept mode tunneling.
block network enable	Discards all data coming in from the accept mode tunnel before forwarding it to the serial interface (generally used for debugging).
block serial disable	Forwards (tunnels) serial data in accept mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the accept mode tunnel (generally used for debugging).
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL server.
default accept mode	Restores the default accept mode as 'always'.
default local port	Uses the default port number as the local port for accept mode tunneling. The default port is 10000 + n, where 'n' is the line number for this tunnel.
default protocol	Restores the default accept mode tunneling protocol as 'TCP'.
default start character	Defaults the accept mode start character.

default tcp keep alive	Defaults the TCP keep alive time.
default tcp keep alive interval	Restores the default 45 second accept mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
email connect <number>	Sets an email profile to use to send an email alert upon establishing an accept mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing an accept mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing an accept mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing an accept mode tunneling connection.
flush start character disable	Enables forwarding of the accept start character into the network.
flush start character enable	Disables forwarding of the accept start character into the network.
initial send binary <binary>	Sets the accept tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the accept tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
kill connection	Disconnects the active accept mode tunneling connection.
local port <number>	Sets the port to use for accept mode tunneling. <number> = number of the port to use.
no aes decrypt key	Removes the accept tunnel AES decrypt key.
no aes encrypt key	Removes the accept tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL server.
no email connect	Discontinues sending email alerts upon establishing an accept mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing an accept mode tunnel.
no initial send	Removes the accept tunnel Initial Send string.
password	Enters the next lower level.
protocol ssh	Uses SSH protocol for accept mode tunneling.
protocol ssl	Uses SSL protocol for accept mode tunneling.
protocol tcp	Uses TCP protocol for accept mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for accept mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for accept mode tunneling.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel accept status.
start character <control/>	Sets the accept mode start character. The character may

	be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
tcp keep alive <milliseconds>	Sets the TCP keep alive time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for accept mode tunneling and sets the timer. <milliseconds> = TCP keep alive for accept mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
write	Stores the current configuration in permanent memory.
<b>accept (tunnel-accept:2) level commands</b>	
accept mode always	Enables the tunneling server to always accept tunneling connections.
accept mode any character	Enables the tunneling server to accept tunneling connections only when a character is received through the corresponding line (serial port).
accept mode disable	Disables accept mode tunneling.
accept mode modem control asserted	Enables the tunneling server to accept tunneling connections when the modem control pin is asserted.
accept mode modem emulation	Enables modem emulation for accept mode tunneling.
accept mode start character	Enables accept mode tunneling when the configured start character is received on the line.
aes decrypt key <hexadecimal>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
block network disable	Forwards (tunnels) network data in accept mode tunneling.
block network enable	Discards all data coming in from the accept mode tunnel before forwarding it to the serial interface (generally used for debugging).
block serial disable	Forwards (tunnels) serial data in accept mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the accept mode tunnel (generally used for debugging).
clrscrn	Clears the screen.

credentials <text>	Selects the RSA/DSA certificates by name for the SSL server.
default accept mode	Restores the default accept mode as 'always'.
default local port	Uses the default port number as the local port for accept mode tunneling. The default port is 10000 + n, where 'n' is the line number for this tunnel.
default protocol	Restores the default accept mode tunneling protocol as 'TCP'.
default start character	Defaults the accept mode start character.
default tcp keep alive	Defaults the TCP keep alive time.
default tcp keep alive interval	Restores the default 45 second accept mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
email connect <number>	Sets an email profile to use to send an email alert upon establishing an accept mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing an accept mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing an accept mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing an accept mode tunneling connection.
flush start character disable	Enables forwarding of the accept start character into the network.
flush start character enable	Disables forwarding of the accept start character into the network.
initial send binary <binary>	Sets the accept tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the accept tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
kill connection	Disconnects the active accept mode tunneling connection.
local port <number>	Sets the port to use for accept mode tunneling. <number> = number of the port to use.
no aes decrypt key	Removes the accept tunnel AES decrypt key.
no aes encrypt key	Removes the accept tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL server.
no email connect	Discontinues sending email alerts upon establishing an accept mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing an accept mode tunnel.
no initial send	Removes the accept tunnel Initial Send string.
password	Enters the next lower level.
protocol ssh	Uses SSH protocol for accept mode tunneling.
protocol ssl	Uses SSL protocol for accept mode tunneling.
protocol tcp	Uses TCP protocol for accept mode tunneling.

protocol tcp aes	Uses TCP protocol with AES encryption for accept mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for accept mode tunneling.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel accept status.
start character <control>	Sets the accept mode start character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
tcp keep alive <milliseconds>	Sets the TCP keep alive time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for accept mode tunneling and sets the timer. <milliseconds> = TCP keep alive for accept mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
write	Stores the current configuration in permanent memory.
<b>accept (tunnel-accept:1) level commands</b>	
accept mode always	Enables the tunneling server to always accept tunneling connections.
accept mode any character	Enables the tunneling server to accept tunneling connections only when a character is received through the corresponding line (serial port).
accept mode disable	Disables accept mode tunneling.
accept mode modem control asserted	Enables the tunneling server to accept tunneling connections when the modem control pin is asserted.
accept mode modem emulation	Enables modem emulation for accept mode tunneling.
accept mode start character	Enables accept mode tunneling when the configured start character is received on the line.
aes decrypt key <hexadecimal>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the accept tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the accept tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
block network disable	Forwards (tunnels) network data in accept mode tunnel-

	ing.
block network enable	Discards all data coming in from the accept mode tunnel before forwarding it to the serial interface (generally used for debugging).
block serial disable	Forwards (tunnels) serial data in accept mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the accept mode tunnel (generally used for debugging).
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL server.
default accept mode	Restores the default accept mode as 'always'.
default local port	Uses the default port number as the local port for accept mode tunneling. The default port is 10000 + n, where 'n' is the line number for this tunnel.
default protocol	Restores the default accept mode tunneling protocol as 'TCP'.
default start character	Defaults the accept mode start character.
default tcp keep alive	Defaults the TCP keep alive time.
default tcp keep alive interval	Restores the default 45 second accept mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
email connect <number>	Sets an email profile to use to send an email alert upon establishing an accept mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing an accept mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing an accept mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing an accept mode tunneling connection.
flush start character disable	Enables forwarding of the accept start character into the network.
flush start character enable	Disables forwarding of the accept start character into the network.
initial send binary <binary>	Sets the accept tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the accept tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
kill connection	Disconnects the active accept mode tunneling connection.
local port <number>	Sets the port to use for accept mode tunneling. <number> = number of the port to use.
no aes decrypt key	Removes the accept tunnel AES decrypt key.
no aes encrypt key	Removes the accept tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL server.
no email connect	Discontinues sending email alerts upon establishing an



	accept mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing an accept mode tunnel.
no initial send	Removes the accept tunnel Initial Send string.
password	Enters the next lower level.
protocol ssh	Uses SSH protocol for accept mode tunneling.
protocol ssl	Uses SSL protocol for accept mode tunneling.
protocol tcp	Uses TCP protocol for accept mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for accept mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for accept mode tunneling.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel accept status.
start character <control/>	Sets the accept mode start character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
tcp keep alive <milliseconds>	Sets the TCP keep alive time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for accept mode tunneling and sets the timer. <milliseconds> = TCP keep alive for accept mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
write	Stores the current configuration in permanent memory.
<b>access point (config-access-point) level commands</b>	
channel <number>	Sets the channel on which the Access Point will operate.
channel selection automatic	Sets channel selection to automatic.
channel selection configured	Sets channel selection to configured.
clrscrm	Clears the screen.
default channel	Clears the Access Point channel setting.
default channel selection	Sets to default channel selection, which is 'Automatic'.
default ip address	Restores IP address of Access Point to the default value.
default suite	Restores the security method (suite) to the default value (None).
dns redirect <text>	Set the DNS redirect. <text> = Hostname.
exit	Returns to the config level.
ip address <ip address/cidr>	Sets the IP address of Access Point. Formats accepted: 192.168.1.1 (default mask) 192.168.1.1/24 (CIDR) "192.168.1.1 255.255.255.0" (explicit mask)
multicast forwarding disable	Disables Multicast Forwarding.
multicast forwarding enable	Enables Multicast Forwarding.
network name <text>	Set Network Name (SSID). <text> = Network Name(SSID).
no dns redirect	Clears the DNS redirect.

no network name	Clears Network Name (SSID).
no passphrase	Clears the password.
passphrase <text>	Sets the value for the password. <text> = put quotes around the characters (max 63).
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays statistics.
state disable	Disables Access Point.
state enable	Enables Access Point.
suite none	Sets the security suite to None.
suite wpa	Sets the security suite to WPA.
suite wpa2	Sets the security suite to WPA2.
write	Stores the current configuration in permanent memory.
<b>action (config-action-select) level commands</b>	
clrscrn	Clears the screen.
eth0 link state change	Enters the eth0 link state change alarm level.
exit	Exits to the config level.
on scheduled reboot	Enters the on scheduled reboot alarm level.
show history	Displays the last 20 commands entered during the current CLI session.
usb0 link state change	Enters the usb0 link state change alarm level.
wlan0 link state change	Enters the wlan0 link state change alarm level.
write	Stores the current configuration in permanent memory.
<b>advanced (config-profile-advanced:default_infra2) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
basic	Switch to basic level
clrscrn	Clears the screen.
default tx power maximum	Restores the maximum TX power to the default value (14 dBm).
exit	Exit to the profiles level
power management disable	Disables power management.
power management enable	Enables power management.
security	Switch to security level
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
tx power maximum <dBm>	Sets the TX power maximum in dBm. <dBm> = measure of power in decibels with respect to one milliwatt.
write	Stores the current configuration in permanent memory.
<b>applications (config-applications) level commands</b>	
clrscrn	Clears the screen.
exit	Returns to the config level.
no reserved ports	Restores the default reserved ports.
no reserved start port	Clears the reserved start port.

python <instance>	Enters the next lower level. Specify the instance for the next lower level.
python install <zip tar.gz file>	Install a python package <zip   tar.gz file> = path of package to install.
python kill <pid>	Kill a python script <pid> = PID of running script or 'all' for all scripts.
python remove all	Uninstall python package and all installed packages.
python run <instance>	Runs a python script <instance> = index of the script to be executed.
python show installed	Show installed python packages.
python show status	Show running python scripts.
python uninstall <zip tar.gz file File>	Uninstall a python package <zip   tar.gz file> = path of package to uninstall. <File> = file to uninstall (from list of installed packages).
reserved ports <number>	Sets the number of reserved ports.
reserved start port <number>	Sets the reserved start port. <number> = start port number.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>arp (config-arp) level commands</b>	
add <IP address> <MAC address> <Interface name>	Adds an entry to the ARP table, mapping an IP address to a MAC address. <ip address> = IP address to be mapped. <mac address> = MAC address in colon-separated form. <interface name> = Interface name
clrscrn	Clears the screen.
exit	Exits to the configuration level.
remove all	Removes all entries from the ARP cache.
remove ip <IP address> <Interface name>	Removes an entry from the ARP cache. <ip address> = address of the entry being removed. <interface name> = Interface name
show cache	Displays the ARP cache table.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>bridge 1 (config-bridge:br0) level commands</b>	
auto detect ip address disable	Disables learning the IPv4 address of the bridged client.
auto detect ip address enable	Enables learning the IPv4 address of the bridged client.
bridging initial scan interval <seconds>	Sets the scan interval before learning the IP address of the bridged client.
bridging ip address <IP address>	Sets the Bridging IP Address.
bridging ipv6 address <ipv6 address>	Sets the Bridging IPv6 Address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
bridging scan interval <seconds>	Sets the scan interval after learning the IP address of the

	bridged client.
clrscrn	Clears the screen.
default bridging initial scan interval	Restores the default initial scan interval.
default bridging scan interval	Restores the default scan interval.
default ethernet interface	Restores the default Bridging ethernet interface.
ethernet interface <text>	Sets the Bridging ethernet interface.
exit	Exits to the config level.
network access for gateway disable	Disables network access for gateway in transparent bridging mode.
network access for gateway enable	Enables network access for gateway in transparent bridging mode.
no bridging ip address	Removes the Bridging MAC Address.
no bridging ipv6 address	Removes the Bridging IPv6 Address.
no bridging mac address	Removes the Bridging MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Show bridge statistics
show status	Show bridge status
state disable	Disables bridging.
state enable	Enables bridging.
transparent mode disable	Disables transparent mode.
transparent mode enable	Enables transparent mode.
write	Stores the current configuration in permanent memory.
<b>choice 1 (config-wlan-choice:wlan0:1) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no profile	Removes reference to the profile.
profile <text>	Selects a profile. <text> = name of the profile.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>choice 2 (config-wlan-choice:wlan0:2) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no profile	Removes reference to the profile.
profile <text>	Selects a profile. <text> = name of the profile.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

write	Stores the current configuration in permanent memory.
<b>choice 3 (config-wlan-choice:wlan0:3) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no profile	Removes reference to the profile.
profile <text>	Selects a profile. <text> = name of the profile.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>choice 4 (config-wlan-choice:wlan0:4) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no profile	Removes reference to the profile.
profile <text>	Selects a profile. <text> = name of the profile.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>cli (config-cli) level commands</b>	
clrscrn	Clears the screen.
default inactivity timeout	The default inactivity timeout will apply to CLI sessions.
default quit connect line	Restores the default string to quit the 'connect line', 'telnet', and 'ssh' commands.
enable level password <text>	Sets the enable-level password.
exit	Exits to the configuration level.
inactivity timeout <minutes>	Sets the inactivity timeout for all CLI sessions.
line authentication disable	No password required for Line CLI users.
line authentication enable	Challenges the Line CLI user with a password.
no enable level password	Removes the enable-level password.
no inactivity timeout	No inactivity timeout will apply to CLI sessions.
quit connect line <control>	Sets the string used to quit the 'connect line', 'telnet', and 'ssh' commands. The characters may be input as text or control. A control character has the form <control>C.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh	Change to menu level for SSH configuration and status.
telnet	Change to menu level for Telnet configuration and status.
write	Stores the current configuration in permanent memory.
<b>client (ssh-client) level commands</b>	

clrscrn	Clears the screen.
default user <username> command	Restore the user command to the default login shell
delete all known hosts	Remove all known hosts
delete all users	Remove all users
delete known host <server>	Remove known host
delete user <username>	Delete the named user
exit	Exits to the ssh level.
known host <server>	Set known host RSA or DSA key
no known host <server> dsa	Remove known host DSA key
no known host <server> rsa	Remove known host RSA key
no user <username> dsa	Remove user DSA key
no user <username> rsa	Remove user RSA key
show	Show SSH Client settings
show history	Displays the last 20 commands entered during the current CLI session.
show known host <server>	Show known host RSA and DSA keys
show user <username>	Show information for a user
user <username>	Set username and RSA or DSA keys
user <username> command <command>	Customizes the user command
user <username> generate dsa 1024	Generate DSA public and private keys
user <username> generate dsa 2048	Generate DSA public and private keys
user <username> generate dsa 4096	Generate DSA public and private keys
user <username> generate dsa 512	Generate DSA public and private keys
user <username> generate dsa 768	Generate DSA public and private keys
user <username> generate rsa 1024	Generate RSA public and private keys
user <username> generate rsa 2048	Generate RSA public and private keys
user <username> generate rsa 4096	Generate RSA public and private keys
user <username> generate rsa 512	Generate RSA public and private keys
user <username> generate rsa 768	Generate RSA public and private keys
user <username> password <password>	Set username with password and optional RSA or DSA keys
write	Stores the current configuration in permanent memory.
<b>clock (config-clock) level commands</b>	
clock set <time(hh:mm:ss)> <day (1-31)> <month text> <year>	Sets the system clock.
clock timezone	Shows possible time zone names.
clock timezone <time zone>	Sets the timezone to be displayed. Use "clock timezone" to show choices.
clrscrn	Clears the screen.
default clock timezone	Restores the default timezone, which is UTC.
default synchronization method	Restores the default time synchronization method (Manual).
exit	Exits to the configuration level.
ntp	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
show system clock	Displays the system clock.
synchronization method manual	Set time manually.
synchronization method sntp	Synchronize time with a NTP server.
write	Stores the current configuration in permanent memory.
<b>configure (config) level commands</b>	
access point	Enters the access point level.
action	Enters the config action level.
applications	Enters the applications level.
arp	Changes to the command level for ARP configuration and status.
bridge <instance>	Changes to the bridge configuration level.
cli	Change to menu level for CLI configuration and status
clock	Change to menu level for Clock configuration and status
clrscrn	Clears the screen.
diagnostics	Enters the diagnostics level.
discovery	Enters the discovery level.
exit	Exits to the enable level.
ftp	Enters the ftp level.
gateway	Enters the gateway level.
gre <instance>	Change to gre level.
host <number>	Change to config host level
http	Enters the http level.
icmp	Changes to the command level for ICMP configuration and status.
if <instance>	Changes to the interface configuration level.
ip	Changes to the command level for IP configuration and status.
kill ssh <session>	Kills SSH session with index from "show sessions"
kill telnet <session>	Kills Telnet session with index from "show sessions"
mach10	Enters the mach10 level.
modbus	Changes to the modbus configuration level.
rss	Change to menu level for RSS configuration and status
show	Displays system information.
show history	Displays the last 20 commands entered during the current CLI session.
show lines	Displays line information.
smtp	Changes to the command level for SMTP configuration and status.
snmp	Enters the snmp level.
syslog	Enters the syslog level.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
user management	Enters the config-user-management level.
vpn <instance>	Change to vpn level.

wlan profiles	Enters the WLAN profiles configuration level.
write	Stores the current configuration in permanent memory.
<b>connect (tunnel-connect:3) level commands</b>	
block network disable	Forwards (tunnels) network data in connect mode tunneling.
block network enable	Discards all data coming in from the connect mode tunnel before forwarding it to the serial interface (generally used for debugging).
block serial disable	Forwards (tunnels) serial data in connect mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the connect mode tunnel (generally used for debugging).
clrscrn	Clears the screen.
connect mode always	Enables the tunneling server to always establish tunneling connections.
connect mode any character	Enables the tunneling server to establish a tunneling connection when a character is received on the corresponding line (serial port).
connect mode disable	Disables connect mode tunneling.
connect mode modem control asserted	Enables the tunneling server to make tunneling connections when the modem control pin is asserted.
connect mode modem emulation	Enables modem emulation for connect mode tunneling.
connect mode start character	Enables connect mode tunneling when the configured start character is received on the line.
default connect mode	Restores the default connect mode as 'disable'.
default host mode	Connects to the first host in the list that accepts the connection.
default local port	Uses a random port number as the local port for establishing tunneling connections to other devices.
default reconnect time	Restores the default reconnect time value for connect mode tunneling.
default start character	Defaults the connect mode start character.
email connect <number>	Sets an email profile to use to send an email alert upon establishing a connect mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing a connect mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing a connect mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing a connect mode tunneling connection.
flush start character disable	Enables forwarding of the connect start character into the network.
flush start character enable	Disables forwarding of the connect start character into the network.
host <instance>	Enters the next lower level. Specify the instance for the next lower level.
host mode sequential	Connects to the first host in the list that accepts the connection.



host mode simultaneous	Selects simultaneous connections to all hosts on the host list.
kill connection	Disconnects the active connect mode tunneling connection or connections.
local port <number>	Sets a specific port for use as the local port. <number> = the number of the port to use.
no email connect	Discontinues sending email alerts upon establishing a connect mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing a connect mode tunnel.
promote host <number>	Promotes the identified host, exchanging it place with the host above it, to adjust the order of the defined hosts.
reconnect time <milliseconds>	Sets the reconnect time value for tunneling connections established by the device in milliseconds. <milliseconds> = timeout in milliseconds.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel connect status.
start character <control>	Sets the connect mode start character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>connect (tunnel-connect:2) level commands</b>	
block network disable	Forwards (tunnels) network data in connect mode tunneling.
block network enable	Discards all data coming in from the connect mode tunnel before forwarding it to the serial interface (generally used for debugging).
block serial disable	Forwards (tunnels) serial data in connect mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the connect mode tunnel (generally used for debugging).
clrscrn	Clears the screen.
connect mode always	Enables the tunneling server to always establish tunneling connections.
connect mode any character	Enables the tunneling server to establish a tunneling connection when a character is received on the corresponding line (serial port).
connect mode disable	Disables connect mode tunneling.
connect mode modem control asserted	Enables the tunneling server to make tunneling connections when the modem control pin is asserted.
connect mode modem emulation	Enables modem emulation for connect mode tunneling.
connect mode start character	Enables connect mode tunneling when the configured start character is received on the line.
default connect mode	Restores the default connect mode as 'disable'.
default host mode	Connects to the first host in the list that accepts the connection.
default local port	Uses a random port number as the local port for establishing tunneling connections to other devices.

default reconnect time	Restores the default reconnect time value for connect mode tunneling.
default start character	Defaults the connect mode start character.
email connect <number>	Sets an email profile to use to send an email alert upon establishing a connect mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing a connect mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing a connect mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing a connect mode tunneling connection.
flush start character disable	Enables forwarding of the connect start character into the network.
flush start character enable	Disables forwarding of the connect start character into the network.
host <instance>	Enters the next lower level. Specify the instance for the next lower level.
host mode sequential	Connects to the first host in the list that accepts the connection.
host mode simultaneous	Selects simultaneous connections to all hosts on the host list.
kill connection	Disconnects the active connect mode tunneling connection or connections.
local port <number>	Sets a specific port for use as the local port. <number> = the number of the port to use.
no email connect	Discontinues sending email alerts upon establishing a connect mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing a connect mode tunnel.
promote host <number>	Promotes the identified host, exchanging it place with the host above it, to adjust the order of the defined hosts.
reconnect time <milliseconds>	Sets the reconnect time value for tunneling connections established by the device in milliseconds. <milliseconds> = timeout in milliseconds.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel connect status.
start character <control/>	Sets the connect mode start character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>connect (tunnel-connect:1) level commands</b>	
block network disable	Forwards (tunnels) network data in connect mode tunneling.
block network enable	Discards all data coming in from the connect mode tunnel before forwarding it to the serial interface (generally used

	for debugging).
block serial disable	Forwards (tunnels) serial data in connect mode tunneling.
block serial enable	Discards all data coming in from the serial interface before forwarding it to the connect mode tunnel (generally used for debugging).
clrscrn	Clears the screen.
connect mode always	Enables the tunneling server to always establish tunneling connections.
connect mode any character	Enables the tunneling server to establish a tunneling connection when a character is received on the corresponding line (serial port).
connect mode disable	Disables connect mode tunneling.
connect mode modem control asserted	Enables the tunneling server to make tunneling connections when the modem control pin is asserted.
connect mode modem emulation	Enables modem emulation for connect mode tunneling.
connect mode start character	Enables connect mode tunneling when the configured start character is received on the line.
default connect mode	Restores the default connect mode as 'disable'.
default host mode	Connects to the first host in the list that accepts the connection.
default local port	Uses a random port number as the local port for establishing tunneling connections to other devices.
default reconnect time	Restores the default reconnect time value for connect mode tunneling.
default start character	Defaults the connect mode start character.
email connect <number>	Sets an email profile to use to send an email alert upon establishing a connect mode tunnel. <number> = the number of the email profile to use.
email disconnect <number>	Sets an email profile to use to send an email alert upon closing a connect mode tunnel. <number> = the number of the email profile to use.
exit	Returns to the tunnel level.
flush serial disable	Characters already in the serial data buffer are retained upon establishing a connect mode tunneling connection.
flush serial enable	Flushes the serial data buffer upon establishing a connect mode tunneling connection.
flush start character disable	Enables forwarding of the connect start character into the network.
flush start character enable	Disables forwarding of the connect start character into the network.
host <instance>	Enters the next lower level. Specify the instance for the next lower level.
host mode sequential	Connects to the first host in the list that accepts the connection.
host mode simultaneous	Selects simultaneous connections to all hosts on the host list.
kill connection	Disconnects the active connect mode tunneling connection or connections.
local port <number>	Sets a specific port for use as the local port. <number> = the number of the port to use.
no email connect	Discontinues sending email alerts upon establishing a

	connect mode tunnel.
no email disconnect	Discontinues sending email alerts upon closing a connect mode tunnel.
promote host <number>	Promotes the identified host, exchanging it place with the host above it, to adjust the order of the defined hosts.
reconnect time <milliseconds>	Sets the reconnect time value for tunneling connections established by the device in milliseconds. <milliseconds> = timeout in milliseconds.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel connect status.
start character <control>	Sets the connect mode start character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-http_post-connection:wlan0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-ftp_put-connection:wlan0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.

default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-http_post-connection:usb0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-ftp_put-connection:usb0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.

default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-http_post-connection:on scheduled reboot:1) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-ftp_put-connection:on scheduled reboot:1) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.

default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-http_post-connection:eth0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 1 (config-action-ftp_put-connection:eth0 link state change:1) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.

default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-http_post-connection:wlan0 link state change:2) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or host-name.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-ftp_put-connection:wlan0 link state change:2) level commands</b>	
clrscrn	Clears the screen.



default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-http_post-connection:usb0 link state change:2) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-ftp_put-connection:usb0 link state change:2) level commands</b>	

clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.

#### **connection 2 (config-action-http\_post-connection:on scheduled reboot:2) level commands**

clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or hostname.
username <text>	Sets the Username used to logon to HTTP server.
write	Stores the current configuration in permanent memory.

<b>connection 2 (config-action-ftp_put-connection:on scheduled reboot:2) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-http_post-connection:eth0 link state change:2) level commands</b>	
clrscrn	Clears the screen.
default local port	Sets the local port.
default port	Sets default Port number.
default protocol	Sets default HTTP Protocol.
exit	Exits to the next higher level.
host <text>	Sets HTTP server IP address or hostname to be connected to.
local port <number>	Sets the local port.
no host	Clears HTTP server IP address or hostname.
no password	Clears the Password.
no url	Clears HTTP request URL.
no username	Clears the Username.
password <text>	Sets the Password used to logon to HTTP server.
port <number>	Sets the Port number which HTTP server is listening to.
protocol http	Selects HTTP Protocol.
protocol https	Selects HTTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
url <text>	Sets HTTP request URL following IP address or host-name.
username <text>	Sets the Username used to logon to HTTP server.

write	Stores the current configuration in permanent memory.
<b>connection 2 (config-action-ftp_put-connection:eth0 link state change:2) level commands</b>	
clrscrn	Clears the screen.
default filename	Sets default FTP remote Filename.
default local port	Sets default local port.
default port	Sets default Port number.
default protocol	Sets default FTP Protocol.
default username	Sets default Username.
exit	Exits to the next higher level.
filename <text>	Sets FTP remote Filename.
host <text>	Sets FTP server IP address or hostname to be connected to.
local port <number>	Sets default local port.
no host	Clears FTP server IP address or hostname.
no password	Sets default Password.
password <text>	Sets the Password used to logon to FTP server.
port <number>	Sets the Port number which FTP server is listening to.
protocol ftp	Selects FTP Protocol.
protocol ftps	Selects FTPS Protocol.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the Username used to logon to FTP server.
write	Stores the current configuration in permanent memory.
<b>credentials (ssl-credentials) level commands</b>	
clrscrn	Clears the screen.
create <credential name>	Create a new credential name
delete <credential name>	Delete existing credential by name
edit <credential name>	View or edit an existing credential
exit	Exits to the ssl level.
show	Show existing credential names
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>device (device) level commands</b>	
auto show tlog	Continuously displays the internal trouble log.
clrscrn	Clears the screen.
default long name	Restores the default product long name.
default short name	Restores the default product short name.
exit	Exit to the enable level.
long name <name>	Sets the product long name, displayed in command mode and the Web interface.
reboot schedule	Enters the reboot schedule level
short name <name>	Sets the product short name, displayed in command mode and the Web interface. <name> = maximum of eight characters.

show	Show system information
show hardware information	Displays information about the hardware.
show history	Displays the last 20 commands entered during the current CLI session.
show lines	Show line information
show memory	Displays current memory usage information.
show task state	Displays current task states.
show tlog	Displays the internal trouble log.
write	Stores the current configuration in permanent memory.
<b>dhcpserver (config-dhcpd) level commands</b>	
clrscrn	Clears the screen.
default end ip address	Restores end IP address of DHCP address pool to the default value.
default end ipv6 address	Clears the end IPv6 address of DHCP address pool.
default lease time	Restores the lease time to default value (24 hours).
default start ip address	Restores start IP address of DHCP address pool to the default value.
default start ipv6 address	Clears the start IPv6 address of DHCP address pool.
delete all static leases	Deletes all static leases.
delete static lease <instance>	Deletes an entry from the static lease table <instance> = index of the entry being removed
end ip address <IP address>	Sets the end IP address of DHCP address pool.
end ipv6 address <ipv6 address/prefix>	Sets the end IPv6 address of DHCP address pool. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 state disable	Disables IPv6 DHCP server.
ipv6 state enable	Enables IPv6 DHCP server.
lease time <hours>	Sets the lease time. <number> = lease time in hours.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
start ip address <IP address>	Sets the start IP address of DHCP address pool.
start ipv6 address <ipv6 address/prefix>	Sets the start IPv6 address of DHCP address pool. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
state enable	Enables DHCP server.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>diagnostics (config-diagnostics) level commands</b>	
clrscrn	Clears the screen.

exit	Returns to the config level.
log	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>disconnect (tunnel-disconnect:3) level commands</b>	
clrscrn	Clears the screen.
exit	Returns to the tunnel level.
flush serial disable	Does not flush serial data upon closing a tunneling connection.
flush serial enable	Flushes serial data buffer when a tunneling connection is closed.
flush stop character disable	Forwards the stop character from the Line to the network.
flush stop character enable	Prevents the stop character from the Line from being forwarded to the network.
modem control disable	Does not watch the modem control pin to disconnect.
modem control enable	Watches the modem control pin and disconnects if it is not asserted.
no stop character	Removes the stop character.
no timeout	Disables disconnect after timeout feature for tunneling sessions.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
stop character <control>	Sets the stop character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
timeout <milliseconds>	Disconnects when no data has been received on the line (serial port) for the specified length of time. <milliseconds> = timeout in milliseconds.
write	Stores the current configuration in permanent memory.
<b>disconnect (tunnel-disconnect:2) level commands</b>	
clrscrn	Clears the screen.
exit	Returns to the tunnel level.
flush serial disable	Does not flush serial data upon closing a tunneling connection.
flush serial enable	Flushes serial data buffer when a tunneling connection is closed.
flush stop character disable	Forwards the stop character from the Line to the network.
flush stop character enable	Prevents the stop character from the Line from being forwarded to the network.
modem control disable	Does not watch the modem control pin to disconnect.
modem control enable	Watches the modem control pin and disconnects if it is not asserted.
no stop character	Removes the stop character.
no timeout	Disables disconnect after timeout feature for tunneling sessions.

show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
stop character <control>	Sets the stop character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
timeout <milliseconds>	Disconnects when no data has been received on the line (serial port) for the specified length of time. <milliseconds> = timeout in milliseconds.
write	Stores the current configuration in permanent memory.
<b>disconnect (tunnel-disconnect:1) level commands</b>	
clrscrn	Clears the screen.
exit	Returns to the tunnel level.
flush serial disable	Does not flush serial data upon closing a tunneling connection.
flush serial enable	Flushes serial data buffer when a tunneling connection is closed.
flush stop character disable	Forwards the stop character from the Line to the network.
flush stop character enable	Prevents the stop character from the Line from being forwarded to the network.
modem control disable	Does not watch the modem control pin to disconnect.
modem control enable	Watches the modem control pin and disconnects if it is not asserted.
no stop character	Removes the stop character.
no timeout	Disables disconnect after timeout feature for tunneling sessions.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
stop character <control>	Sets the stop character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
timeout <milliseconds>	Disconnects when no data has been received on the line (serial port) for the specified length of time. <milliseconds> = timeout in milliseconds.
write	Stores the current configuration in permanent memory.
<b>discovery (config-discovery) level commands</b>	
clear counters	Zeros Query Port counters
clrscrn	Clears the screen.
default upnp port	Resets the UPnP Server port to its default value (0x77FF).
exit	Returns to the config level.
no clear counters	Unzeros Query Port counters
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays statistics and information about the discovery services.

state disable	Disables the Query Port server.
state enable	Enables the Query Port server.
upnp port <number>	Sets the port number the UPnP server will use. <number> = port number.
upnp state disable	Disables the UPnP server.
upnp state enable	Enables the UPnP server.
write	Stores the current configuration in permanent memory.
<b>dns (dns) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the enable level.
lookup <host_or_ip>	Return a lookup on the DNS name or IP address.
show	Show DNS status.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>edit 1 (config-profile-basic:default_infra2) level commands</b>	
advanced	Switch to advanced level
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exit to the profiles level
network name <text>	Sets the network name.
no network name	Clears the network name.
security	Switch to security level
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables this profile.
state enable	Enables this profile.
write	Stores the current configuration in permanent memory.
<b>email (config-action-email:wlan0 link state change) level commands</b>	
alarm email email <number>	Specifies the email number to send when the alarm turns on.
alarm email none	Specifies no email when the alarm turns on.
alarm message <text>	Sets the email message to be sent when the alarm turns on.
alarm reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains on.
clrscrn	Clears the screen.
default alarm email	Restores the default and no email is sent when the alarm turns on.
default normal email	Restores the default and no email is sent when the alarm turns off.
exit	Exits to the next higher level.
no alarm message	Removes the alarm email message.
no alarm reminder interval	Only one message will be sent when the alarm turns on.



no normal message	Removes the normal email message.
no normal reminder interval	Only one message will be sent when the alarm turns off.
normal email email <number>	Specifies the email number to send when the alarm turns off.
normal email none	Specifies no email when the alarm turns off.
normal message <text>	Sets the email message to be sent when the alarm turns off.
normal reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains off.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>email (config-action-email:usb0 link state change) level commands</b>	
alarm email email <number>	Specifies the email number to send when the alarm turns on.
alarm email none	Specifies no email when the alarm turns on.
alarm message <text>	Sets the email message to be sent when the alarm turns on.
alarm reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains on.
clrscrn	Clears the screen.
default alarm email	Restores the default and no email is sent when the alarm turns on.
default normal email	Restores the default and no email is sent when the alarm turns off.
exit	Exits to the next higher level.
no alarm message	Removes the alarm email message.
no alarm reminder interval	Only one message will be sent when the alarm turns on.
no normal message	Removes the normal email message.
no normal reminder interval	Only one message will be sent when the alarm turns off.
normal email email <number>	Specifies the email number to send when the alarm turns off.
normal email none	Specifies no email when the alarm turns off.
normal message <text>	Sets the email message to be sent when the alarm turns off.
normal reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains off.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>email (config-action-email:on scheduled reboot) level commands</b>	
alarm email email <number>	Specifies the email number to send when the alarm turns on.
alarm email none	Specifies no email when the alarm turns on.
alarm message <text>	Sets the email message to be sent when the alarm turns on.
alarm reminder interval <minutes>	Sets the time interval that messages will be sent while the

	alarm remains on.
clrscrn	Clears the screen.
default alarm email	Restores the default and no email is sent when the alarm turns on.
default normal email	Restores the default and no email is sent when the alarm turns off.
exit	Exits to the next higher level.
no alarm message	Removes the alarm email message.
no alarm reminder interval	Only one message will be sent when the alarm turns on.
no normal message	Removes the normal email message.
no normal reminder interval	Only one message will be sent when the alarm turns off.
normal email email <number>	Specifies the email number to send when the alarm turns off.
normal email none	Specifies no email when the alarm turns off.
normal message <text>	Sets the email message to be sent when the alarm turns off.
normal reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains off.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>email (config-action-email:eth0 link state change) level commands</b>	
alarm email email <number>	Specifies the email number to send when the alarm turns on.
alarm email none	Specifies no email when the alarm turns on.
alarm message <text>	Sets the email message to be sent when the alarm turns on.
alarm reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains on.
clrscrn	Clears the screen.
default alarm email	Restores the default and no email is sent when the alarm turns on.
default normal email	Restores the default and no email is sent when the alarm turns off.
exit	Exits to the next higher level.
no alarm message	Removes the alarm email message.
no alarm reminder interval	Only one message will be sent when the alarm turns on.
no normal message	Removes the normal email message.
no normal reminder interval	Only one message will be sent when the alarm turns off.
normal email email <number>	Specifies the email number to send when the alarm turns off.
normal email none	Specifies no email when the alarm turns off.
normal message <text>	Sets the email message to be sent when the alarm turns off.
normal reminder interval <minutes>	Sets the time interval that messages will be sent while the alarm remains off.
show	Shows the current configuration.

show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>email 1 (email:1) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 10 (email:10) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.

clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 11 (email:11) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.

no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 12 (email:12) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).

priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 13 (email:13) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.

subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 14 (email:14) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 15 (email:15) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.

clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 16 (email:16) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.



no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 2 (email:2) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).

priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 3 (email:3) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.

show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 4 (email:4) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 5 (email:5) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.

clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 6 (email:6) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.

no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 7 (email:7) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).

priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 8 (email:8) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscrn	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>email 9 (email:9) level commands</b>	
auto show statistics	Continuously displays email statistics.
cc <text>	Sets Cc addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
clear log	Clears all entries from the mail log.
clear mail counters	Sets the email counters to zero.
clrscm	Clears the screen.
default priority	Sets X-Priority for email alerts to 3 (normal).
email <number>	Enters the configure email level.
exit	Exits to the enable level.
message file <text>	Specifies a text file, the contents of which will be the message body of an email alert. <text> = the name of a local file.
no cc	Removes the Cc addresses for email alerts.
no clear mail counters	Restores the email counters to the aggregate values.
no message file	Removes the file name, so the message body will be empty.
no reply to	Removes the Reply To address for email alerts.
no subject	Removes subject used for email alerts.
no to	Removes the To addresses for email alerts.
priority high	Sets X-Priority for email alerts to 2 (high).
priority low	Sets X-Priority for email alerts to 4 (low).
priority normal	Sets X-Priority for email alerts to 3 (normal).
priority urgent	Sets X-Priority for email alerts to 1 (urgent).
priority very low	Sets X-Priority for email alerts to 5 (very low).
reply to <text>	Sets the Reply To address for email alerts. <text> = email address to place in the Reply To field of the email alert.
send	Sends an email using the current settings.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the email log.
show statistics	Displays email statistics.
subject <text>	Sets the Subject for email alerts. <text> = text to placed as the subject.
to <text>	Sets To addresses for email alerts. <text> = a quoted, semicolon separated list of email addresses.
write	Stores the current configuration in permanent memory.
<b>enable (enable) level commands</b>	
auto show interfaces	Show interface statistics

auto show processes	Continuously show thread runtime information
clrscrn	Clears the screen.
configure	Enters the configuration level.
connect	Show name and number for lines.
connect line <line>	Begin session on serial port.
device	Enters the device level.
disable	Exits the enable level.
dns	Enters the DNS level.
email <number>	Enters the configure email level.
exit	Exit from the system
filesystem	Enters the filesystem level.
iperf <params>	Run iperf with command line parameters passed in quoted string.
kill ssh <session>	Kills SSH session with index from "show sessions"
kill telnet <session>	Kills Telnet session with index from "show sessions"
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
ping <host>	Ping destination continuously with 5 second timeout
ping <host> <count>	Ping destination n times with 5 second timeout
ping <host> <count> <timeout>	Ping destination n times with x timeout (in seconds)
ping6 <host>	Ping destination continuously with 5 second timeout
ping6 <host> <count>	Ping destination n times with 5 second timeout
ping6 <host> <count> <timeout>	Ping destination n times with x timeout (in seconds)
reload	Reboot system
reload factory defaults	Reload factory defaults to permanent storage
show	Show system information
show history	Displays the last 20 commands entered during the current CLI session.
show interfaces	Show interface statistics
show ip sockets	Show UDP/TCP state information
show lines	Show line information
show multicast routes	show state of VIFs and multicast routing tables
show processes	Show thread runtime information
show routes	show system routing table
show rules	show system rules
show sessions	Show active Telnet and SSH Sessions
ssh	Enters the SSH configuration level.
ssh <optClientUsername> <host>	Begin SSH session on network <host>. The optClientUsername must match an SSH Client: Users configuration entry. Use "" in optClientUserName to prompt for host username and password.
ssh <optClientUsername> <host> <port>	Begin SSH session on network <host>:<port>. The optClientUserName must match an SSH Client: Users configuration entry. Use "" in optClientUserName to prompt for host username and password.
ssl	Enters the SSL configuration level.
tcpdump <parameters>	dump traffic on a network



telnet <host>	Begin telnet session on network <host>.
telnet <host> <port>	Begin telnet session on network <host>:<port>.
trace route <host>	Trace route to destination
trace route <host> <protocol>	Trace route to destination using TCP, ICMP, or UDP
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
xml	Enters the XML level.
<b>eth0 link state change (config-action:eth0 link state change) level commands</b>	
clrscrn	Clears the screen.
default delay	Resets alarm processing delay to its default value.
delay <seconds>	Sets the delay in processing the alarm. Alarm actions will not be executed if the cause is corrected within this time.
email	Enters the next lower level.
exit	Exits to the config alarm level.
ftp put	Enters the next lower level.
http post	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays statistics.
snmp trap	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>failover (config-ethernet-failover:usb0) level commands</b>	
clrscrn	Clears the screen.
default failback threshold	Restores the default Failback threshold.
default failover interface	Restores the default Failover interface.
default failover threshold	Restores the default Failover threshold.
default interval	Restores the default Ping interval.
default method	Restores the default ping method.
default timeout	Restores the default Ping response timeout.
exit	Exit back to interface configuration level
failback threshold <pings>	Sets the Failback threshold. If <pings> attempts are answered, the device will Failback to original interface.
failover interface <text>	Sets the Failover interface.
failover threshold <pings>	Sets the Failover threshold. If <pings> attempts go unanswered, the device will Failover to selected interface.
hostname <text>	Sets the host name. <text> = name of the host to ping.
interval <seconds>	Sets the Ping interval in seconds.
method icmp	Ping using ICMP-ECHO.
method tcp	Ping using TCP.
no hostname	Clears the host name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

show status	Show failover status
state disable	Disables Failover.
state enable	Enables Failover.
test	Test failover configuration
timeout <seconds>	Sets the Ping response timeout in seconds.
write	Stores the current configuration in permanent memory.
<b>failover (config-wlan-failover:wlan0) level commands</b>	
clrscrn	Clears the screen.
default failback threshold	Restores the default Failback threshold.
default failover interface	Restores the default Failover interface.
default failover threshold	Restores the default Failover threshold.
default interval	Restores the default Ping interval.
default method	Restores the default ping method.
default timeout	Restores the default Ping response timeout.
exit	Exit back to interface configuration level
failback threshold <pings>	Sets the Failback threshold. If <pings> attempts are answered, the device will Failback to original interface.
failover interface <text>	Sets the Failover interface.
failover threshold <pings>	Sets the Failover threshold. If <pings> attempts go unanswered, the device will Failover to selected interface.
hostname <text>	Sets the host name. <text> = name of the host to ping.
interval <seconds>	Sets the Ping interval in seconds.
method icmp	Ping using ICMP-ECHO.
method tcp	Ping using TCP.
no hostname	Clears the host name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Show failover status
state disable	Disables Failover.
state enable	Enables Failover.
test	Test failover configuration
timeout <seconds>	Sets the Ping response timeout in seconds.
write	Stores the current configuration in permanent memory.
<b>failover (config-ethernet-failover:eth0) level commands</b>	
clrscrn	Clears the screen.
default failback threshold	Restores the default Failback threshold.
default failover interface	Restores the default Failover interface.
default failover threshold	Restores the default Failover threshold.
default interval	Restores the default Ping interval.
default method	Restores the default ping method.
default timeout	Restores the default Ping response timeout.
exit	Exit back to interface configuration level
failback threshold <pings>	Sets the Failback threshold. If <pings> attempts are answered, the device will Failback to original interface.
failover interface <text>	Sets the Failover interface.

failover threshold <pings>	Sets the Failover threshold. If <pings> attempts go unanswered, the device will Failover to selected interface.
hostname <text>	Sets the host name. <text> = name of the host to ping.
interval <seconds>	Sets the Ping interval in seconds.
method icmp	Ping using ICMP-ECHO.
method tcp	Ping using TCP.
no hostname	Clears the host name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Show failover status
state disable	Disables Failover.
state enable	Enables Failover.
test	Test failover configuration
timeout <seconds>	Sets the Ping response timeout in seconds.
write	Stores the current configuration in permanent memory.
<b>filesystem (filesystem) level commands</b>	
cat <file>	Show the contents of a file
cd <directory>	Change the current directory to the specified directory
clrscrn	Clears the screen.
cp <source file> <destination file>	Copy an existing file
dump <file>	Show contents of a file as a hex dump
exit	Exits to the enable level.
format	Format the file system and lose all data
ls	Show all files and directories in the current directory
ls <directory>	Show all files and directories in the specified directory
mass storage	Enters the next lower level.
mkdir <directory>	Create a directory
mv <source file> <destination file>	Move a file on the file system
pwd	Print working directory
rm <file>	Remove a file
rmdir <directory>	Remove a directory
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show tree	Show all files and directories from current directory
tftp get <source file> <destination file> <host>	Get a file using TFTP
tftp get <source file> <destination file> <host> <port>	Get a file using TFTP
tftp put <source file> <destination file> <host>	Put a file using TFTP
tftp put <source file> <destination file> <host> <port>	Put a file using TFTP
touch <file>	Create a file
<b>filter 1 (config-ethernet-qos-filter:usb0:1) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.

mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 1 (config-wlan-qos-filter:wlan0:1) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.

priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 1 (config-ethernet-qos-filter:eth0:1) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 10 (config-ethernet-qos-filter:usb0:10) level commands</b>	
clrscrn	Clears the screen.

default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 10 (config-wlan-qos-filter:wlan0:10) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.

priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 10 (config-ethernet-qos-filter:eth0:10) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.

<b>filter 11 (config-ethernet-qos-filter:usb0:11) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 11 (config-wlan-qos-filter:wlan0:11) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.



priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 11 (config-ethernet-qos-filter:eth0:11) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 12 (config-ethernet-qos-filter:usb0:12) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 12 (config-wlan-qos-filter:wlan0:12) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.

ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 12 (config-ethernet-qos-filter:eth0:12) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-

	100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 13 (config-ethernet-qos-filter:usb0:13) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 13 (config-wlan-qos-filter:wlan0:13) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.

no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 13 (config-ethernet-qos-filter:eth0:13) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-

	100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 14 (config-ethernet-qos-filter:usb0:14) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 14 (config-wlan-qos-filter:wlan0:14) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.

network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 14 (config-ethernet-qos-filter:eth0:14) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated

	is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 15 (config-ethernet-qos-filter:usb0:15) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 15 (config-wlan-qos-filter:wlan0:15) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC"



	12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 15 (config-ethernet-qos-filter:eth0:15) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allo-

	cated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 16 (config-ethernet-qos-filter:usb0:16) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 16 (config-wlan-qos-filter:wlan0:16) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.

mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 16 (config-ethernet-qos-filter:eth0:16) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.

priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 17 (config-ethernet-qos-filter:usb0:17) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 17 (config-wlan-qos-filter:wlan0:17) level commands</b>	
clrscrn	Clears the screen.

default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 17 (config-ethernet-qos-filter:eth0:17) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.

priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 18 (config-ethernet-qos-filter:usb0:18) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.

<b>filter 18 (config-wlan-qos-filter:wlan0:18) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 18 (config-ethernet-qos-filter:eth0:18) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.

priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 19 (config-ethernet-qos-filter:usb0:19) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current



	CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 19 (config-wlan-qos-filter:wlan0:19) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 19 (config-ethernet-qos-filter:eth0:19) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.

ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 2 (config-ethernet-qos-filter:usb0:2) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-

	100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 2 (config-wlan-qos-filter:wlan0:2) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 2 (config-ethernet-qos-filter:eth0:2) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.

no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 20 (config-ethernet-qos-filter:usb0:20) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-

	100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 20 (config-wlan-qos-filter:wlan0:20) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 20 (config-ethernet-qos-filter:eth0:20) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.

network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 21 (config-ethernet-qos-filter:usb0:21) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated

	is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 21 (config-wlan-qos-filter:wlan0:21) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 21 (config-ethernet-qos-filter:eth0:21) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC"

	12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 22 (config-ethernet-qos-filter:usb0:22) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allo-



	cated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 22 (config-wlan-qos-filter:wlan0:22) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 22 (config-ethernet-qos-filter:eth0:22) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.

mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 23 (config-ethernet-qos-filter:usb0:23) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.

priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 23 (config-wlan-qos-filter:wlan0:23) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 23 (config-ethernet-qos-filter:eth0:23) level commands</b>	
clrscrn	Clears the screen.

default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 24 (config-ethernet-qos-filter:usb0:24) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.

priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 24 (config-wlan-qos-filter:wlan0:24) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.

<b>filter 24 (config-ethernet-qos-filter:eth0:24) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 25 (config-ethernet-qos-filter:usb0:25) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.

priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 25 (config-wlan-qos-filter:wlan0:25) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 25 (config-ethernet-qos-filter:eth0:25) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 26 (config-ethernet-qos-filter:usb0:26) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.



ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 26 (config-wlan-qos-filter:wlan0:26) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-

	100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 26 (config-ethernet-qos-filter:eth0:26) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 27 (config-ethernet-qos-filter:usb0:27) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.

no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 27 (config-wlan-qos-filter:wlan0:27) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-

	100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 27 (config-ethernet-qos-filter:eth0:27) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 28 (config-ethernet-qos-filter:usb0:28) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.

network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 28 (config-wlan-qos-filter:wlan0:28) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated

	is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 28 (config-ethernet-qos-filter:eth0:28) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 29 (config-ethernet-qos-filter:usb0:29) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC"

	12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 29 (config-wlan-qos-filter:wlan0:29) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allo-

	cated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 29 (config-ethernet-qos-filter:eth0:29) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 3 (config-ethernet-qos-filter:usb0:3) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.



mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 3 (config-wlan-qos-filter:wlan0:3) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.

priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 3 (config-ethernet-qos-filter:eth0:3) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 30 (config-ethernet-qos-filter:usb0:30) level commands</b>	
clrscrn	Clears the screen.

default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 30 (config-wlan-qos-filter:wlan0:30) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.

priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 30 (config-ethernet-qos-filter:eth0:30) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.

<b>filter 31 (config-ethernet-qos-filter:usb0:31) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 31 (config-wlan-qos-filter:wlan0:31) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.

priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 31 (config-ethernet-qos-filter:eth0:31) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 32 (config-ethernet-qos-filter:usb0:32) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 32 (config-wlan-qos-filter:wlan0:32) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.

ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 32 (config-ethernet-qos-filter:eth0:32) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-



	100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 4 (config-ethernet-qos-filter:usb0:4) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 4 (config-wlan-qos-filter:wlan0:4) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.

no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 4 (config-ethernet-qos-filter:eth0:4) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-

	100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 5 (config-ethernet-qos-filter:usb0:5) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 5 (config-wlan-qos-filter:wlan0:5) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.

network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 5 (config-ethernet-qos-filter:eth0:5) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated

	is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 6 (config-ethernet-qos-filter:usb0:6) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 6 (config-wlan-qos-filter:wlan0:6) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC"

	12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 6 (config-ethernet-qos-filter:eth0:6) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allo-

	cated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 7 (config-ethernet-qos-filter:usb0:7) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 7 (config-wlan-qos-filter:wlan0:7) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.

mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 7 (config-ethernet-qos-filter:eth0:7) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.



priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 8 (config-ethernet-qos-filter:usb0:8) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 8 (config-wlan-qos-filter:wlan0:8) level commands</b>	
clrscrn	Clears the screen.

default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 8 (config-ethernet-qos-filter:eth0:8) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.

priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 9 (config-ethernet-qos-filter:usb0:9) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.

<b>filter 9 (config-wlan-qos-filter:wlan0:9) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.
priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>filter 9 (config-ethernet-qos-filter:eth0:9) level commands</b>	
clrscrn	Clears the screen.
default priority	Restores the default value of the priority (Excellent Effort).
exit	Exits to the next higher level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
network <text>	Sets the filter Network.
no mac address	Removes the filter MAC Address.
no network	Removes the filter Network.
no ports	Removes the filter Port.
ports <text>	Sets the filter Port.
priority background	Sets the priority to Background. Bandwidth allocated is 5%-100%.

priority best effort	Sets the priority to Best Effort. Bandwidth allocated is 10%-100%.
priority critical applications	Sets the priority to Critical Applications. Bandwidth allocated is 15%-100%.
priority excellent effort	Sets the priority to Excellent Effort. Bandwidth allocated is 10%-100%.
priority internetwork control	Sets the priority to Internetwork Control. Bandwidth allocated is 5%-100%.
priority network control	Sets the priority to Network Control. Bandwidth allocated is 5%-100%.
priority video	Sets the priority to Video. Bandwidth allocated is 20%-100%.
priority voice	Sets the priority to Voice. Bandwidth allocated is 30%-100%.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>ftp (config-ftp) level commands</b>	
clrscrn	Clears the screen.
data port <number>	Sets the FTP server data-port.
default data port	Restores the FTP server data-port to default: 20.
default passive mode ports	Clears the FTP server number of passive ports.
default passive mode start port	Clears the FTP server passive mode start port.
default port	Restores the FTP server port to default: 21.
exit	Returns to the config level.
passive mode ports <number>	Sets the FTP server number of passive ports.
passive mode start port <number>	Sets the FTP server passive mode start port.
port <number>	Sets the FTP server port.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays the FTP statistics.
state disable	Disables the FTP server.
state enable	Enables the FTP server.
write	Stores the current configuration in permanent memory.
<b>ftp put (config-action-ftp_put:wlan0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the FTP Put reminder interval. FTP Put is sent once only.

reminder interval <minutes>	Sets the FTP Put reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>ftp put (config-action-ftp_put:usb0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the FTP Put reminder interval. FTP Put is sent once only.
reminder interval <minutes>	Sets the FTP Put reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>ftp put (config-action-ftp_put:on scheduled reboot) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the FTP Put reminder interval. FTP Put is sent once only.
reminder interval <minutes>	Sets the FTP Put reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>ftp put (config-action-ftp_put:eth0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.

	tions.
no reminder interval	Clears the FTP Put reminder interval. FTP Put is sent once only.
reminder interval <minutes>	Sets the FTP Put reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>gateway (config-gateway) level commands</b>	
add forwarding rule <start port> <end port> <protocol/> <ip>	Add a forwarding rule without a name.
add forwarding rule <start port> <end port> <target port> <protocol> <ingress ip> <ip>	Add a forwarding rule based on ip address without a name.
add forwarding rule with name <name> <start port> <end port> <protocol> <ip>	Add a forwarding rule with a name.
add forwarding rule with name <name> <start port> <target port> <end port> <protocol> <ingress ip> <ip>	Add a forwarding rule based on ip address with a name.
add mac address filter <MAC address> <action>	Add a MAC Address filter.
add route <network> <gateway> <interface> <metric>	Add a static route without a name.
add route with name <name> <network> <gateway> <interface> <metric>	Add a static route with a name.
add virtual ip <IP address> <lan ip address>	Add a Virtual IP.
add virtual ip with name <name> <IP address> <lan ip address>	Add a Virtual IP with name.
clrscrm	Clears the screen.
default operating mode	Restores operating mode to the default value (Disabled).
default router ip address	Restores IP address of router to the default value.
default router ipv6 address	Clears the IPv6 address of router.
default wan interface	Restores preferred WAN interface to the default value.
delete all mac address filters	Deletes all mac address filters.
delete all routes	Deletes all static routes.
delete all rules	Deletes all port forwarding rules.
delete all virtual ip	Deletes all virtual interfaces.
delete mac address filter <instance>	Deletes an entry from the mac address filters <instance> = index of the entry being removed
delete route <instance>	Deletes an entry from the static routes <instance> = index of the entry being removed.
delete rule <instance>	Deletes an entry from the port forwarding rules <instance> = index of the entry being removed.
delete virtual ip <instance>	Delete virtual ip <instance> = index of the ip being removed.
dhcpserver	Enters the dhcpserver level.
exit	Returns to the config level.
firewall disable	Disables firewall on WAN interface.
firewall enable	Enables firewall on WAN interface.
mac address filter <number>	Change to config mac filter level.
mac address filter disable	Disables MAC Address filtering.
mac address filter enable	Enables MAC Address filtering.

no primary dns	Clears the name of the primary DNS server.
no secondary dns	Clears the name of the secondary DNS server.
operating mode disabled	Disables routing on WAN interface.
operating mode gateway	Enables routing with NAT on WAN interface.
operating mode router	Enables routing without NAT on WAN interface.
port forwarding rule <number>	Change to config gateway port forwarding level.
primary dns <IP address>	Sets the IP address of the primary DNS server.
router ip address <ip address/cidr>	Sets the IP address of router. Formats accepted: 192.168.1.1 (default mask) 192.168.1.1/24 (CIDR) "192.168.1.1 255.255.255.0" (explicit mask)
router ipv6 address <ipv6 address/prefix>	Sets the IPv6 address of router. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
secondary dns <IP address>	Sets the IP address of the secondary DNS server.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show routing table	Show current routing table.
show status	Show gateway configuration and status.
static route <number>	Change to config gateway static route level.
virtual ip <number>	Change to virtual ip level.
wan interface <text>	Sets the preferred WAN interface. <text> = interface name.
write	Stores the current configuration in permanent memory.
<b>gre 1 (config-gre:1) level commands</b>	
clrscrn	Clears the screen.
default local network	Restores the default local network name.
default mtu	Restores the default Maximum Transmission Unit (MTU) size.
exit	Exits to the config level.
gre <instance>	Change to gre level.
ip address <text>	Sets the IP address and network mask.
local network <text>	Sets the local network name. <text> = local network name.
mtu <bytes>	Sets the Maximum Transmission Unit (MTU) size.
name <text>	Sets the name. <text> = name.
no ip address	Clears the IP address.
no name	Clears the name.
no remote host	Clear the remote host.
no remote network	Clears the remote network IP address.
remote host <text>	Sets the remote host. <text> = remote host.
remote network <text>	Sets the remote network IP address and network mask.
show	Displays the current configuration.



show history	Displays the last 20 commands entered during the current CLI session.
show status	Show status
state disable	Disables GRE tunnel.
state enable	Enables GRE tunnel.
write	Stores the current configuration in permanent memory.
<b>host 1 (tunnel-connect-host:3:1) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL cli-

	ent.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 1 (tunnel-connect-host:2:1) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character.

	Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.

protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 1 (tunnel-connect-host:1:1) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.

default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.

tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 1 (config-host:1) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 10 (tunnel-connect-host:3:10) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16

	bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user

	name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 10 (tunnel-connect-host:2:10) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use



	binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 10 (tunnel-connect-host:1:10) level commands</b>	

address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.

protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 10 (config-host:10) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.

show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 11 (tunnel-connect-host:3:11) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.

no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 11 (tunnel-connect-host:2:11) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.

aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.

show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 11 (tunnel-connect-host:1:11) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep

	alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.



validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 11 (config-host:11) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 12 (tunnel-connect-host:3:12) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.

auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in millise-

	onds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 12 (tunnel-connect-host:2:12) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connect-

	tion.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 12 (tunnel-connect-host:1:12) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16

	bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.

protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 12 (config-host:12) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 13 (tunnel-connect-host:3:13) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.

no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 13 (tunnel-connect-host:2:13) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16



	bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.

show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 13 (tunnel-connect-host:1:13) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.

default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.

validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 13 (config-host:13) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 14 (tunnel-connect-host:3:14) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics

clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.

tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 14 (tunnel-connect-host:2:14) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.

no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 14 (tunnel-connect-host:1:14) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex dig-

	its. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.



protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 14 (config-host:14) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 15 (tunnel-connect-host:3:15) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.

no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 15 (tunnel-connect-host:2:15) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 15 (tunnel-connect-host:1:15) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.

exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when con-

	necting.
write	Stores the current configuration in permanent memory.
<b>host 15 (config-host:15) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 16 (tunnel-connect-host:3:16) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.

credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and



	sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 16 (tunnel-connect-host:2:16) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tun-

	neling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 16 (tunnel-connect-host:1:16) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode

	tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 16 (config-host:16) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 17 (config-host:17) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 18 (config-host:18) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 19 (config-host:19) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 2 (tunnel-connect-host:3:2) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.

credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and

	sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 2 (tunnel-connect-host:2:2) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tun-



	neling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 2 (tunnel-connect-host:1:2) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode

	tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 2 (config-host:2) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 20 (config-host:20) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 21 (config-host:21) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 22 (config-host:22) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 23 (config-host:23) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 24 (config-host:24) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 25 (config-host:25) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 26 (config-host:26) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 27 (config-host:27) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 28 (config-host:28) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 29 (config-host:29) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.



	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 3 (tunnel-connect-host:3:3) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.

no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 3 (tunnel-connect-host:2:3) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 3 (tunnel-connect-host:1:3) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.

exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when con-

	necting.
write	Stores the current configuration in permanent memory.
<b>host 3 (config-host:3) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 30 (config-host:30) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 31 (config-host:31) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 32 (config-host:32) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 4 (tunnel-connect-host:3:4) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.



no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 4 (tunnel-connect-host:2:4) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 4 (tunnel-connect-host:1:4) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.

exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when con-

	necting.
write	Stores the current configuration in permanent memory.
<b>host 4 (config-host:4) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 5 (tunnel-connect-host:3:5) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.

credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and

	sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 5 (tunnel-connect-host:2:5) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tun-

	neling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 5 (tunnel-connect-host:1:5) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional



	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode

	tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 5 (config-host:5) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 6 (tunnel-connect-host:3:6) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.

no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 6 (tunnel-connect-host:2:6) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current

	CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 6 (tunnel-connect-host:1:6) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.

exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when con-

	necting.
write	Stores the current configuration in permanent memory.
<b>host 6 (config-host:6) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 7 (tunnel-connect-host:3:7) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.



credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and

	sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 7 (tunnel-connect-host:2:7) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tun-

	neling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 7 (tunnel-connect-host:1:7) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode

	tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 7 (config-host:7) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.

	<text> = username.
write	Stores the current configuration in permanent memory.
<b>host 8 (tunnel-connect-host:3:8) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.

no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 8 (tunnel-connect-host:2:8) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current



	CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 8 (tunnel-connect-host:1:8) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.

exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when con-

	necting.
write	Stores the current configuration in permanent memory.
<b>host 8 (config-host:8) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH. <text> = username.
write	Stores the current configuration in permanent memory.
<b>host 9 (tunnel-connect-host:3:9) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.

credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and

	sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 9 (tunnel-connect-host:2:9) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrm	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tun-

	neling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 9 (tunnel-connect-host:1:9) level commands</b>	
address <text>	Sets the remote host to establish tunneling connections with. <text> = IP address or host name of the remote host.
aes decrypt key <hexadecimal>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional

	punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes decrypt key text <text>	Sets the connect tunnel AES decrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
aes encrypt key <hexadecimal>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
aes encrypt key text <text>	Sets the connect tunnel AES encrypt key with up to 16 bytes. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
auto show statistics	show connection statistics
clrscrn	Clears the screen.
credentials <text>	Selects the RSA/DSA certificates by name for the SSL client.
default protocol	Restores the default connect mode tunneling protocol as 'TCP'.
default tcp keep alive	Defaults the TCP keep alive idle time.
default tcp keep alive interval	Restores the default 45 second connect mode TCP keep alive timeout.
default tcp keep alive probes	Defaults the TCP keep alive probes.
exit	Exits to the next higher level.
initial send binary <binary>	Sets the host connect tunnel Initial Send text allowing for binary characters. <binary> = string in binary format that will be sent out the network upon connection. Within [] use binary decimal up to 255 or hex up to 0xFF.
initial send set <text>	Sets the host connect tunnel Initial Send text. <text> = ascii string that will be sent out the network upon connection.
no address	Removes the remote host address used to establish tunneling connections.
no aes decrypt key	Removes the connect tunnel AES decrypt key.
no aes encrypt key	Removes the connect tunnel AES encrypt key.
no credentials	Clears the RSA/DSA certificate selection for the SSL client.
no initial send	Removes the host connect tunnel Initial Send string.
no port	Removes the remote port used to establish tunnel connections.
no ssh username	Removes the SSH user name.
no tcp user timeout	Restores the default.
port <number>	Sets the remote port to use for connect mode tunneling. <number> = number of the port to use.
protocol ssh	Uses SSH protocol for connect mode tunneling.
protocol ssl	Uses SSL protocol for connect mode tunneling.
protocol tcp	Uses TCP protocol for connect mode tunneling.
protocol tcp aes	Uses TCP protocol with AES encryption for connect mode

	tunneling.
protocol telnet	Uses Telnet protocol (with IAC) for connect mode tunneling.
protocol udp	Uses UDP protocol for connect mode tunneling.
protocol udp aes	Uses UDP protocol with AES encryption for connect mode tunneling.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
ssh username <text>	Sets the SSH user name for use when establishing tunneling connections with other devices. <text> = SSH user name.
tcp keep alive <milliseconds>	Sets the TCP keep alive idle time. This is the initial keep alive timeout. <milliseconds> = timer value, in milliseconds.
tcp keep alive interval <milliseconds>	Enables TCP keep alive for connect mode tunneling and sets the timer. <milliseconds> = TCP keep alive for connect mode in milliseconds.
tcp keep alive probes <number>	Sets the number of TCP keep alive probes. <number> = number of TCP keep alive probes.
tcp user timeout <milliseconds>	Sets the timeout for TCP retransmissions. <milliseconds> = timeout value, in milliseconds.
validate certificate disable	Skips verification of the server certificate when connecting.
validate certificate enable	Requires verification of the server certificate when connecting.
write	Stores the current configuration in permanent memory.
<b>host 9 (config-host:9) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Telnet).
default remote port	Sets the remote port (used to connect to the host) to the default value, which depends on the selected protocol.
exit	Exits to the configuration level.
host <number>	Change to config host level
name <text>	Sets the name of the host. <text> = name of the host.
no name	Clears the name of the host.
no remote address	Clears the remote address of the host.
no ssh username	Clears the SSH username associated with the host.
protocol ssh	Sets the protocol to SSH.
protocol telnet	Sets the protocol to Telnet.
remote address <text>	Sets the IP address of the remote host to connect to when this host is selected on the login connect menu. <text> = IP address.
remote port <number>	Sets the remote port used to connect to the host. <number> = port to be used.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
ssh username <text>	Sets the username for logging into the host via SSH.



	<text> = username.
write	Stores the current configuration in permanent memory.
<b>http (config-http) level commands</b>	
auth <uri>	Creates a new HTTP server authentication directive. <uri> = URI of the server.
auth type <uri> digest	Sets an HTTP server authentication directive to the Digest Access Authentication scheme. <uri> = URI of the server.
auth type <uri> none	Sets the authentication type for an HTTP server authentication directive to none. <uri> = URI of the server.
authentication timeout <minutes>	For any Digest AuthType, sets the timeout for authentication. <minutes> = authentication timeout value.
clear counters	Sets the HTTP counters to zero.
clear log	Clears the HTTP server log.
clrscrn	Clears the screen.
default authentication timeout	Resets the authentication timeout to its default value.
default log format	Restores the HTTP Server log format string to its default value.
default max bytes	Resets the maximum bytes to its default value.
default max log entries	Restores the default maximum number of HTTP Server log entries.
default max timeout	Resets the timeout to its default value.
default port	Resets the HTTP Server port to its default value.
default secure port	Resets the HTTP Server SSL port to its default value.
default secure protocols	Restores the default secure protocol selections.
delete auth <uri>	Deletes an existing HTTP Server authentication directive. <uri> = URI of the server.
exit	Returns to the config level.
https state disable	Disables the HTTPS server.
https state enable	Enables the HTTPS server.
log format <text>	Sets the log format string for the HTTP server, using the following directives: %a remote ip address (could be a proxy) %b bytes sent excluding headers %B bytes sent excluding headers (0 = '-') %h remote host (same as %a) %i header contents from request (h = header string) %m request method %p ephemeral local port value used for request %q query string (prepend with '?' or empty '-') %t timestamp HH:MM:SS (same as Apache '%H:%M:%S') %u remote user (could be bogus for 401 status) %U URL path info %r first line of request (same as '%m %U %q <version>') %s return status
logging state disable	Disables HTTP server logging.
logging state enable	Enables HTTP server logging.
max bytes <number>	Sets the maximum number of bytes the HTTP server accepts when receiving a request.
max log entries <number>	Sets the maximum number of HTTP server log entries. <number> = maximum number of HTTP server log entries.
max timeout <seconds>	Sets the maximum time the HTTP server waits when receiving a request. <seconds> = maximum timeout value.
no clear counters	Restores the HTTP counters to the aggregate values.

no port	Disables the HTTP Server port.
no secure credentials	Clears the RSA/DSA certificate selection for the HTTP server.
no secure port	Disables the HTTP Server SSL port.
port <number>	Sets the port number the HTTP server will use. <number> = port number.
secure credentials <text>	Selects the RSA/DSA certificates by name for the HTTP server.
secure port <number>	Sets the port number the HTTP server will use over SSL. <number> = port number.
secure protocols ssl3 disable	Disables the protocol.
secure protocols ssl3 enable	Enables the protocol.
secure protocols tls1.0 disable	Disables the protocol.
secure protocols tls1.0 enable	Enables the protocol.
secure protocols tls1.1 disable	Disables the protocol.
secure protocols tls1.1 enable	Enables the protocol.
secure protocols tls1.2 disable	Disables the protocol.
secure protocols tls1.2 enable	Enables the protocol.
show	Displays the current configuration.
show auth	Displays the HTTP server authentication settings.
show history	Displays the last 20 commands entered during the current CLI session.
show log	Displays the HTTP server log.
show statistics	Displays the HTTP statistics.
state disable	Disables the HTTP server.
state enable	Enables the HTTP server.
write	Stores the current configuration in permanent memory.
<b>http post (config-action-http_post:wlan0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the HTTP Post reminder interval. HTTP Post is sent once only.
reminder interval <minutes>	Sets the HTTP Post reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>http post (config-action-http_post:usb0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.

default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the HTTP Post reminder interval. HTTP Post is sent once only.
reminder interval <minutes>	Sets the HTTP Post reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>http post (config-action-http_post:on scheduled reboot) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the HTTP Post reminder interval. HTTP Post is sent once only.
reminder interval <minutes>	Sets the HTTP Post reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>http post (config-action-http_post:eth0 link state change) level commands</b>	
clrscrn	Clears the screen.
connection <instance>	Enters the next lower level. Specify the instance for the next lower level.
default mode	Sets default of simultaneous connection mode.
exit	Exits to the next higher level.
mode sequential	Sets sequential mode; will stop after first connection that goes through.
mode simultaneous	Sets simultaneous mode; will make all possible connections.
no reminder interval	Clears the HTTP Post reminder interval. HTTP Post is sent once only.
reminder interval <minutes>	Sets the HTTP Post reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>icmp (config-icmp) level commands</b>	

clrscrn	Clears the screen.
exit	Exits to the configuration level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Prevents ICMP packets from being sent or received.
state enable	Allows ICMP packets to be sent and received.
write	Stores the current configuration in permanent memory.
<b>if 1 (config-if:eth0) level commands</b>	
clrscrn	Clears the screen.
default gateway <IP address>	Sets the configurable gateway IP address to the default value.
default mtu	Restores the default Maximum Transmission Unit (MTU) size.
default priority	Restores the default priority for the interface.
dhcp client id <text>	Sets the DHCP client ID.
dhcp disable	Disables DHCP.
dhcp enable	Enables DHCP.
dhcp renew	Force DHCP to renew
domain <text>	Sets the domain name. <text> = name of the domain.
exit	Exits to the config level.
failover	Enter failover configuration level
hostname <text>	Sets the host name. <text> = name of the host.
if <instance>	Changes to the interface configuration level.
ip address <ip address/cidr>	Sets the IP address and network mask. Formats accepted: 192.168.1.1 (default mask) 192.168.1.1/24 (CIDR) "192.168.1.1 255.255.255.0" (explicit mask)
ipv4 state disable	Disables IPv4 for the interface.
ipv4 state enable	Enables IPv4 for the interface.
ipv6 address <ipv6 address/prefix>	Sets the IPv6 static address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 auto configure enable	Enables IPv6 stateless address autoconfiguration.
ipv6 default gateway <ipv6 address>	Sets the IPv6 default gateway. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 dhcp enable	Enables IPv6 DHCP.
ipv6 domain <text>	Sets the IPv6 domain name. <text> = name of the domain.
ipv6 primary dns <ipv6 address>	Sets the IPv6 address of the primary DNS server. IPv6

	addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 state enable	Enables IPv6 for the interface.
link	Enter link configuration level
mtu <bytes>	Sets the Maximum Transmission Unit (MTU) size.
no default gateway	Clears the default gateway.
no dhcp client id	Clears the DHCP client ID.
no domain	Clears the domain name.
no hostname	Clears the host name.
no ip address	Clears the IP address.
no ipv6 address	Clears the IPv6 static address.
no ipv6 default gateway	Clears the IPv6 default gateway.
no ipv6 domain	Clears the IPv6 domain name.
no ipv6 primary dns	Clears the IPv6 address of the primary DNS server.
no ipv6 secondary dns	Clears the IPv6 address of the secondary DNS server.
no primary dns	Clears the name of the primary DNS server.
no secondary dns	Clears the name of the secondary DNS server.
primary dns <IP address>	Sets the IP address of the primary DNS server.
priority <number>	Sets the priority for interface. <number> = priority number.
qos	Enter QoS configuration level
secondary dns <IP address>	Sets the IP address of the secondary DNS server.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Show interface status
state disable	Disables the interface.
state enable	Enables the interface.
write	Stores the current configuration in permanent memory.
<b>if 2 (config-if:wlan0) level commands</b>	
clrscrn	Clears the screen.
default gateway <IP address>	Sets the configurable gateway IP address to the default value.
default mtu	Restores the default Maximum Transmission Unit (MTU) size.
default priority	Restores the default priority for the interface.
dhcp client id <text>	Sets the DHCP client ID.
dhcp disable	Disables DHCP.
dhcp enable	Enables DHCP.
dhcp renew	Force DHCP to renew
domain <text>	Sets the domain name. <text> = name of the domain.
exit	Exits to the config level.
failover	Enter failover configuration level

hostname <text>	Sets the host name. <text> = name of the host.
if <instance>	Changes to the interface configuration level.
ip address <ip address/cidr>	Sets the IP address and network mask. Formats accepted: 192.168.1.1 (default mask) 192.168.1.1/24 (CIDR) "192.168.1.1 255.255.255.0" (explicit mask)
ipv4 state disable	Disables IPv4 for the interface.
ipv4 state enable	Enables IPv4 for the interface.
ipv6 address <ipv6 address/prefix>	Sets the IPv6 static address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 auto configure enable	Enables IPv6 stateless address autoconfiguration.
ipv6 default gateway <ipv6 address>	Sets the IPv6 default gateway. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 dhcp enable	Enables IPv6 DHCP.
ipv6 domain <text>	Sets the IPv6 domain name. <text> = name of the domain.
ipv6 primary dns <ipv6 address>	Sets the IPv6 address of the primary DNS server. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 state enable	Enables IPv6 for the interface.
link	Enter link configuration level
mtu <bytes>	Sets the Maximum Transmission Unit (MTU) size.
no default gateway	Clears the default gateway.
no dhcp client id	Clears the DHCP client ID.
no domain	Clears the domain name.
no hostname	Clears the host name.
no ip address	Clears the IP address.
no ipv6 address	Clears the IPv6 static address.
no ipv6 default gateway	Clears the IPv6 default gateway.
no ipv6 domain	Clears the IPv6 domain name.
no ipv6 primary dns	Clears the IPv6 address of the primary DNS server.
no ipv6 secondary dns	Clears the IPv6 address of the secondary DNS server.
no primary dns	Clears the name of the primary DNS server.
no secondary dns	Clears the name of the secondary DNS server.
primary dns <IP address>	Sets the IP address of the primary DNS server.

priority <number>	Sets the priority for interface. <number> = priority number.
qos	Enter QoS configuration level
secondary dns <IP address>	Sets the IP address of the secondary DNS server.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Show interface status
state disable	Disables the interface.
state enable	Enables the interface.
write	Stores the current configuration in permanent memory.
<b>if 3 (config-if:usb0) level commands</b>	
clrscrn	Clears the screen.
default gateway <IP address>	Sets the configurable gateway IP address to the default value.
default mtu	Restores the default Maximum Transmission Unit (MTU) size.
default priority	Restores the default priority for the interface.
dhcp client id <text>	Sets the DHCP client ID.
dhcp disable	Disables DHCP.
dhcp enable	Enables DHCP.
dhcp renew	Force DHCP to renew
domain <text>	Sets the domain name. <text> = name of the domain.
exit	Exits to the config level.
failover	Enter failover configuration level
hostname <text>	Sets the host name. <text> = name of the host.
if <instance>	Changes to the interface configuration level.
ip address <ip address/cidr>	Sets the IP address and network mask. Formats accepted: 192.168.1.1 (default mask) 192.168.1.1/24 (CIDR) "192.168.1.1 255.255.255.0" (explicit mask)
ipv4 state disable	Disables IPv4 for the interface.
ipv4 state enable	Enables IPv4 for the interface.
ipv6 address <ipv6 address/prefix>	Sets the IPv6 static address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 auto configure enable	Enables IPv6 stateless address autoconfiguration.
ipv6 default gateway <ipv6 address>	Sets the IPv6 default gateway. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 dhcp enable	Enables IPv6 DHCP.
ipv6 domain <text>	Sets the IPv6 domain name. <text> = name of the do-

	main.
ipv6 primary dns <ipv6 address>	Sets the IPv6 address of the primary DNS server. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
ipv6 state enable	Enables IPv6 for the interface.
link	Enter link configuration level
mtu <bytes>	Sets the Maximum Transmission Unit (MTU) size.
no default gateway	Clears the default gateway.
no dhcp client id	Clears the DHCP client ID.
no domain	Clears the domain name.
no hostname	Clears the host name.
no ip address	Clears the IP address.
no ipv6 address	Clears the IPv6 static address.
no ipv6 default gateway	Clears the IPv6 default gateway.
no ipv6 domain	Clears the IPv6 domain name.
no ipv6 primary dns	Clears the IPv6 address of the primary DNS server.
no ipv6 secondary dns	Clears the IPv6 address of the secondary DNS server.
no primary dns	Clears the name of the primary DNS server.
no secondary dns	Clears the name of the secondary DNS server.
primary dns <IP address>	Sets the IP address of the primary DNS server.
priority <number>	Sets the priority for interface. <number> = priority number.
qos	Enter QoS configuration level
secondary dns <IP address>	Sets the IP address of the secondary DNS server.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Show interface status
state disable	Disables the interface.
state enable	Enables the interface.
write	Stores the current configuration in permanent memory.
<b>ip (config-ip) level commands</b>	
clrscrn	Clears the screen.
default ip time to live	Restores the default IP time to live.
default multicast time to live	Restores the default IP multicast time to live, which is one hop.
exit	Exits to the configuration level.
ip time to live <hops>	Sets the IP time to live, known by SNMP as 'ipDefaultTTL'. <hops> = number of hops that a typical IP packet is allowed to live.
multicast time to live <hops>	Sets the IP multicast time to live. <hops> = number of hops that a multicast IP packet is allowed to live.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current



	CLI session.
write	Stores the current configuration in permanent memory.
<b>key 1 (config-profile-security-wep-key:default_infra2:1) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
key <hexadecimal>	Sets WEP key. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
key text <text>	Sets WEP key. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
no key	Removes WEP key.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>key 2 (config-profile-security-wep-key:default_infra2:2) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
key <hexadecimal>	Sets WEP key. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
key text <text>	Sets WEP key. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
no key	Removes WEP key.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>key 3 (config-profile-security-wep-key:default_infra2:3) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
key <hexadecimal>	Sets WEP key. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.

key text <text>	Sets WEP key. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
no key	Removes WEP key.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>key 4 (config-profile-security-wep-key:default_infra2:4) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
key <hexadecimal>	Sets WEP key. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
key text <text>	Sets WEP key. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
no key	Removes WEP key.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>line 1 (line:1) level commands</b>	
auto show statistics	Continuously displays line statistics.
baud rate <bits per second>	Sets the line speed. <bits per second> = the speed. Standard speeds include 1200, 2400, 4800, 9600, 19200, and so on.
clear line counters	Sets the serial counters to zero.
clrscrn	Clears the screen.
command mode always	Sets the current line to always be in command mode.
command mode echo serial string disable	Disables user-defined serial boot string to be echoed in the CLI.
command mode echo serial string enable	Enables user-defined serial boot string to be echoed in the CLI.
command mode serial string	Enables user to enter a custom string at boot time to enter command mode.
command mode serial string <string>	Sets a string that can be entered at boot time to enter command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF. Within {} specify decimal milliseconds time delay.
command mode signon message <string>	Sets a sign-on message that is sent from the serial port when the device boots and when the line is in command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF.
command mode wait time <milliseconds>	Sets boot-up wait time for command mode serial string. <milliseconds> = wait time.

configure current settings	Configures line with the current value of settings.
data bits 7	Uses seven bits for data on the line.
data bits 8	Uses eight bits for data on the line.
default baud rate	Restores the default speed of 9600 bits per second.
default data bits	Restores the default of eight data bits.
default flow control	Restores the default of no flow control.
default full duplex termination	Restores the default termination on this line.
default parity	Restores the default of no parity.
default stop bits	Restores the default of one stop bit.
default threshold	Restores the factory default threshold.
default xoff char	Restores the default xoff character on this line.
default xon char	Restores the default xon character on this line.
exit	Exits to the enable level
flow control hardware	Uses hardware (RTS/CTS) flow control on the line.
flow control none	Does not provide flow control on the line.
flow control software	Uses software (xon/xoff characters) flow control on the line.
full duplex termination disabled	Disables line termination.
full duplex termination termination on rx	Sets line termination on Rx only.
full duplex termination termination on tx	Sets line termination on Tx only.
full duplex termination termination on tx and rx	Sets line termination on Tx and Rx.
gap timer <milliseconds>	Sets the gap timer in milliseconds. If some data has been received, it will be forwarded after this time since the last character.
interface rs232	Sets the line interface to RS232.
interface rs485 full-duplex	Sets the line interface to RS485 in full-duplex mode.
interface rs485 half-duplex	Sets the line interface to RS485 in half-duplex mode.
kill session	Kills command mode session on the Line
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
name <text>	Sets the name for this line.
no clear line counters	Restores the serial counters to the aggregate values.
no command mode	Disables command mode for the current line.
no command mode signon message	Clears the signon message displayed at boot time and when entering command mode.
no gap timer	Removes the gap timer, so forwarding depends on the line speed.
no name	Removes the name of this line.
parity even	Uses a parity bit on the line for even parity.
parity none	Does not use a parity bit on the line.
parity odd	Uses a parity bit on the line for odd parity.
protocol modbus ascii	Applies Modbus ASCII protocol on the line.
protocol modbus rtu	Applies Modbus RTU protocol on the line.
protocol none	Uses no protocol on the line.
protocol tunnel	Applies tunnel protocol on the line.
reassert	Asserts line status with current configured values.

show	Displays the current status.
show command mode	Shows the command mode settings for the current line.
show history	Displays the last 20 commands entered during the current CLI session.
show line	Displays the current configuration.
show statistics	Shows the line statistics.
state disable	Disables the line so data cannot be sent/received.
state enable	Enables the line so data can be sent/received.
stop bits 1	Uses one stop bit after data on the line.
stop bits 2	Uses two stop bits after data on the line.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
termination disable	Refrains from terminating the line.
termination enable	Enables 120 ohm line termination in RS485 half-duplex mode.
threshold <bytes>	Sets the threshold in bytes. After this many bytes are received, they are forwarded without delay.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
xoff char <control>	Sets the xoff character for use with software flow control on this line. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
xon char <control>	Sets the xon character for use with software flow control on this line. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
<b>line 1 (config-mach10-line:1) level commands</b>	
clrscrn	Clears the screen.
command delimiter <text>	Sets the command delimiter.
content check interval <hours>	Sets the firmware and configuration check interval.
default command delimiter	Restores the command delimiter.
default content check interval	Restores the default firmware and configuration check interval.
default local port	Clears the local port for Mach10 client.
default status update interval	Restores the default status update interval.
exit	Exits to the config-mach10 level.
line <number>	Change to line configuration level.
local port <number>	Sets the local port for Mach10 client. When configured, a total of 16 consecutive ports will be reserved.
no project tag	Restores the default Project Tag.
project tag <text>	Sets the Project Tag.
show	Displays the current configuration.

show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables command processing on line.
state enable	Enables command processing on line.
status update interval <minutes>	Sets the status update interval.
write	Stores the current configuration in permanent memory.
<b>line 2 (line:2) level commands</b>	
auto show statistics	Continuously displays line statistics.
baud rate <bits per second>	Sets the line speed. <bits per second> = the speed. Standard speeds include 1200, 2400, 4800, 9600, 19200, and so on.
clear line counters	Sets the serial counters to zero.
clrscrn	Clears the screen.
command mode always	Sets the current line to always be in command mode.
command mode echo serial string disable	Disables user-defined serial boot string to be echoed in the CLI.
command mode echo serial string enable	Enables user-defined serial boot string to be echoed in the CLI.
command mode serial string	Enables user to enter a custom string at boot time to enter command mode.
command mode serial string <string>	Sets a string that can be entered at boot time to enter command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF. Within {} specify decimal milliseconds time delay.
command mode signon message <string>	Sets a sign-on message that is sent from the serial port when the device boots and when the line is in command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF.
command mode wait time <milliseconds>	Sets boot-up wait time for command mode serial string. <milliseconds> = wait time.
configure current settings	Configures line with the current value of settings.
data bits 7	Uses seven bits for data on the line.
data bits 8	Uses eight bits for data on the line.
default baud rate	Restores the default speed of 9600 bits per second.
default data bits	Restores the default of eight data bits.
default flow control	Restores the default of no flow control.
default full duplex termination	Restores the default termination on this line.
default parity	Restores the default of no parity.
default stop bits	Restores the default of one stop bit.
default threshold	Restores the factory default threshold.
default xoff char	Restores the default xoff character on this line.
default xon char	Restores the default xon character on this line.
exit	Exits to the enable level
flow control hardware	Uses hardware (RTS/CTS) flow control on the line.
flow control none	Does not provide flow control on the line.
flow control software	Uses software (xon/xoff characters) flow control on the line.
full duplex termination disabled	Disables line termination.

full duplex termination termination on rx	Sets line termination on Rx only.
full duplex termination termination on tx	Sets line termination on Tx only.
full duplex termination termination on tx and rx	Sets line termination on Tx and Rx.
gap timer <milliseconds>	Sets the gap timer in milliseconds. If some data has been received, it will be forwarded after this time since the last character.
interface rs232	Sets the line interface to RS232.
interface rs485 full-duplex	Sets the line interface to RS485 in full-duplex mode.
interface rs485 half-duplex	Sets the line interface to RS485 in half-duplex mode.
kill session	Kills command mode session on the Line
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
name <text>	Sets the name for this line.
no clear line counters	Restores the serial counters to the aggregate values.
no command mode	Disables command mode for the current line.
no command mode signon message	Clears the signon message displayed at boot time and when entering command mode.
no gap timer	Removes the gap timer, so forwarding depends on the line speed.
no name	Removes the name of this line.
parity even	Uses a parity bit on the line for even parity.
parity none	Does not use a parity bit on the line.
parity odd	Uses a parity bit on the line for odd parity.
protocol modbus ascii	Applies Modbus ASCII protocol on the line.
protocol modbus rtu	Applies Modbus RTU protocol on the line.
protocol none	Uses no protocol on the line.
protocol tunnel	Applies tunnel protocol on the line.
reassert	Asserts line status with current configured values.
show	Displays the current status.
show command mode	Shows the command mode settings for the current line.
show history	Displays the last 20 commands entered during the current CLI session.
show line	Displays the current configuration.
show statistics	Shows the line statistics.
state disable	Disables the line so data cannot be sent/received.
state enable	Enables the line so data can be sent/received.
stop bits 1	Uses one stop bit after data on the line.
stop bits 2	Uses two stop bits after data on the line.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
termination disable	Refrains from terminating the line.
termination enable	Enables 120 ohm line termination in RS485 half-duplex mode.
threshold <bytes>	Sets the threshold in bytes. After this many bytes are received, they are forwarded without delay.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line

	(serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
xoff char <control>	Sets the xoff character for use with software flow control on this line. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
xon char <control>	Sets the xon character for use with software flow control on this line. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
<b>line 2 (config-mach10-line:2) level commands</b>	
clrscrn	Clears the screen.
command delimiter <text>	Sets the command delimiter.
content check interval <hours>	Sets the firmware and configuration check interval.
default command delimiter	Restores the command delimiter.
default content check interval	Restores the default firmware and configuration check interval.
default local port	Clears the local port for Mach10 client.
default status update interval	Restores the default status update interval.
exit	Exits to the config-mach10 level.
line <number>	Change to line configuration level.
local port <number>	Sets the local port for Mach10 client. When configured, a total of 16 consecutive ports will be reserved.
no project tag	Restores the default Project Tag.
project tag <text>	Sets the Project Tag.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables command processing on line.
state enable	Enables command processing on line.
status update interval <minutes>	Sets the status update interval.
write	Stores the current configuration in permanent memory.
<b>line 3 (config-mach10-line:3) level commands</b>	
clrscrn	Clears the screen.
command delimiter <text>	Sets the command delimiter.
content check interval <hours>	Sets the firmware and configuration check interval.
default command delimiter	Restores the command delimiter.
default content check interval	Restores the default firmware and configuration check interval.
default local port	Clears the local port for Mach10 client.
default status update interval	Restores the default status update interval.
exit	Exits to the config-mach10 level.
line <number>	Change to line configuration level.
local port <number>	Sets the local port for Mach10 client. When configured, a

	total of 16 consecutive ports will be reserved.
no project tag	Restores the default Project Tag.
project tag <text>	Sets the Project Tag.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables command processing on line.
state enable	Enables command processing on line.
status update interval <minutes>	Sets the status update interval.
write	Stores the current configuration in permanent memory.
<b>link (config-wlan:wlan0) level commands</b>	
antenna diversity antenna 1	Set antenna selection to 1
antenna diversity antenna 2	Set antenna selection to 2
antenna diversity enabled	Set antenna diversity to enabled.
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
band 2.4 ghz only	Sets the radio band to 2.4 GHz only.
band 5 ghz only	Sets the radio band to 5 GHz only.
band auto	Sets the radio band to Auto.
cancel wps	Cancel wi-fi protected setup operation.
choice <instance>	Enters the next lower level. Specify the instance for the next lower level.
clrscrn	Clears the screen.
debugging level debug	Sets the WLAN debugging level to Debug.
debugging level dump	Sets the WLAN debugging level to Dump, the most verbose option.
debugging level error	Sets the WLAN debugging level to Error, which shows only errors.
debugging level info	Sets the WLAN debugging level to Info.
debugging level warning	Sets the WLAN debugging level to Warning.
default antenna diversity	Restore the default value for antenna diversity.
default band	Restores the radio band to the default value (Auto).
default debugging level	Sets the WLAN debugging level to its default value, Info.
default scanning latency	Restores scanning latency to the default value (Standard).
exit	Exit back to interface configuration level
no scanning channel list	Clears the scanning channel list.
scan <ssid>	Scan the radio environment for networks.
scanning channel list <text>	Sets the scanning channel list.
scanning latency enhanced throughput	Sets scanning latency to Enhanced Throughput.
scanning latency standard	Sets scanning latency to Standard.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show wps information	Show the configuration received by wi-fi protected setup.
show wps information with secrets	Show the configuration received by wi-fi protected setup with secrets.



show wps status	Show status of WPS operation.
start wps	Starts wi-fi protected setup operation.
start wps pin	Starts wi-fi protected setup operation.
status	Show link status
wifi direct go mode disable	Disables WiFi Direct Group Owner Mode.
wifi direct go mode enable	Enables WiFi Direct Group Owner Mode.
write	Stores the current configuration in permanent memory.
<b>link (config-ethernet:eth0) level commands</b>	
clrscrn	Clears the screen.
default duplex	Restores the default duplex setting, which is auto.
default speed	Restores the default speed setting, which is auto-negotiate.
duplex auto	Sets duplex mode to auto.
duplex full	Sets duplex mode to full.
duplex half	Sets duplex mode to half.
exit	Exit back to interface configuration level
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
speed 10	Sets the speed of the Ethernet link to 10 Mbps.
speed 100	Sets the speed of the Ethernet link to 100 Mbps.
speed auto	Sets the speed of the Ethernet link to auto-negotiate.
write	Stores the current configuration in permanent memory.
<b>log (config-diagnostics-log) level commands</b>	
clrscrn	Clears the screen.
default max length	Restores the factory default maximum Log file size.
default output	Restores the default log output, which is disable.
exit	Exits to the next higher level.
max length <Kbytes>	Sets the maximum size in Kbytes for the Log file.
output disable	Disables log output.
output filesystem	Enables log to filesystem.
output line <number>	Enables log to serial line.
output usb <number>	Enables log to usb line.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 1 (config-mac_filter:1) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC"

	12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 2 (config-mac_filter:2) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 3 (config-mac_filter:3) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 4 (config-mac_filter:4) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.

mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 5 (config-mac_filter:5) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 6 (config-mac_filter:6) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 7 (config-mac_filter:7) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.

default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mac address filter 8 (config-mac_filter:8) level commands</b>	
action accept	Sets the action to ACCEPT.
action drop	Sets the action to DROP.
clrscrn	Clears the screen.
default action	Restores the default value of action (ACCEPT).
exit	Exits to the config-gateway level.
mac address <hexadecimal>	Sets the filter MAC Address. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
mac address filter <number>	Change to config mac filter level.
no mac address	Removes the filter MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>mach10 (config-mach10) level commands</b>	
apply configuration updates always	Sets the action on configuration updates to Always, signifying that the device will always apply configuration updates.
apply configuration updates if unchanged	Sets the action on configuration updates to If unchanged, signifying that the device will only apply configuration updates if no changes have been made locally.
apply configuration updates never	Sets the action on configuration updates to Never, signifying no configuration updates will be applied.
apply firmware updates disable	Restores the default action on new firmware (do not apply).
apply firmware updates enable	Automatically apply new firmware.
clrscrn	Clears the screen.
content check interval <hours>	Sets the firmware and configuration check interval.
default apply configuration updates	Restores the default setting for configuration updates (Never).
default content check interval	Restores the default firmware and configuration check interval.
default host	Restores the Hostname or IP address of Mach 10.
default local port	Clears the local port for Mach10 client.

default mqtt host	Restores the Hostname or IP address of MQTT server.
default mqtt local port	Clears the local port for Mach10 MQTT client.
default mqtt port	Restores the Port of MQTT server.
default port	Restores the Port of Mach 10.
default status update interval	Restores the default status update interval.
device description <text>	Sets the Device Description.
device id <text>	Sets the Device ID.
device key <text>	Sets the Device Key.
device name <text>	Sets the Device Name.
exit	Returns to the config level.
host <text>	Sets the Hostname or IP address of Mach 10.
line <number>	Change to line configuration level.
local port <number>	Sets the local port for Mach10 client. When configured, a total of 16 consecutive ports will be reserved.
mqtt host <text>	Sets the Hostname or IP address of MQTT server.
mqtt local port <number>	Sets the local port for Mach10 MQTT client. When configured, a total of 32 consecutive ports will be reserved.
mqtt port <number>	Sets the Port of MQTT server.
mqtt security disable	Disables SSL for MQTT.
mqtt security enable	Enables SSL for MQTT.
mqtt state disable	Disables MQTT.
mqtt state enable	Enables MQTT.
no device description	Removes the Device Description.
no device id	Removes the Device ID.
no device key	Removes the Device Key.
no device name	Removes the Device Name.
port <number>	Sets the Port of Mach 10.
reboot after update disable	Restores the default action when new configuration is applied (do not reboot) NOTE: The device will always reboot after a firmware update.
reboot after update enable	Enables automatic reboot when new configuration is applied.
secure port disable	Disables https for Mach10 client.
secure port enable	Enables https for Mach10 client.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays the MACH10 statistics.
state disable	Disables the Mach10 client.
state enable	Enables the Mach10 client.
status update interval <minutes>	Sets the status update interval.
validate certificates disable	Disables certificate validation for Mach10 client.
validate certificates enable	Enables certificate validation for Mach10 client.
write	Stores the current configuration in permanent memory.
<b>mass storage (filesystem-mass_storage) level commands</b>	
clrscrn	Clears the screen.

exit	Exits to the next higher level.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
usb auto mount disable	Disables automatic mount of connected USB drives.
usb auto mount enable	Enables automatic mount of connected USB drives.
write	Stores the current configuration in permanent memory.
<b>modbus (modbus) level commands</b>	
additional port <number>	Sets an additional TCP server port.
clrscrn	Clears the screen.
default response timeout	Restores the default Modbus Response Timeout.
exit	Exits to the config level.
kill connection <index>	Kills modbus connection selected by index from show connections.
no additional port	Removes the additional TCP server port.
response timeout <milliseconds>	Sets the Modbus Response Timeout in milliseconds.
rss	Enters the next lower level.
show	Displays the current configuration.
show connections	Displays connections.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays statistics.
tcp server state disable	Disables the Modbus TCP Server.
tcp server state enable	Enables the Modbus TCP Server.
write	Stores the current configuration in permanent memory.
<b>modem (tunnel-modem:3) level commands</b>	
clrscrn	Clears the screen.
connect string <text>	Sets the CONNECT string used in modem emulation. <string> = connect string.
default incoming connection	Default disables incoming network connections.
default response type	Default uses text type responses.
display remote ip disable	The incoming RING has nothing following it.
display remote ip enable	The incoming RING is followed by the IP address of the caller.
echo commands disable	Does not echo modem commands.
echo commands enable	Echoes modem commands.
echo pluses disable	Does not echo the +++ characters when entering modem command mode.
echo pluses enable	Echoes the +++ characters when entering modem command mode.
error unknown commands disable	Returns OK on unknown AT commands.
error unknown commands enable	Returns an error upon unknown AT commands.
exit	Returns to the tunnel level.
incoming connection automatic	Automatically answer incoming network connections.
incoming connection disabled	Disable incoming network connections.
incoming connection manual	Wait for an ATA command before answering an incoming network connection.

no connect string	Removes optional CONNECT string information for modem emulation.
reassert	Asserts tunnel modem status with current configured values.
response type numeric	Uses numeric type responses.
response type text	Uses text type responses.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel modem status.
verbose response disable	Does not send Modem Response Codes.
verbose response enable	Sends Modem Response Codes out on the Serial Line.
write	Stores the current configuration in permanent memory.
<b>modem (tunnel-modem:2) level commands</b>	
clrscrn	Clears the screen.
connect string <text>	Sets the CONNECT string used in modem emulation. <string> = connect string.
default incoming connection	Default disables incoming network connections.
default response type	Default uses text type responses.
display remote ip disable	The incoming RING has nothing following it.
display remote ip enable	The incoming RING is followed by the IP address of the caller.
echo commands disable	Does not echo modem commands.
echo commands enable	Echoes modem commands.
echo pluses disable	Does not echo the +++ characters when entering modem command mode.
echo pluses enable	Echoes the +++ characters when entering modem command mode.
error unknown commands disable	Returns OK on unknown AT commands.
error unknown commands enable	Returns an error upon unknown AT commands.
exit	Returns to the tunnel level.
incoming connection automatic	Automatically answer incoming network connections.
incoming connection disabled	Disable incoming network connections.
incoming connection manual	Wait for an ATA command before answering an incoming network connection.
no connect string	Removes optional CONNECT string information for modem emulation.
reassert	Asserts tunnel modem status with current configured values.
response type numeric	Uses numeric type responses.
response type text	Uses text type responses.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel modem status.
verbose response disable	Does not send Modem Response Codes.
verbose response enable	Sends Modem Response Codes out on the Serial Line.
write	Stores the current configuration in permanent memory.

<b>modem (tunnel-modem:1) level commands</b>	
clrscrn	Clears the screen.
connect string <text>	Sets the CONNECT string used in modem emulation. <string> = connect string.
default incoming connection	Default disables incoming network connections.
default response type	Default uses text type responses.
display remote ip disable	The incoming RING has nothing following it.
display remote ip enable	The incoming RING is followed by the IP address of the caller.
echo commands disable	Does not echo modem commands.
echo commands enable	Echoes modem commands.
echo pluses disable	Does not echo the +++ characters when entering modem command mode.
echo pluses enable	Echoes the +++ characters when entering modem command mode.
error unknown commands disable	Returns OK on unknown AT commands.
error unknown commands enable	Returns an error upon unknown AT commands.
exit	Returns to the tunnel level.
incoming connection automatic	Automatically answer incoming network connections.
incoming connection disabled	Disable incoming network connections.
incoming connection manual	Wait for an ATA command before answering an incoming network connection.
no connect string	Removes optional CONNECT string information for modem emulation.
reassert	Asserts tunnel modem status with current configured values.
response type numeric	Uses numeric type responses.
response type text	Uses text type responses.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays tunnel modem status.
verbose response disable	Does not send Modem Response Codes.
verbose response enable	Sends Modem Response Codes out on the Serial Line.
write	Stores the current configuration in permanent memory.
<b>ntp (config-clock-ntp) level commands</b>	
clrscrn	Clears the screen.
default server	Restores the default NTP server address.
exit	Exits to the next higher level.
server <text>	Sets the NTP server address.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>on scheduled reboot (config-action:on scheduled reboot) level commands</b>	
clrscrn	Clears the screen.
default delay	Resets alarm processing delay to its default value.



delay <seconds>	Sets the delay in processing the alarm. Alarm actions will not be executed if the cause is corrected within this time.
email	Enters the next lower level.
exit	Exits to the config alarm level.
ftp put	Enters the next lower level.
http post	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays statistics.
snmp trap	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>packing (tunnel-packing:3) level commands</b>	
clrscrn	Clears the screen.
default packing mode	Sets to default packing mode, which is 'Disable'
default send character	Removes the send character for packing mode.
default threshold	Restores the default threshold.
default timeout	Restores the default packing mode timeout.
exit	Returns to the tunnel level.
no trailing character	Removes the trailing character for packing mode.
packing mode disable	Disables packing. Data is sent to the network when received.
packing mode send character	Sets packing mode to accumulate data and transmit it upon receiving the configured send character on the line (serial port).
packing mode timeout	Sets packing mode to accumulate data and transmit it after a specified amount of time (timeout).
send character <control>	Sets the send character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
threshold <bytes>	Sets the threshold (byte count). If the queued data reaches this threshold then the data will be sent. <bytes> = number of bytes in the threshold.
timeout <milliseconds>	Sets the timeout value for packing mode in milliseconds. <milliseconds> = timeout value, in milliseconds.
trailing character <control>	Sets the trailing character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>packing (tunnel-packing:2) level commands</b>	
clrscrn	Clears the screen.
default packing mode	Sets to default packing mode, which is 'Disable'
default send character	Removes the send character for packing mode.

default threshold	Restores the default threshold.
default timeout	Restores the default packing mode timeout.
exit	Returns to the tunnel level.
no trailing character	Removes the trailing character for packing mode.
packing mode disable	Disables packing. Data is sent to the network when received.
packing mode send character	Sets packing mode to accumulate data and transmit it upon receiving the configured send character on the line (serial port).
packing mode timeout	Sets packing mode to accumulate data and transmit it after a specified amount of time (timeout).
send character <control>	Sets the send character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
threshold <bytes>	Sets the threshold (byte count). If the queued data reaches this threshold then the data will be sent. <bytes> = number of bytes in the threshold.
timeout <milliseconds>	Sets the timeout value for packing mode in milliseconds. <milliseconds> = timeout value, in milliseconds.
trailing character <control>	Sets the trailing character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>packing (tunnel-packing:1) level commands</b>	
clrscrn	Clears the screen.
default packing mode	Sets to default packing mode, which is 'Disable'
default send character	Removes the send character for packing mode.
default threshold	Restores the default threshold.
default timeout	Restores the default packing mode timeout.
exit	Returns to the tunnel level.
no trailing character	Removes the trailing character for packing mode.
packing mode disable	Disables packing. Data is sent to the network when received.
packing mode send character	Sets packing mode to accumulate data and transmit it upon receiving the configured send character on the line (serial port).
packing mode timeout	Sets packing mode to accumulate data and transmit it after a specified amount of time (timeout).
send character <control>	Sets the send character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.

show history	Displays the last 20 commands entered during the current CLI session.
threshold <bytes>	Sets the threshold (byte count). If the queued data reaches this threshold then the data will be sent. <bytes> = number of bytes in the threshold.
timeout <milliseconds>	Sets the timeout value for packing mode in milliseconds. <milliseconds> = timeout value, in milliseconds.
trailing character <control>	Sets the trailing character for packing mode. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
write	Stores the current configuration in permanent memory.
<b>password (tunnel-accept-password:3) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no password	Removes the password so connections will be accepted unchallenged.
password <text>	Sets the password required on the network side of the tunnel to begin a connection.
prompt disable	Inhibits any prompting for password on the network side of the tunnel.
prompt enable	Sets up so a user on the network side of the tunnel will be prompted for a password.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>password (tunnel-accept-password:2) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no password	Removes the password so connections will be accepted unchallenged.
password <text>	Sets the password required on the network side of the tunnel to begin a connection.
prompt disable	Inhibits any prompting for password on the network side of the tunnel.
prompt enable	Sets up so a user on the network side of the tunnel will be prompted for a password.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>password (tunnel-accept-password:1) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no password	Removes the password so connections will be accepted unchallenged.
password <text>	Sets the password required on the network side of the tunnel to begin a connection.

prompt disable	Inhibits any prompting for password on the network side of the tunnel.
prompt enable	Sets up so a user on the network side of the tunnel will be prompted for a password.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 1 (config-portforwarding:1) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 2 (config-portforwarding:2) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding

	rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 3 (config-portforwarding:3) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 4 (config-portforwarding:4) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 5 (config-portforwarding:5) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port

	forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 6 (config-portforwarding:6) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule.

	<text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 7 (config-portforwarding:7) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.
no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>port forwarding rule 8 (config-portforwarding:8) level commands</b>	
clrscrn	Clears the screen.
default protocol	Restores the default value of the protocol (Both).
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for port forwarding rule <text> = friendly name
ingress ip address <text>	Sets the original WAN destination IP address for port forwarding rule.
ip address <text>	Sets the LAN destination IP address for port forwarding rule.
no friendly name	Remove the friendly name.
no ingress ip address	Clears the original WAN destination IP address for port forwarding rule.
no ip address	Clears the LAN destination IP address for port forwarding rule.



no port or range	Clears the WAN port or range for port forwarding rule.
no target port	Clears the LAN destination port for port forwarding rule.
port forwarding rule <number>	Change to config gateway port forwarding level.
port or range <text>	Sets the WAN port or range for port forwarding rule. <text> = port or range.
protocol both	Sets the protocol to Both (TCP and UDP).
protocol tcp	Sets the protocol to TCP.
protocol udp	Sets the protocol to UDP.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the port forwarding rule.
state enable	Enables the port forwarding rule.
target port <text>	Sets the LAN destination port for port forwarding rule. <text> = port.
write	Stores the current configuration in permanent memory.
<b>python 1 (config-applications-python:1) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
filename <text>	Sets the script path.
no filename	Clear the script path.
no output	Clear the script output path.
no parameters	Clear the script parameters.
onshutdown disable	Do not run the script on shutdown.
onshutdown enable	Run the script on shutdown.
onstart disable	Do not run the script on startup.
onstart enable	Run the script on startup.
output <text>	Sets the script output path.
parameters <text>	Sets the script parameters.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables script.
state enable	Enables script.
write	Stores the current configuration in permanent memory.
<b>python 2 (config-applications-python:2) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
filename <text>	Sets the script path.
no filename	Clear the script path.
no output	Clear the script output path.
no parameters	Clear the script parameters.
onshutdown disable	Do not run the script on shutdown.
onshutdown enable	Run the script on shutdown.
onstart disable	Do not run the script on startup.
onstart enable	Run the script on startup.

output <text>	Sets the script output path.
parameters <text>	Sets the script parameters.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables script.
state enable	Enables script.
write	Stores the current configuration in permanent memory.
<b>python 3 (config-applications-python:3) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
filename <text>	Sets the script path.
no filename	Clear the script path.
no output	Clear the script output path.
no parameters	Clear the script parameters.
onshutdown disable	Do not run the script on shutdown.
onshutdown enable	Run the script on shutdown.
onstart disable	Do not run the script on startup.
onstart enable	Run the script on startup.
output <text>	Sets the script output path.
parameters <text>	Sets the script parameters.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables script.
state enable	Enables script.
write	Stores the current configuration in permanent memory.
<b>python 4 (config-applications-python:4) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
filename <text>	Sets the script path.
no filename	Clear the script path.
no output	Clear the script output path.
no parameters	Clear the script parameters.
onshutdown disable	Do not run the script on shutdown.
onshutdown enable	Run the script on shutdown.
onstart disable	Do not run the script on startup.
onstart enable	Run the script on startup.
output <text>	Sets the script output path.
parameters <text>	Sets the script parameters.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables script.
state enable	Enables script.

write	Stores the current configuration in permanent memory.
<b>qos (config-ethernet-qos:usb0) level commands</b>	
clrscrn	Clears the screen.
default uplink data speed	Restores the default uplink speed.
exit	Exit back to interface configuration level
filter <instance>	Enters the next lower level. Specify the instance for the next lower level.
import filters disable	Do not import QoS filters from other interfaces.
import filters enable	Import QoS filters from other interfaces.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays the current status
state disable	Disables QoS.
state enable	Enables QoS.
uplink data speed <floating point number>	Sets the maximum uplink speed in kbps.
write	Stores the current configuration in permanent memory.
<b>qos (config-wlan-qos:wlan0) level commands</b>	
clrscrn	Clears the screen.
default uplink data speed	Restores the default uplink speed.
exit	Exit back to interface configuration level
filter <instance>	Enters the next lower level. Specify the instance for the next lower level.
import filters disable	Do not import QoS filters from other interfaces.
import filters enable	Import QoS filters from other interfaces.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays the current status
state disable	Disables QoS.
state enable	Enables QoS.
uplink data speed <floating point number>	Sets the maximum uplink speed in kbps.
write	Stores the current configuration in permanent memory.
<b>qos (config-ethernet-qos:eth0) level commands</b>	
clrscrn	Clears the screen.
default uplink data speed	Restores the default uplink speed.
exit	Exit back to interface configuration level
filter <instance>	Enters the next lower level. Specify the instance for the next lower level.
import filters disable	Do not import QoS filters from other interfaces.
import filters enable	Import QoS filters from other interfaces.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays the current status
state disable	Disables QoS.

state enable	Enables QoS.
uplink data speed <floating point number>	Sets the maximum uplink speed in kbps.
write	Stores the current configuration in permanent memory.
<b>reboot schedule (device-reboot-schedule) level commands</b>	
clrscrn	Clears the screen.
default hours	Restores the default hour of day for reboot schedule time.
default interval	Restores the default schedule interval.
default minutes	Restores the default minutes on the hour for reboot schedule.
default schedule	Restores the default reboot schedule type.
default unit	Restores the default reboot schedule interval unit.
exit	Returns to the previous level.
hours <hours>	Sets the hour of day for reboot schedule (Use 24h time).
interval <number>	Sets the reboot schedule interval
minutes <minutes>	Sets the minutes on the hour for reboot schedule.
schedule daily	Sets the reboot schedule type to 'daily'.
schedule interval	Sets the reboot schedule type to 'interval'.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables scheduled reboots.
state enable	Enables scheduled reboots.
unit days	Sets the reboot schedule interval to days.
unit hours	Sets the reboot schedule interval to hours.
unit months	Sets the reboot schedule interval to months.
unit weeks	Sets the reboot schedule interval to weeks.
write	Stores the current configuration in permanent memory.
<b>root level commands</b>	
enable	Enters the enable level.
exit	Exit from the system
iperf <params>	Run iperf with command line parameters passed in quoted string.
ping <host>	Ping destination continuously with 5 second timeout
ping <host> <count>	Ping destination n times with 5 second timeout
ping <host> <count> <timeout>	Ping destination n times with x timeout (in seconds)
ping6 <host>	Ping destination continuously with 5 second timeout
ping6 <host> <count>	Ping destination n times with 5 second timeout
ping6 <host> <count> <timeout>	Ping destination n times with x timeout (in seconds)
show	Show system information
show history	Displays the last 20 commands entered during the current CLI session.
show lines	Show line information
show multicast routes	show state of VIFs and multicast routing tables
show routes	show system routing table
show rules	show system rules
tcpdump <parameters>	dump traffic on a network

trace route <host>	Trace route to destination
trace route <host> <protocol>	Trace route to destination using TCP, ICMP, or UDP
<b>rss (config-rss) level commands</b>	
clear rss	Clear the RSS Feed data
clrscrn	Clears the screen.
default max entries	Restores the default number of RSS feed entries.
exit	Exits to the configuration level.
feed disable	Disables RSS feed.
feed enable	Enables RSS feed.
max entries <number>	Sets the maximum number of RSS feed entries.
persist disable	Disables RSS feed data persistence.
persist enable	Enables RSS feed data persistence.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Display the RSS Feed status
write	Stores the current configuration in permanent memory.
<b>rss (modbus-rss) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the next higher level.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
trace input disable	Disables RSS trace of Modbus PDUs received on the serial line.
trace input enable	Enables RSS trace of Modbus PDUs received on the serial line.
write	Stores the current configuration in permanent memory.
<b>security (config-profile-security:default_infra2) level commands</b>	
advanced	Switch to advanced level
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
basic	Switch to basic level
clrscrn	Clears the screen.
default key type	Restores the key type to the default value (passphrase).
default suite	Restores the security method (suite) to the default value (None).
exit	Exit to the profiles level
key type hex	Sets the key type to hex.
key type passphrase	Sets the key type to passphrase.
no passphrase	Removes the passphrase.
passphrase <text>	Sets the passphrase. Maximum 63 characters. <text> = put quotes around characters that make up the passphrase. Please refer to other equipment manuals to determine the recommended passphrase input style. NOTE: Lantronix recommends using a passphrase of 20 characters or more for maximum security. Spaces and punctua-

	tion characters are permitted.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
suite none	Sets the security suite to None.
suite wep	Sets the security suite to WEP.
suite wpa2-wpa mixed	Sets the security suite to WPA2/WPA Mixed Mode.
wep	Enters the next lower level.
wpax	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>serial (tunnel-serial:3) level commands</b>	
clrscrn	Clears the screen.
default dtr	Restores default DTR control, asserted while connected.
dtr asserted while connected	Asserts DTR whenever a connect or accept mode tunnel connection is active.
dtr continuously asserted	Asserts DTR regardless of any connections.
dtr truport	Asserts DTR to match remote DSR when connected via Telnet.
dtr unasserted	Does not assert DTR.
exit	Returns to the tunnel level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>serial (tunnel-serial:2) level commands</b>	
clrscrn	Clears the screen.
default dtr	Restores default DTR control, asserted while connected.
dtr asserted while connected	Asserts DTR whenever a connect or accept mode tunnel connection is active.
dtr continuously asserted	Asserts DTR regardless of any connections.
dtr truport	Asserts DTR to match remote DSR when connected via Telnet.
dtr unasserted	Does not assert DTR.
exit	Returns to the tunnel level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>serial (tunnel-serial:1) level commands</b>	
clrscrn	Clears the screen.
default dtr	Restores default DTR control, asserted while connected.
dtr asserted while connected	Asserts DTR whenever a connect or accept mode tunnel connection is active.
dtr continuously asserted	Asserts DTR regardless of any connections.
dtr truport	Asserts DTR to match remote DSR when connected via Telnet.
dtr unasserted	Does not assert DTR.

exit	Returns to the tunnel level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>server (ssh-server) level commands</b>	
authorized user <username> <password>	Sets authorized username, password, and optionally RSA and/or DSA public keys
clrscrn	Clears the screen.
delete all authorized users	Removes all authorized users
delete authorized user <username>	Remove an authorized user
exit	Exits to the ssh level.
host generate dsa 1024	Generate DSA public and private keys
host generate dsa 2048	Generate DSA public and private keys
host generate dsa 4096	Generate DSA public and private keys
host generate dsa 512	Generate DSA public and private keys
host generate dsa 768	Generate DSA public and private keys
host generate rsa 1024	Generate RSA public and private keys
host generate rsa 2048	Generate RSA public and private keys
host generate rsa 4096	Generate RSA public and private keys
host generate rsa 512	Generate RSA public and private keys
host generate rsa 768	Generate RSA public and private keys
host keys	Sets RSA or DSA public and/or private keys
no host dsa	Removes DSA public and private keys
no host rsa	Removes RSA public and private keys
show	Show SSH Server settings
show authorized user <username>	Show information for an authorized user
show history	Displays the last 20 commands entered during the current CLI session.
show host dsa	Show full DSA public key
show host rsa	Show full RSA public key
write	Stores the current configuration in permanent memory.
<b>smtp (config-smtp) level commands</b>	
clrscrn	Clears the screen.
default local port	Clears the local port for SMTP client.
default server port	Restores the SMTP server port to its default.
exit	Exits to the configuration level.
from address <text>	Sets the From address for email alerts. <text> = email address to place in the From field of the email alert.
local port <number>	Sets the local port for SMTP client.
no from address	Removes the From address for email alerts.
no overriding domain	Removes the overriding domain name option.
no password	Removes the password.
no server address	Removes the SMTP server address.
no username	Removes the username.
overriding domain <text>	Sets a domain name that will be used when connecting to

	an SMTP server to send an email alert instead of the device domain name in EHLO. <text> = domain name to override the current domain name in EHLO.
password <text>	Sets the password for logging in to the mail server.
server address <text>	Sets an SMTP server address to direct all outbound email messages through a mail server.
server port <number>	Sets the SMTP server port.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the username for logging in to the mail server.
write	Stores the current configuration in permanent memory.
<b>snmp (config-snmp) level commands</b>	
clrscrn	Clears the screen.
exit	Returns to the config level.
no system location	Clears the SNMP system location.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays the SNMP agent status.
snmpd	Enters the next lower level.
system location <text>	Sets the SNMP system location. <text> = location of device.
traps	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>snmp trap (config-action-snmp_trap:wlan0 link state change) level commands</b>	
alarm message <text>	Sets the message to be sent when the alarm turns on.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no alarm message	Removes the alarm message.
no normal message	Removes the normal message.
no reminder interval	Clears the SNMP Trap reminder interval. SNMP Trap is sent once only.
normal message <text>	Sets the message to be sent when the alarm turns off.
reminder interval <minutes>	Sets the SNMP Trap reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Does not send SNMP Trap.
state enable	Sends SNMP Trap when alarm condition is met.
write	Stores the current configuration in permanent memory.
<b>snmp trap (config-action-snmp_trap:usb0 link state change) level commands</b>	
alarm message <text>	Sets the message to be sent when the alarm turns on.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no alarm message	Removes the alarm message.
no normal message	Removes the normal message.



no reminder interval	Clears the SNMP Trap reminder interval. SNMP Trap is sent once only.
normal message <text>	Sets the message to be sent when the alarm turns off.
reminder interval <minutes>	Sets the SNMP Trap reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Does not send SNMP Trap.
state enable	Sends SNMP Trap when alarm condition is met.
write	Stores the current configuration in permanent memory.
<b>snmp trap (config-action-snmp_trap:on scheduled reboot) level commands</b>	
alarm message <text>	Sets the message to be sent when the alarm turns on.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no alarm message	Removes the alarm message.
no normal message	Removes the normal message.
no reminder interval	Clears the SNMP Trap reminder interval. SNMP Trap is sent once only.
normal message <text>	Sets the message to be sent when the alarm turns off.
reminder interval <minutes>	Sets the SNMP Trap reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Does not send SNMP Trap.
state enable	Sends SNMP Trap when alarm condition is met.
write	Stores the current configuration in permanent memory.
<b>snmp trap (config-action-snmp_trap:eth0 link state change) level commands</b>	
alarm message <text>	Sets the message to be sent when the alarm turns on.
clrscrn	Clears the screen.
exit	Exits to the next higher level.
no alarm message	Removes the alarm message.
no normal message	Removes the normal message.
no reminder interval	Clears the SNMP Trap reminder interval. SNMP Trap is sent once only.
normal message <text>	Sets the message to be sent when the alarm turns off.
reminder interval <minutes>	Sets the SNMP Trap reminder interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Does not send SNMP Trap.
state enable	Sends SNMP Trap when alarm condition is met.
write	Stores the current configuration in permanent memory.
<b>snmpd (config-snmp-snmpd) level commands</b>	
authentication password <text>	Sets password used for authentication for agent.
authentication protocol md5	Uses MD5 for authentication for agent.
authentication protocol sha	Uses SHA for authentication for agent.

clrscrn	Clears the screen.
default authentication protocol	Restores to default SNMPv3 authentication method: MD5 for agent.
default port	Restores the SNMP agent port to default: 161.
default privacy protocol	Restores to default SNMPv3 privacy encryption method: DES for agent.
default read community	Restores the SNMP read-only community to default: public
default security	Restores to default SNMPv3 security method: Authentication, No Privacy for agent.
default system description	Restores the SNMP system description to its default.
default system name	Restores the SNMP system name to default: the product name.
default version	Restores to default SNMP version v2c for agent.
default write community	Clears the SNMP read/write community to default: private
exit	Exits to the next higher level.
no authentication password	Clears authentication password for agent.
no privacy password	Clears privacy password for agent.
no system contact	Clears the SNMP system contact.
no username	Clears SNMPv3 username for agent.
port <number>	Sets the SNMP agent port.
privacy password <text>	Sets password used for privacy encryption for agent.
privacy protocol aes	Uses AES for privacy encryption for agent.
privacy protocol des	Uses DES for privacy encryption for agent.
read community <text>	Sets the SNMP read-only community string. <text> = name of the read-only community string to be set.
security authentication and privacy	Authentication and Privacy for agent.
security authentication but no privacy	Authentication, No Privacy for agent.
security no authentication and no priv	No Authentication, No Privacy for agent.
show	Shows the current configuration.
show engine id	Displays the SNMP agent engine ID.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the SNMP agent.
state enable	Enables the SNMP agent.
system contact <text>	Sets the SNMP system contact information. <text> = system contact information.
system description <text>	Sets the SNMP system description. <text> = description of device.
system name <text>	Sets the SNMP system name. <text> = SNMP system name.
username <text>	Sets SNMPv3 username for agent.
version snmpv1	Uses SNMPv1 for agent.
version snmpv2c	Uses SNMPv2c for agent.
version snmpv3	Uses SNMPv3 for agent.
write	Stores the current configuration in permanent memory.
write community <text>	Sets the SNMP read-write community string. <text> = name of the read-write community string to be set.

<b>ssh (ssh) level commands</b>	
client	Enters the SSH Client configuration level.
clrscrn	Clears the screen.
exit	Exits to the enable level.
server	Enters the SSH Server configuration level.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>ssh (config-cli-ssh) level commands</b>	
clrscrn	Clears the screen.
default max sessions	Restores the default maximum allowed concurrent incoming SSH sessions.
default port	Restores the default local port to the SSH server.
exit	Exits to the CLI level.
max sessions <number>	Sets the maximum allowed concurrent incoming SSH sessions. <number> = number of sessions.
port <number>	Sets the local port that the SSH server uses. <number> = local port number.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays the SSH server statistics.
state disable	Disables the SSH Server.
state enable	Enables the SSH Server.
write	Stores the current configuration in permanent memory.
<b>ssl (ssl) level commands</b>	
clrscrn	Clears the screen.
credentials	Enters the SSL credentials configuration level.
delete csr	Delete generated CSR (Certificate Signing Request).
exit	Exits to the enable level.
generate csr	Generate a new CSR (Certificate Signing Request).
show history	Displays the last 20 commands entered during the current CLI session.
trusted authorities	Enters the SSL configuration level.
view csr	View generated CSR (Certificate Signing Request).
write	Stores the current configuration in permanent memory.
<b>static leases 1 (config-dhcpd-static_leases:1) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix

no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 2 (config-dhcpd-static_leases:2) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 3 (config-dhcpd-static_leases:3) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 4 (config-dhcpd-static_leases:4) level commands</b>	

clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 5 (config-dhcpd-static_leases:5) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 6 (config-dhcpd-static_leases:6) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix

no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 7 (config-dhcpd-static_leases:7) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static leases 8 (config-dhcpd-static_leases:8) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-dhcpd level.
ip address <IP address>	Sets the reserved IP address.
ipv6 address <ipv6 address/prefix>	Sets the reserved IPv6 address. IPv6 addresses are written in eight groups of four hexadecimal digits separated by colons, such as 2001:0db8:85a3:0000:0000:8a2e:0370:7334 Network address ranges are written in CIDR notation. A network is denoted by the first address in the block (ending in all zeroes), a slash (/), and a decimal value equal to the size in bits of the prefix
no ip address	Clears the reserved IP address.
no ipv6 address	Clears the reserved IPv6 address.
no mac address	Removes the MAC Address.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
static leases <number>	Change to dhcpd static lease level.
write	Stores the current configuration in permanent memory.
<b>static route 1 (config-staticroute:1) level commands</b>	

clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 2 (config-staticroute:2) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 3 (config-staticroute:3) level commands</b>	
clrscrn	Clears the screen.

default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 4 (config-staticroute:4) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 5 (config-staticroute:5) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.



exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 6 (config-staticroute:6) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 7 (config-staticroute:7) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.

friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>static route 8 (config-staticroute:8) level commands</b>	
clrscrn	Clears the screen.
default metric	Restores the metric to default value.
exit	Exits to the config-gateway level.
friendly name <text>	Set the friendly name for static route. <text> = friendly name
gateway <text>	Sets the gateway for static route network.
interface <text>	Sets the route interface <text> = interface name
metric <number>	Sets the metric for static route. <number> = metric
network <text>	Sets the IP address and network mask for static route network.
no friendly name	Remove the friendly name
no gateway	Clears the gateway for static route network.
no interface	Clears the route interface. The WAN interface is used if no interface is specified.
no network	Clears the IP address for static route network.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables the static route.
state enable	Enables the static route.
static route <number>	Change to config gateway static route level.
write	Stores the current configuration in permanent memory.
<b>syslog (config-syslog) level commands</b>	
clrscrn	Clears the screen.
default local port	Clears the syslog local port.
default remote port	Restores the default syslog remote port.
default severity log level	Restores the default to no logging.

exit	Returns to the config level.
host <text>	Sets the address of the syslog recipient. <text> = IP address or name of the host.
local port <number>	Sets the syslog local port.
no host	Removes the address of the syslog recipient.
remote port <number>	Sets the syslog remote port. <number> = number of the remote port used when making a syslog connection.
severity log level alert	Log only Alert and more severe events.
severity log level critical	Log only Critical and more severe events.
severity log level debug	Log all events.
severity log level emergency	Log only Emergency events.
severity log level error	Log only Error and more severe events.
severity log level information	Log only Information and more severe events.
severity log level none	No logging.
severity log level notice	Log only Notice and more severe events.
severity log level warning	Log only Warning and more severe events.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays the syslog statistics.
state disable	Disables syslog logging.
state enable	Enables syslog logging.
write	Stores the current configuration in permanent memory.
<b>telnet (config-cli-telnet) level commands</b>	
authentication disable	No password required for Telnet users.
authentication enable	Challenges the Telnet user with a password.
clrscrn	Clears the screen.
default max sessions	Restores the default maximum allowed concurrent incoming Telnet sessions.
default port	Restores the default local port to the Telnet server.
exit	Exits to the CLI level.
max sessions <number>	Sets the maximum allowed concurrent incoming Telnet sessions. <number> = number of sessions.
port <number>	Sets the local port that the Telnet server uses. <number> = local port number.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Displays the Telnet statistics.
state disable	Disables the Telnet Server.
state enable	Enables the Telnet Server.
write	Stores the current configuration in permanent memory.
<b>terminal 1 (config-terminal:1) level commands</b>	
break duration <milliseconds>	Sets how long a break should last when it is being sent to the line. <milliseconds> = number of milliseconds.
clrscrn	Clears the screen.
default break duration	Restores the break duration to the default value (500 ms).

default terminal type	Sets the default terminal type, 'UNKNOWN'.
echo disable	Disables echoing of characters received on the line back to the line.
echo enable	Enables echoing of characters received on the line back to the line.
exit	Exits to the configuration level.
exit connect menu disable	On the login connect menu, removes the menu item allowing the user to exit to the CLI.
exit connect menu enable	On the login connect menu, inserts the menu item allowing the user to exit to the CLI.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
login connect menu disable	Disables the login connect menu, so a user will get the CLI immediately after logging in.
login connect menu enable	Enables the login connect menu, so a user will get the menu rather than the CLI immediately after logging in.
no send break	Removes the configured send break character.
preview connect menu	Shows the layout of the connect menu with current settings.
send break <control>	Sets the optional send break character. <text> = the character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
terminal type <text>	Sets the terminal type.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>terminal 2 (config-terminal:2) level commands</b>	
break duration <milliseconds>	Sets how long a break should last when it is being sent to the line. <milliseconds> = number of milliseconds.
clrscrn	Clears the screen.
default break duration	Restores the break duration to the default value (500 ms).
default terminal type	Sets the default terminal type, 'UNKNOWN'.
echo disable	Disables echoing of characters received on the line back to the line.
echo enable	Enables echoing of characters received on the line back to the line.
exit	Exits to the configuration level.
exit connect menu disable	On the login connect menu, removes the menu item allowing the user to exit to the CLI.
exit connect menu enable	On the login connect menu, inserts the menu item allow-

	ing the user to exit to the CLI.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
login connect menu disable	Disables the login connect menu, so a user will get the CLI immediately after logging in.
login connect menu enable	Enables the login connect menu, so a user will get the menu rather than the CLI immediately after logging in.
no send break	Removes the configured send break character.
preview connect menu	Shows the layout of the connect menu with current settings.
send break <control>	Sets the optional send break character. <text> = the character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
terminal type <text>	Sets the terminal type.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>terminal 3 (config-terminal:3) level commands</b>	
break duration <milliseconds>	Sets how long a break should last when it is being sent to the line. <milliseconds> = number of milliseconds.
clrscrm	Clears the screen.
default break duration	Restores the break duration to the default value (500 ms).
default terminal type	Sets the default terminal type, 'UNKNOWN'.
echo disable	Disables echoing of characters received on the line back to the line.
echo enable	Enables echoing of characters received on the line back to the line.
exit	Exits to the configuration level.
exit connect menu disable	On the login connect menu, removes the menu item allowing the user to exit to the CLI.
exit connect menu enable	On the login connect menu, inserts the menu item allowing the user to exit to the CLI.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
login connect menu disable	Disables the login connect menu, so a user will get the CLI immediately after logging in.
login connect menu enable	Enables the login connect menu, so a user will get the menu rather than the CLI immediately after logging in.
no send break	Removes the configured send break character.
preview connect menu	Shows the layout of the connect menu with current set-

	tings.
send break <control>	Sets the optional send break character. <text> = the character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
terminal type <text>	Sets the terminal type.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>terminal network (config-terminal:network) level commands</b>	
break duration <milliseconds>	Sets how long a break should last when it is being sent to the line. <milliseconds> = number of milliseconds.
clrscrn	Clears the screen.
default break duration	Restores the break duration to the default value (500 ms).
default terminal type	Sets the default terminal type, 'UNKNOWN'.
echo disable	Disables echoing of characters received on the line back to the line.
echo enable	Enables echoing of characters received on the line back to the line.
exit	Exits to the configuration level.
exit connect menu disable	On the login connect menu, removes the menu item allowing the user to exit to the CLI.
exit connect menu enable	On the login connect menu, inserts the menu item allowing the user to exit to the CLI.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
login connect menu disable	Disables the login connect menu, so a user will get the CLI immediately after logging in.
login connect menu enable	Enables the login connect menu, so a user will get the menu rather than the CLI immediately after logging in.
no send break	Removes the configured send break character.
preview connect menu	Shows the layout of the connect menu with current settings.
send break <control>	Sets the optional send break character. <text> = the character. The character may be input as text, control, decimal, or hex. A control character has the form <control>C. A decimal value character has the form \99. A hex value character has the form 0xFF.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
terminal <line>	Enters the configure-terminal level. <line> = number of the

	terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
terminal type <text>	Sets the terminal type.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>traps (config-snmp-traps) level commands</b>	
authentication password <text>	Sets password used for authentication for traps.
authentication protocol md5	Uses MD5 for authentication for traps.
authentication protocol sha	Uses SHA for authentication for traps.
clrscrn	Clears the screen.
community <text>	Sets the SNMP trap community string. <text> = name of the trap community string to be set.
default authentication protocol	Restores to default SNMPv3 authentication method: MD5 for traps.
default community	Restores the SNMP trap community to default: public
default primary destination port	Restores the primary SNMP trap host port to default: 162.
default privacy protocol	Restores to default SNMPv3 privacy encryption method: DES for traps.
default secondary destination port	Restores the secondary SNMP trap host port to default: 162.
default security	Restores to default SNMPv3 security method: Authentication, No Privacy for traps.
default version	Restores to default SNMP version v2c for traps.
exit	Exits to the next higher level.
no authentication password	Clears authentication password for traps.
no primary destination	Deletes the primary SNMP trap host.
no privacy password	Clears privacy password for traps.
no secondary destination	Deletes the secondary SNMP trap host.
no username	Clears SNMPv3 username for traps.
primary destination <text>	Sets the primary SNMP trap host. <text> = IP address or hostname of SNMP trap receiver.
primary destination port <number>	Sets the primary SNMP trap host port.
privacy password <text>	Sets password used for privacy encryption for traps.
privacy protocol aes	Uses AES for privacy encryption for traps.
privacy protocol des	Uses DES for privacy encryption for traps.
secondary destination <text>	Sets the secondary SNMP trap host. <text> = IP address or hostname of SNMP trap receiver.
secondary destination port <number>	Sets the secondary SNMP trap host port.
security authentication and privacy	Authentication and Privacy for traps.
security authentication but no privacy	Authentication, No Privacy for traps.
security no authentication and no priv	No Authentication, No Privacy for traps.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.

username <text>	Sets SNMPv3 username for traps.
version snmpv1	Uses SNMPv1 for traps.
version snmpv2c	Uses SNMPv2c for traps.
version snmpv3	Uses SNMPv3 for traps.
write	Stores the current configuration in permanent memory.
<b>trusted authorities (ssl-auth) level commands</b>	
add	Adds an Authority Certificate.
clrscrn	Clears the screen.
exit	Exits to the ssl level.
no intermediate authority <cert>	Removes an Intermediate Authority Certificate. <cert> = index displayed by "show authority" command.
no trusted authority <cert>	Removes a Trusted Authority Certificate. <cert> = index displayed by "show authority" command.
show	Displays Authority Certificate Information.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>tunnel 1 (tunnel:1) level commands</b>	
accept	Enters the accept level for this tunnel.
auto show statistics	show connection statistics
clear counters	Zeros all tunnel counters
clrscrn	Clears the screen.
connect	Enters the connect level for this tunnel.
disconnect	Enters the disconnect level for this tunnel.
exit	Exits to the enable level.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
modem	Enters the modem level for this tunnel.
no clear counters	Unzeros all tunnel counters
packing	Enters the packing level for this tunnel.
serial	Enters the serial level for this tunnel.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>tunnel 2 (tunnel:2) level commands</b>	
accept	Enters the accept level for this tunnel.
auto show statistics	show connection statistics
clear counters	Zeros all tunnel counters
clrscrn	Clears the screen.



connect	Enters the connect level for this tunnel.
disconnect	Enters the disconnect level for this tunnel.
exit	Exits to the enable level.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
modem	Enters the modem level for this tunnel.
no clear counters	Unzeros all tunnel counters
packing	Enters the packing level for this tunnel.
serial	Enters the serial level for this tunnel.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>tunnel 3 (tunnel:3) level commands</b>	
accept	Enters the accept level for this tunnel.
auto show statistics	show connection statistics
clear counters	Zeros all tunnel counters
clrscrn	Clears the screen.
connect	Enters the connect level for this tunnel.
disconnect	Enters the disconnect level for this tunnel.
exit	Exits to the enable level.
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
modem	Enters the modem level for this tunnel.
no clear counters	Unzeros all tunnel counters
packing	Enters the packing level for this tunnel.
serial	Enters the serial level for this tunnel.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	show connection statistics
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>unreachable host detection (config-vpn-unreachable_host_detection:1) level commands</b>	
clrscrn	Clears the screen.

default max tries	Restores the default connection error threshold.
default ping interval	Restores the default ping interval.
exit	Exits to the next higher level.
host <text>	Sets the host name. <text> = host name to Ping.
max tries <number>	Sets the connection error threshold. If <pings> attempts go unanswered, the device will restart the VPN connection.
no host	Clears the host name.
ping interval <minutes>	Sets the ping interval.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>usb 1 (usb-line:1) level commands</b>	
auto show statistics	Continuously displays line statistics.
clear line counters	Sets the serial counters to zero.
clrscrn	Clears the screen.
command mode always	Sets the current line to always be in command mode.
command mode echo serial string disable	Disables user-defined serial boot string to be echoed in the CLI.
command mode echo serial string enable	Enables user-defined serial boot string to be echoed in the CLI.
command mode serial string	Enables user to enter a custom string at boot time to enter command mode.
command mode serial string <string>	Sets a string that can be entered at boot time to enter command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF. Within {} specify decimal milliseconds time delay.
command mode signon message <string>	Sets a sign-on message that is sent from the serial port when the device boots and when the line is in command mode. <string> = text with possible binary characters. Within [] use binary decimal up to 255 or hex up to 0xFF.
command mode wait time <milliseconds>	Sets boot-up wait time for command mode serial string. <milliseconds> = wait time.
default line mode	Restores the default usb line mode.
default threshold	Restores the factory default threshold.
exit	Exits to the enable level
gap timer <milliseconds>	Sets the gap timer in milliseconds. If some data has been received, it will be forwarded after this time since the last character.
interface usb-cdc-acm	Sets the usb line interface to USB-CDC-ACM.
kill session	Kills command mode session on the Line
line <line>	Enters the line level. <line> = number of the line (serial port) to be configured.
line mode ethernet device	Sets the usb line to ethernet device mode.
line mode host	Sets the usb line to host mode.
line mode serial device	Sets the usb line to serial device mode.
name <text>	Sets the name for this usb line.

no clear line counters	Restores the serial counters to the aggregate values.
no command mode	Disables command mode for the current line.
no command mode signon message	Clears the signon message displayed at boot time and when entering command mode.
no gap timer	Removes the gap timer, so forwarding depends on the usb line speed.
no name	Removes the name of this usb line.
protocol none	Uses no protocol on the usb line.
protocol tunnel	Applies Modbus RTU protocol on the usb line.
show	Displays the current status.
show command mode	Shows the command mode settings for the current line.
show history	Displays the last 20 commands entered during the current CLI session.
show statistics	Shows the line statistics.
show usb line	Displays the current configuration.
state disable	Disables the usb line so data cannot be sent/received.
state enable	Enables the usb line so data can be sent/received.
terminal <line>	Enters the configure-terminal level. <line> = number of the terminal line (serial port) to be configured.
terminal network	Enters the configure-terminal level for the network.
threshold <bytes>	Sets the threshold in bytes. After this many bytes are received, they are forwarded without delay.
tunnel <line>	Enters the tunnel level. <line> = number of the tunnel line (serial port) to be configured.
usb <line>	Enters the usb level. <line> = number of the line (usb port) to be configured.
write	Stores the current configuration in permanent memory.
<b>usb0 link state change (config-action:usb0 link state change) level commands</b>	
clrscrn	Clears the screen.
default delay	Resets alarm processing delay to its default value.
delay <seconds>	Sets the delay in processing the alarm. Alarm actions will not be executed if the cause is corrected within this time.
email	Enters the next lower level.
exit	Exits to the config alarm level.
ftp put	Enters the next lower level.
http post	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays statistics.
snmp trap	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>user management (config-user-management) level commands</b>	
admin password <text>	Sets the CLI login password. Password must be 4 to 15 characters and contain combination of the following characters: uppercase letters, lowercase letters, numbers, symbols (punctuation marks). Put double quotes around the password.

admin username <text>	Sets the CLI login username.
clrscrn	Clears the screen.
create role <role name>	Create a new role <role name> = role name.
create user <user name> <password> <role name>	Create a new user <user name> = user name. <password> = user password. Password must be 4 to 15 characters and contain combination of the following characters: uppercase letters, lowercase letters, numbers, symbols (punctuation marks). Put double quotes around the password. <role name> = user role name.
default admin password	Restores the default CLI login password.
default admin username	Restores the default CLI login username.
delete role <role name or instance>	Delete existing role <role name or instance> = role name or instance.
delete user <user name or instance>	Delete existing user <user name or instance> = user name or instance.
edit role <role name or instance>	Change to config-user-management-roles level.
edit user <user name or instance>	Change to config-user-management-users level.
exit	Returns to the config level.
show	Displays the current configuration.
show actions	List Actions to the console
show configuration groups	List Configuration Record group names to the console
show history	Displays the last 20 commands entered during the current CLI session.
show roles	Show existing roles
show users	Show existing users
write	Stores the current configuration in permanent memory.
<b>virtual ip 1 (config-virtual-interface:1) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-gateway level.
ip address <text>	Sets the Virtual IP address.
lan ip address <text>	Sets the LAN IP address.
name <text>	Sets the name. <text> = name.
no ip address	Clears the Virtual IP address.
no lan ip address	Clears the LAN IP address.
no name	Clears the name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables Virtual IP instance.
state enable	Enables Virtual IP instance.
write	Stores the current configuration in permanent memory.
<b>virtual ip 2 (config-virtual-interface:2) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-gateway level.
ip address <text>	Sets the Virtual IP address.
lan ip address <text>	Sets the LAN IP address.
name <text>	Sets the name. <text> = name.

no ip address	Clears the Virtual IP address.
no lan ip address	Clears the LAN IP address.
no name	Clears the name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables Virtual IP instance.
state enable	Enables Virtual IP instance.
write	Stores the current configuration in permanent memory.
<b>virtual ip 3 (config-virtual-interface:3) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the config-gateway level.
ip address <text>	Sets the Virtual IP address.
lan ip address <text>	Sets the LAN IP address.
name <text>	Sets the name. <text> = name.
no ip address	Clears the Virtual IP address.
no lan ip address	Clears the LAN IP address.
no name	Clears the name.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
state disable	Disables Virtual IP instance.
state enable	Enables Virtual IP instance.
write	Stores the current configuration in permanent memory.
<b>vpn 1 (config-vpn:1) level commands</b>	
aggressive mode disable	Disables aggressive mode.
aggressive mode enable	Enables aggressive mode.
authentication mode psk	Sets the authentication mode to PSK.
authentication mode rsa	Sets the authentication mode to RSA.
authentication mode xauth	Sets the authentication mode to XAUTH.
clrscrn	Clears the screen.
connection name <text>	Sets the name. <text> = name.
connection type host to host	Sets the connection type to Host to Host.
connection type host to subnet	Sets the connection type to Host to Subnet.
create new local rsa key	Create new Local RSA key
default authentication mode	Restores the default authentication mode.
default connection type	Restores the default connection type.
default esp authentication	Restores the default ESP authentication.
default esp dh group	Restores the default ESP DH Group.
default esp encryption	Restores the default ESP encryption.
default ike authentication	Restores the default IKE authentication.
default ike dh group	Restores the default IKE DH Group.
default ike encryption	Restores the default IKE encryption.
default ike life time	Restores the default IKE lifetime.
default ikev2	Restores the default IKEv2 setting (Permit).

default interface	Restores the default interface.
default local key length	Restores the default local RSA key length.
default remote peer type	Restores the default remote peer type.
default sa life time	Restores the default SA lifetime.
default type	Restores the default transport type.
esp authentication any	Sets ESP authentication to any.
esp authentication md5	Sets ESP authentication to MD5.
esp authentication sha1	Sets ESP authentication to SHA1.
esp authentication sha2	Sets ESP authentication to SHA2.
esp dh group any	Sets ESP DH Group to any.
esp dh group dh1	Sets ESP DH Group to DH1.
esp dh group dh14	Sets ESP DH Group to DH14.
esp dh group dh2	Sets ESP DH Group to DH2.
esp dh group dh5	Sets ESP DH Group to DH5.
esp encryption 3des	Sets ESP encryption to 3DES.
esp encryption aes128	Sets ESP encryption to AES-128.
esp encryption aes256	Sets ESP encryption to AES-256.
esp encryption any	Sets ESP encryption to any.
esp encryption des	Sets ESP encryption to DES.
exit	Exits to the config level.
ike authentication any	Sets IKE authentication to any.
ike authentication md5	Sets IKE authentication to MD5.
ike authentication sha1	Sets IKE authentication to SHA1.
ike authentication sha2	Sets IKE authentication to SHA2.
ike dh group any	Sets IKE DH Group to any.
ike dh group dh1	Sets IKE DH Group to DH1.
ike dh group dh14	Sets IKE DH Group to DH14.
ike dh group dh2	Sets IKE DH Group to DH2.
ike dh group dh5	Sets IKE DH Group to DH5.
ike encryption 3des	Sets IKE encryption to 3DES.
ike encryption aes128	Sets IKE encryption to AES-128.
ike encryption aes256	Sets IKE encryption to AES-256.
ike encryption any	Sets IKE encryption to any.
ike encryption des	Sets IKE encryption to DES.
ike life time <hours>	Sets the IKE lifetime.
ikev2 insist	Sets the IKEv2 setting to Insist, signifying that the device will only accept and receive IKEv2 and IKEv1 negotiations will be rejected.
ikev2 never	Sets the IKEv2 setting to Never, signifying no IKEv2 negotiation should be transmitted or accepted.
ikev2 permit	Sets the IKEv2 setting to Permit, signifying no IKEv2 should be transmitted, but will be accepted if the other ends initiates to us with IKEv2.
ikev2 propose	Sets the IKEv2 setting to Propose, signifying that the device will permit IKEv2, and also use it as the default to initiate.
interface <text>	Sets the interface. <text> = interface.

local id <text>	Sets the local id. <text> = local id.
local key length <bits>	Sets the local RSA key length.
local next hop <text>	Sets the local next hop. <text> = local next hop.
local subnet <text>	Sets the local subnet. <text> = local subnet.
mode configuration disable	Disables mode configuration.
mode configuration enable	Enables mode configuration.
nat traversal disable	Disables NAT traversal.
nat traversal enable	Enables NAT traversal.
no connection name	Clears the name.
no local id	Clears the local id.
no local next hop	Clears the local next hop.
no local subnet	Clears the local subnet.
no password	Clears the password.
no psk	Clears the pre shared key.
no remote endpoint	Clears the remote end point.
no remote id	Clears the remote id.
no remote key	Clears the remote key.
no remote next hop	Clears the remote next hop.
no remote rsa key	Clears the remote RSA key.
no remote subnet	Clears the remote subnets.
no username	Clears the username.
password <text>	Sets the password. <text> = password.
perfect forward secrecy disable	Disables perfect forward secrecy (PFS).
perfect forward secrecy enable	Enables perfect forward secrecy (PFS).
psk <text>	Sets the pre shared key (PSK). <text> = pre shared key.
remote endpoint <text>	Sets the remote end point. <text> = remote end point.
remote id <text>	Sets the remote id. <text> = remote id.
remote key <text>	Sets the remote key. <text> = remote key.
remote next hop <text>	Sets the remote next hop. <text> = remote next hop.
remote peer type cisco	Sets the remote peer type to cisco.
remote peer type ietf	Sets the remote peer type to ietf.
remote rsa key <text>	Sets the remote RSA key. <text> = remote RSA key.
remote subnet <text>	Sets the remote subnets. <text> = remote subnets.
sa life time <hours>	Sets the SA lifetime.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show local rsa key	Show Local RSA key
show logs	Show logs
show status	Show VPN status
state disable	Disables VPN tunnel.
state enable	Enables VPN tunnel.
type transport	Sets the transport type to transport.
type tunnel	Sets the transport type to tunnel.
unreachable host detection	Enters the next lower level.

username <text>	Sets the username. <text> = username.
vpn <instance>	Change to vpn level.
write	Stores the current configuration in permanent memory.
<b>wep (config-profile-security-wep:default_infra2) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
authentication open	Sets the type of authentication to open.
authentication shared	Sets the type of authentication to shared.
clrscrn	Clears the screen.
default authentication	Restores the authentication type to the default value (open).
default key size	Restores the key size to the default value (40 bits).
default tx key index	Restores the tx key index to the default value (1).
exit	Exits to the next higher level.
key <instance>	Enters the next lower level. Specify the instance for the next lower level.
key size 104	Sets the key size to 104 bits.
key size 40	Sets the key size to 40 bits.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
tx key index 1	Selects key 1 for transmission encryption.
tx key index 2	Selects key 2 for transmission encryption.
tx key index 3	Selects key 3 for transmission encryption.
tx key index 4	Selects key 4 for transmission encryption.
write	Stores the current configuration in permanent memory.
<b>wlan profiles (config-profiles) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
clrscrn	Clears the screen.
create <profile name>	Create a new profile name
delete <profile name>	Delete existing profile by name
edit <profile name>	View or edit an existing profile
exit	Exits to the config level.
show	Show existing profile names
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
<b>wlan0 link state change (config-action:wlan0 link state change) level commands</b>	
clrscrn	Clears the screen.
default delay	Resets alarm processing delay to its default value.
delay <seconds>	Sets the delay in processing the alarm. Alarm actions will not be executed if the cause is corrected within this time.
email	Enters the next lower level.
exit	Exits to the config alarm level.



ftp put	Enters the next lower level.
http post	Enters the next lower level.
show	Displays the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
show status	Displays statistics.
snmp trap	Enters the next lower level.
write	Stores the current configuration in permanent memory.
<b>wpx (config-profile-security-wpx:default_infra2) level commands</b>	
apply wlan	Try out WLAN settings without saving them to Flash. If the settings do not work, when you reboot the device, it will still have the original settings.
authentication 802.1x	Sets the authentication method to IEEE 802.1x.
authentication psk	Sets the authentication method to PSK.
clrscrn	Clears the screen.
credentials <text>	Selects the RSA certificate by configured name.
default authentication	Restores the authentication method to the default value (PSK).
default eap-ttls option	Restores the eap-ttls protocol options to the default (EAP-MSCHAP V2).
default fast option	Restores the FAST authentication protocol option to the default (MD5).
default fast provisioning	Restores the FAST provisioning to the default (Authenticated).
default ieee 802.1x	Restores the default IEEE 802.1x protocol, EAP-TTLS.
default peap option	Restores the PEAP authentication protocol options to the default (EAP-MSCHAP V2).
default pmf	Restores PMF to the default value (Disabled).
eap-ttls option chap	Sets the EAP-TTLS authentication protocol option to CHAP.
eap-ttls option eap-md5	Sets the EAP-TTLS authentication protocol option to EAP-MD5.
eap-ttls option eap-mschapv2	Sets the EAP-TTLS authentication protocol option to EAP-MSCHAP V2.
eap-ttls option mschap	Sets the EAP-TTLS authentication protocol option to MSCHAP.
eap-ttls option mschapv2	Sets the EAP-TTLS authentication protocol option to MSCHAP V2.
eap-ttls option pap	Sets the EAP-TTLS authentication protocol option to PAP.
exit	Exits to the next higher level.
fast option gtc	Sets the FAST authentication protocol option to GTC.
fast option md5	Sets the FAST authentication protocol option to MD5.
fast option mschapv2	Sets the FAST authentication protocol option to MSCHAPv2.
fast provisioning authenticated	Sets the FAST provisioning option to Authenticated.
fast provisioning both	Sets the FAST provisioning option to Both.
fast provisioning unauthenticated	Sets the FAST provisioning option to Unauthenticated.
ieee 802.1x eap-tls	Sets the IEEE 802.1x protocol to EAP-TLS.

ieee 802.1x eap-ttls	Sets the IEEE 802.1x protocol to EAP-TTLS.
ieee 802.1x fast	Sets the IEEE 802.1x protocol to FAST.
ieee 802.1x leap	Sets the IEEE 802.1x protocol to LEAP.
ieee 802.1x peap	Sets the IEEE 802.1x protocol to PEAP.
inner credentials <text>	Selects the RSA certificate by configured name.
key <hexadecimal>	Sets WPAx key. Each byte is represented by two adjacent hex digits. Bytes may run together or be separated by optional punctuation: 123ABC "12 3A BC" 12,3A,BC 12.3a.bc 12:3a:bc Note that quotes must enclose the value if it contains spaces.
key text <text>	Sets WPAx key. Each byte is represented by a single character. Note that quotes must enclose the value if it contains spaces.
no credentials	Clears the RSA certificate name.
no inner credentials	Clears the RSA certificate name.
no key	Removes WPAx key.
no password	Clears the password.
no username	Clears the user name.
password <text>	Sets the value for the password. <text> = put quotes around the characters (max 63).
peap option eap-md5	Sets the PEAP authentication protocol option to EAP-MD5.
peap option eap-mschapv2	Sets the PEAP authentication protocol option to EAP-MSCHAP V2.
peap option eap-tls	Sets the PEAP authentication protocol option to EAP-TLS.
pmf disabled	Disables PMF.
pmf optional	Makes PMF optional.
pmf required	Makes PMF required.
show	Shows the current configuration.
show history	Displays the last 20 commands entered during the current CLI session.
username <text>	Sets the value of the username. <text> = value in characters (max 63).
validate certificate disable	Server certificate will not be verified.
validate certificate enable	Server certificate will be verified.
write	Stores the current configuration in permanent memory.
<b>xml (xml) level commands</b>	
clrscrn	Clears the screen.
exit	Exits to the enable level.
show history	Displays the last 20 commands entered during the current CLI session.
write	Stores the current configuration in permanent memory.
xcr dump	Dump XML configuration to the console
xcr dump <group list>	Dump specified XML configuration to the console
xcr export <file>	Save XML configuration to a file
xcr export <file> <group list>	Save specified XML configuration to a local file
xcr import <file>	Load XML configuration from a local file
xcr import <file> <group list>	Load specified XML configuration from a local file

xcr list	List XML Configuration Record groups to the console
xsr dump	Dump XML Status Records to the console
xsr dump <group list>	Dump specified XML Status Records to the console
xsr export <file>	Save XML Status Record to a file
xsr export <file> <group list>	Save specified XML Status Record to a local file
xsr list	List XML Status Record groups to the console